



# ENCL-400-WP and ENCL-SPPS-WP Replacement Weather Protected Enclosures

Rated for Outdoor Environment Wet Location

-40 °C to +66 °C (-40 F to 151 F)

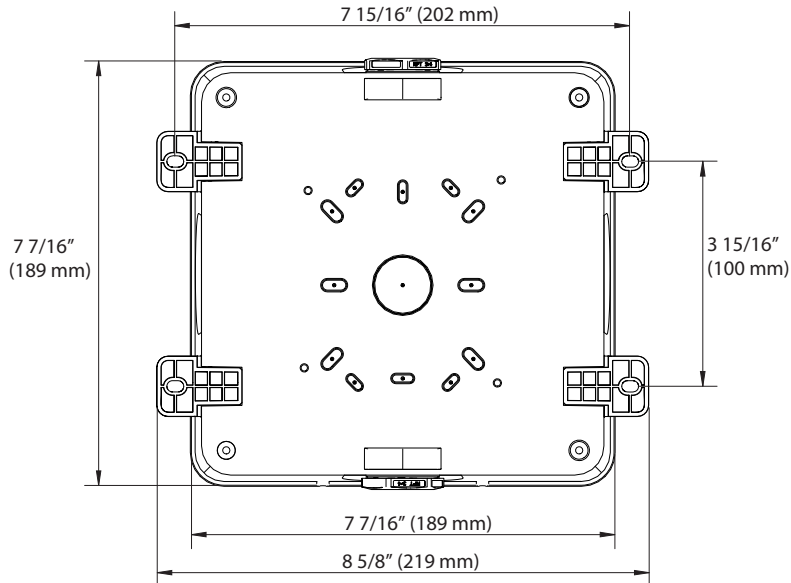 


Figure 1 Bottom view

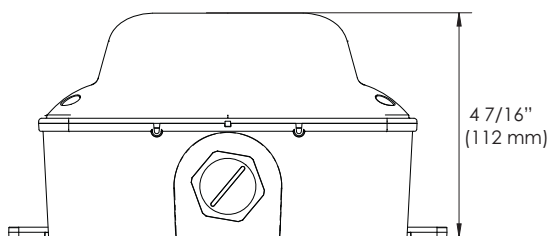 


Figure 2 ENCL-SPPS-WP side view

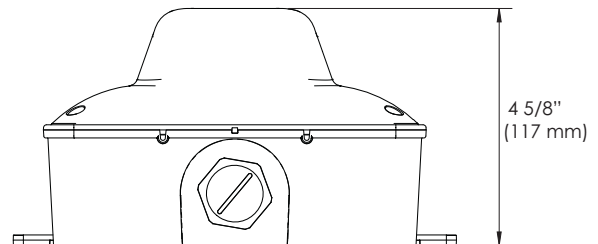 


Figure 3 ENCL-400-WP side view

 
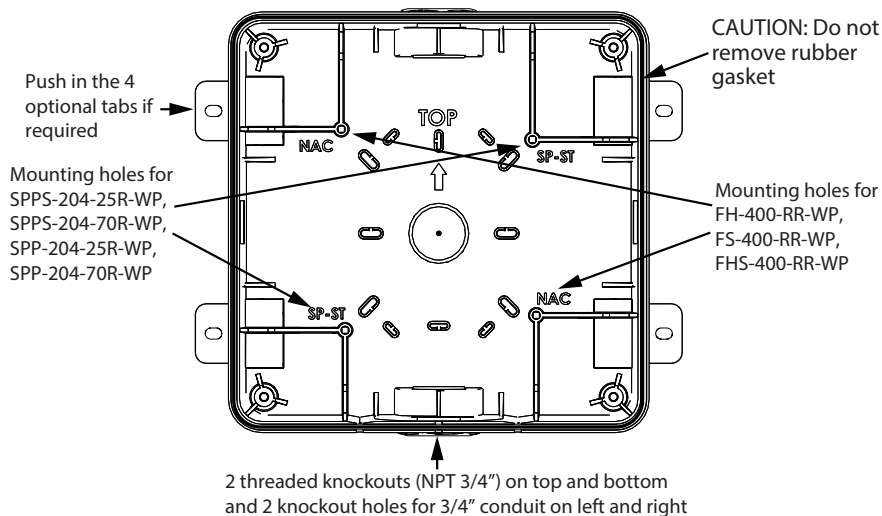 


Figure 4 Top view without cover

Mounting

Mount ENCL-400-WP directly on the wall or ceiling depending on the model of horn, strobe or horn/strobe. When mounting on the wall, mount the enclosure with the word TOP at the top, and mount the device with the MGC nameplate at the top. For more information, see LT-6511 400-WP Series Weather Protected Notification Appliances.

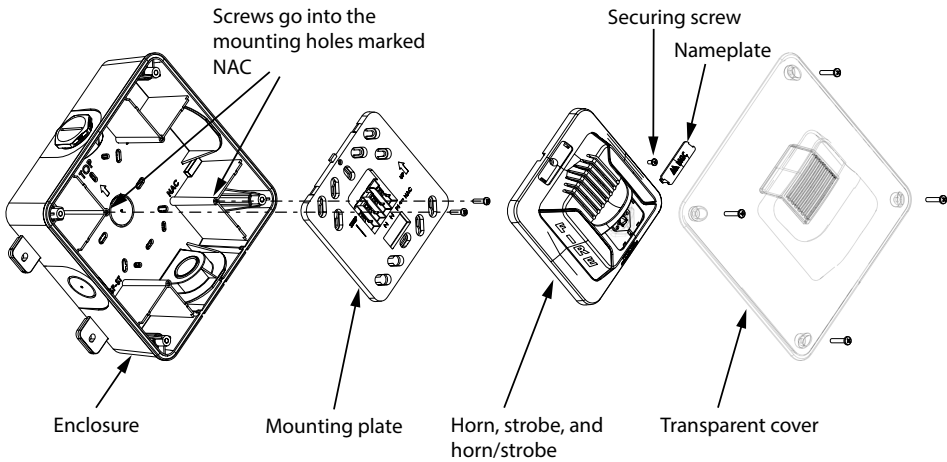 


- 1. Before mounting, disassemble the unit as show in figure 5.
- 2. Secure the enclosure directly to the wall or ceiling.
- 3. Attach the mounting plate to the holes marked NAC in the enclosure with the 2 included screws.
- 4. Snap the horn, strobe, or horn/strobe on to the mounting plate and secure it with the securing screw. Snap the nameplate over the screw.
- 5. Secure the transparent cover over the assembly with the 4 included screws.

Figure 5 Mount the horn, strobe, and horn/strobe in ENCL-400-WP

Mount ENCL-SPPS-WP directly on the wall or ceiling depending on the model of speaker or speaker/strobe. When mounting on the wall, mount the enclosure with the word TOP at the top, and mount the device with the MGC nameplate at the bottom.

Note: Select the candela setting prior to installing the device in the mounting plate.

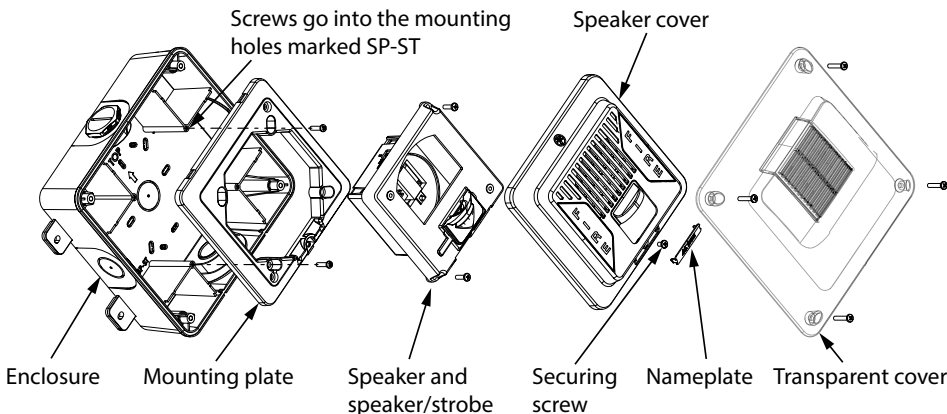

- 1. Before mounting, disassemble the unit as shown in figure 6.
- 2. Secure the enclosure directly to the wall or ceiling.
- 3. Attach the mounting plate to the 2 holes marked SP-ST on the enclosure with the 2 included mounting screws.
- 4. Attach the speaker or speaker/strobe to the mounting plate with the 2 included screws.
- 5. Attach the top cover with the included securing screw and snap the nameplate over the securing screw.
- 6. Secure the transparent cover over the assembly with the 4 included screws.

Figure 6 Mount the speaker and speaker/strobe in enclosure

Table 1 ENCL-400-WP is a replacement enclosure for the following models

FH-400-RR-WP	Weather protected wall/ceiling mounted horn, red
FS-400-RR-WP	Weather protected wall mounted strobe, red
FHS-400-RR-WP	Weather protected wall mounted horn/strobe, red

Table 2 ENCL-SPPS-WP is a replacement enclosure for the following models

SPPS-204-25R-WP	Weather protected wall mounted speaker/strobe 25V, red
SPPS-204-70R-WP	Weather protected wall mounted speaker/strobe 70V, red
SPP-204-25R-WP	Weather protected wall/ceiling mounted speaker 25V, red
SPP-204-70R-WP	Weather protected wall/ceiling mounted speaker 70V, red