

MR-2350/2351

Fire Alarm Control Panels



Table of Contents

1.0	Industry Canada and FCC Notice	9
1.1	Notice for all MR-2350 Series Built-In UDACTs Sold in Canada	9
1.1.1	Industry Canada Notice	9
1.1.2	Notice for all MR-2350 Series Built-in UDACTs Sold in the U.S.A.	9
1.1.3	FCC Notice	10
2.0	Introduction	11
2.1	Features	11
3.0	Conventions	13
3.1	Circuits	13
3.2	Zone/Group	13
3.3	Display Points	13
3.4	Wiring Styles	13
4.0	System Components	14
4.1	Panel Models	14
4.2	Output Class A Converter: Four Circuits	15
4.3	Polarity Reversal/City Tie	15
4.4	Remote Annunciator	16
4.5	Smart Relay Module	16
4.6	MR-2312-ATR Ancillary Annunciator	16
4.8	Analog/Addressable Devices	18
5.0	Mechanical Installation	19
5.1	Installing the Enclosures	19
6.0	Installing Adder Modules	21
6.1	Cable and Jumper Connections for Main Board and Adder Modules	22
6.2	Connectors and Jumpers on the Main Fire Alarm Board	23
6.3	MR-2300-NC4 Output Class A Converter Adder Module	23
6.4	Polarity Reversal and City Tie Module (Model MR-2300-PR)	24
6.4.1	MR-2300-PR Cable and Jumper Settings	24
6.5	RAX-332 Display Adder Module	24

7.0	Circuits and Devices	25
7.1	Addressable/Analog Devices	25
7.2	Analog Devices	26
7.2.1	Drift Compensation	26
7.2.2	Auto Test	26
7.3	Contact Inputs	26
7.4	Contact Outputs	26
8.0	Field Wiring	27
8.1	Main Fire Alarm Board Field Wiring	27
8.2	Loop Isolators	28
8.3	Loop Operation	29
8.4	Indicating (Powered Output) Circuits	29
8.5	Indicating Circuit Wiring	29
8.6	Dialer Wiring	31
8.8	Auxiliary Power Supplies	34
8.8.1	Aux 2 Resettable Auxiliary Power (supervised, regulated)	34
8.8.2	Auxiliary Supply (supervised, regulated)	34
8.8.3	Unfiltered Supply (unsupervised, unregulated)	34
8.9	Power Supply Connections	35
8.10	Connecting to a DSC SurGuard Receiver	36
9.0	System Checkout	37
9.1	Before turning the power “ON”	37
9.2	Power-up procedure	37
10.0	Troubleshooting	38
11.0	Indicators, Controls and Operations	39
11.1	Common Indicators	40
11.1.1	Buzzer	40
11.1.2	AC On LED	40
11.1.3	Common Alarm LED	40
11.1.4	Common Supervisory LED	40
11.1.5	Common Trouble LED	40
11.1.6	CPU Fault LED	41
11.1.7	Ground Fault LED	41
11.1.8	System Reset LED	41
11.1.9	Signal Silence LED	41
11.1.10	Fire Drill LED	41

11.1.11	ALM/SUP/TBL/BLDG AUDIBLE SIL (Buzzer Silence) LED	41
11.1.12	AUTOMATIC ALARM SIGNAL CANCEL LED (Acknowledge) LED	41
11.1.13	General Alarm LED	41
11.1.14	Lamp Test LED	42
11.1.15	Battery/Charger Trouble LED	42
11.1.16	LEDs 1 to 32 for MR-2351 Model Only	42
11.1.17	RAX-332 LEDs 33 to 64 for MR-2351 Model Only	42
11.2	Common Controls	42
11.2.1	LCD Display	42
11.2.2	Cursor Buttons	42
11.2.3	Enter Button	42
11.2.4	Cancel Button	42
11.2.5	Menu Button	43
11.2.6	Info Button	43
11.2.7	Signal Silence Button	43
11.2.8	Fire Drill Button	43
11.2.9	General Alarm Button	43
11.2.10	System Reset Button	43
11.2.11	AUTOMATIC ALARM SIGNAL CANCEL Button (Two Stage or PAS only)	44
11.2.12	Lamp Test Button	44
11.3	Single Stage Operation	44
11.4	Two-Stage Operation	45
11.5	Positive Alarm Sequence	46
11.6	Enabling or Disabling the Positive Alarm Sequence	47
11.7	Input Types	47
11.8	Output Types	50
11.9	Evacuation Codes	50
11.10	Initial Power-up Sequence	51
11.10.1	Status Display Mode	52
12.0	Remote Annunciator Operation	54
12.1	Conventional Annunciators (MR-2300 Series)	54
12.2	Supervision	54
12.3	Shared Display Annunciator (MR-2300-LCDW/R)	54
12.4	Supervision	54
13.0	Dialer Operation	55
13.1	Event Reporting	55
13.2	Telephone line supervision	55

14.0	Appendix A: Compatible Receivers	56
15.0	Appendix B: Reporting	57
16.0	Appendix C: Specifications	59
16.1	MR-2350/MR-2351 Series Specifications	59
16.2	MR-2350/MR-2351 System Modules and Annunciators	60
17.0	Appendix D: Power Supply and Battery Calculations	61
18.0	Warranty and Warning Information	63

List of Figures

Figure 1	BBX-1024DSR Installation Instructions and Dimensions	20
Figure 2	Installation of Adder Modules	21
Figure 3	Main Fire Alarm Board Cable Connectors and Jumper Locations	22
Figure 4	MR-2300-NC4 Output Class A Converter Adder Modules	23
Figure 5	Polarity Reversal and City Tie Module	24
Figure 6	Addressable Loop Wiring - Class B or Style 4	27
Figure 7	Addressable Loop Wiring -Class A or Style 6	28
Figure 8	Indicating Circuit – Class B or Style Y Wiring	30
Figure 9	Indicating Circuit –Class A or Style Z Wiring	31
Figure 10	Dialer Wiring	32
Figure 11	Polarity Reversal and City Tie Module Terminal Connection	33
Figure 12	Supervision Of Auxiliary Supplies	34
Figure 13	Main Power Supply Connections	35
Figure 14	Connecting an MR-2350/2351 FACP to a DSC Surguard System Receiver	36
Figure 15	LCD Display, LED indicators and control buttons	39
Figure 16	Evacuation and Alert Codes	51

List of Tables

Table 1	MR-2350/MR-2351 Series Comparison Chart	15
Table 2	Output Class A Converter	15
Table 3	Polarity Reversal/City Tie	15
Table 4	Remote Annunciator	16
Table 5	Smart Relay Module	16
Table 6	MR-2312-ATR Ancillary Annunciator	16
Table 7	Panel Components and System Accessories	17
Table 8	Analog/Addressable Devices	18
Table 9	Settings permitted in CAN/ULCS527	27
Table 10	Loop Wiring	28
Table 11	Maximum Wiring Distances	29
Table 12	Troubleshooting	38
Table 13	Input Types	47
Table 14	Output Types	50
Table 15	Ademco Contact-ID - MR-2350/MR-2351 Series Event Codes	57
Table 16	Security Industries Association SIA-DCS - MR-2350/MR-2351 Series Event Codes	58
Table 17	MR-2350/MR-2351 Series Specifications	59
Table 18	MR-2350/MR-2351 System Modules and Annunciators	60
Table 19	MR-2350 Batteries	62

1.0 Industry Canada and FCC Notice

1.1 Notice for all MR-2350 Series Built-In UDACTs Sold in Canada

Secutron's **MR-2350 SERIES BUILT-IN UDACT Communicator** described in this manual is listed by Underwriters Laboratories Canada (ULC) for use in slave application in conjunction with a Listed Fire Alarm Control Panel under Standard ULC-S527-11 (Standard for Control Units for Fire Alarm Systems) and CAN/ULC-S561-13 (Standard for Installation and Services for Fire Signal Receiving Centres and Systems). These Communicators should be installed in accordance with this manual; the Canadian / Provincial / Local Electrical Code; and/or the local Authority Having Jurisdiction (AHJ).

1.1.1 Industry Canada Notice

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alteration made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the **Earth Ground** connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This is necessary both for proper operation and for protection.



Attention: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

1.1.2 Notice for all MR-2350 Series Built-in UDACTs Sold in the U.S.A.



Notes: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Note: The Label Identification Number for this product is US:1M8AL02BFX350. The 02B represents the REN without a decimal point (e.g., 02B is a REN of 0.2B). For earlier products, the REN is separately shown on the label.

Secutron's **MR-2350 SERIES BUILT-IN UDACT Digital Communicator** described in this manual is listed by Underwriters Laboratories Inc. (ULI) for use in slave application in conjunction with a Listed Fire Alarm Control Panel under Standard 864 (Control Units for Fire Protective Signalling Systems). These Communicators comply with the National Fire Protection Association (NFPA) performance requirements for UDACTs and should be installed in accordance with NFPA 72 Chapter 4 (Supervising Station Fire Alarm System). These Communicators should be installed in accordance with this manual; the National Electrical Code (NFPA 70); and/or the local Authority Having Jurisdiction (AHJ).

1.1.3 FCC Notice

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the telco transformer of this equipment is a label that contains, among other information, a product identifier in the format US:1M8AL02BFX350. If requested, this number must be provided to the telephone company. This equipment is capable of seizing the line. This capability is provided in the hardware.

Type of Service: The **Communicator** is designed to be used on standard device telephone lines. It connects to the telephone line by means of a standard jack called the USOC RJ-11C (or USOC FJ45S). Connection to telephone company provided coin service (central office implemented systems) is prohibited. Connection to party lines service is subject to state tariffs.

Telephone Company Procedures: The goal of the telephone company is to provide you with the best service it can. In order to do this, it may occasionally be necessary for them to make changes in their equipment, operations or procedures. If these changes might affect your service or the operation of your equipment, the telephone company will give you notice, in writing, to allow you to make any changes necessary to maintain uninterrupted service.

In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number (REN); both of these items are listed on the equipment label. The sum of all of the REN's on your telephone lines should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on a given line.

If Problems Arise: If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of this disconnection. If advance notice is not feasible, you will be notified as soon as possible. When you are notified, you will be given the opportunity to correct the problem and informed of your right to file a complaint with the FCC. Contact your telephone company if you have any questions about your phone line. In the event repairs are ever needed on the Communicator, they should be performed by Secutron, Inc. or an authorized representative of Secutron, Inc. For information contact Secutron, Inc. at the address and phone numbers shown on the back page of this document.

2.0 Introduction

Secutron's **MR-2350** Series Analog/Addressable Fire Alarm Control Panel provides a loop for 60 or 126 input and output devices, four supervised Class B or A (Style Y or Z) indicating circuits, a full range of auxiliary power supplies, and extensive common control features via its integrated LCD display and push button console. Many of its features are fully configurable utilizing the built-in configuration capability via the front panel display and switches. The panels are available with an integrated dialer/modem, and is available with an internal LED display for up to 64 points (32 standard). Optional modules include Polarity Reversal and City Tie, RAX-332 LED Display Adder, and Class A Converter for indicating circuits. Semi-flush or surface mountable enclosures can be used for retrofits and on new installations. This manual covers the following panels:



Note: Installation of the MR-2350 Series Fire Alarm Control panel should be in accordance with Canadian Electrical Code Part 1, ULC-S524 installation of Fire Alarm System, National Electrical Code NFPA 70 and NFPA 72. Final acceptance subject to the Local Authority Having Jurisdiction (AHJ).

MR-2350-60D-RA 60 pt addressable FACP(with dialer)

MR-2351-LD-RA 126 pt addressable FACP(with dialer)

2.1 Features

- The MR-2350 panels support a loop of 60 or 126 analog devices analog devices, including thermal, ion, photo detectors, and contact input and output devices. Drift compensation and Auto Test features are provided for analog devices.
- Four Power Limited Class B (Style Y) indicating circuits. Each indicating circuit may be configured as Class A (Style Z) using an output Class A converter adder module. Each indicating circuit may be configured as silenceable signal, non-silenceable signal, silenceable strobes, non-silenceable strobes, or relay output. The audible signal may be Steady, Temporal Code, California Code, or March Time. The system provides the necessary protocols to sync strobes from major manufacturers.
- Two-stage, alarm verification, and waterflow retard operations available.
- Configurable Signal Silence Inhibit, Auto Signal Silence, Two-Stage Operation, and One-Man Walk Test. For Canadian installations, disable Auto Signal Silence.
- Subsequent Alarm, Supervisory, and Trouble operation.
- provides a regulated, supervised 21.1VDC auxiliary power supply @ 500mA max.; unfiltered, unsupervised 24V FWR power supply @ 1.7 A max and a resettable auxiliary power supply @ 300mA max.
- Relay Contacts for Common Alarm, Common Supervisory and Common Trouble all non-disconnectable and Auxiliary Alarm Relay (disconnectable).
- Output for remote trouble indicator and Buzzer (RTI).
- RS-485 Interface for MR-2300-LCDW/R Annunciators, RA-1000 Series Remote Annunciators and SRM-312 Smart Relay Modules (max total of 7 remote annunciators).
- Optional Module for City Tie and Polarity Reversal Signaling.
- Extensive transient protection
- With built-in UDACT (Digital Alarm Communicator Transmitter)

- Extensive and easy configuration of the panel via the integrated LCD display and keypad
- Remote dial up (with built-in UDACT) for event log checking and/or configuration changing

3.0 Conventions

3.1 Circuits

Refers to a physical electrical interface for the analog loop, indicating signals or relays, and common alarm, supervisory, and trouble relay outputs.

3.2 Zone/Group

Is a logical concept for a Fire Alarm Protected Area, and will consist of at least one Circuit. Groups are used extensively in the MR-2350 to facilitate annunciation of multiple input and output points on the 32 (up to 64) LED display and to facilitate bypassing of inputs and outputs.

3.3 Display Points

The MR-2350 provides an LCD display to annunciate the status of the system and connected devices. Display points may be assigned to LEDs during configuration to groups of inputs or outputs. There are two LEDs for every display point: one single color (amber) and one dual color (red/amber).

3.4 Wiring Styles

The analog loop can be connected in Class B (Style Y) or Class A (Style D) configurations. Changing the indicating circuits to Class A requires an MR-2300-NC4 adder board which will convert four indicating zones from Class B (Style Y) circuits to Class A (Style Z). This is done without reducing the number of circuits.

4.0 System Components

4.1 Panel Models



MR-2350-60D-RA



MR-2351-LD-RA

All MR-2350 Series Panels have the following features:

- Multi-zone fire alarm control panel with 2 x 20 LCD display.
- Style Y or Style D analog loop(s).
- Four Power Limited Class B (Style Y) indicating circuits (max 1.7 Amps each - 5 Amps total).
- Dedicated common alarm, supervisory, trouble, and auxiliary alarm relays.
- Additional RAX-332 Display Adders may be used to provide 32 annunciation points per adder for a maximum of 64 points for the MR-2351-LD-RA model.
- An optional MR-2300-NC4 Class A converter module may be used to convert the indicating circuits to Class A (Style Z).
- Additional outputs include connections for a RTI remote trouble indicator, MR-2300-PR Reverse Polarity Module, an RS-485 bus for connection of up to seven MR-2300-LCDW/Rs, MR-2312-SR12 smart relay modules and MR-2300 Series annunciators.
- Auxiliary power is available in the form of 24V FWR unfiltered and unsupervised, 24VDC filtered and regulated, and resettable auxiliary power supply.

See the table below for the specifics of each panel.

Table 1 MR-2350/MR-2351 Series Comparison Chart

Model	Number of devices	Number of analog loops	2 line UDACT Digital Communicator (y/n)	Door Color	Number of 32 point LED Displays	Max Number of LED Displays	Dual Loop Adder (y/n)
MR-2350-60D-RA	60	1	y	red	n/a	n/a	n
MR-2351-LD-RA	126	1	y	red	1	2	n


Some models may not be available in all markets. Verify with your local distributor.

i

Note: The Model MR-2350-60D-RA panel **DOES NOT** recognize any devices with addresses higher than 60.


4.2 Output Class A Converter: Four Circuits

Table 2 Output Class A Converter

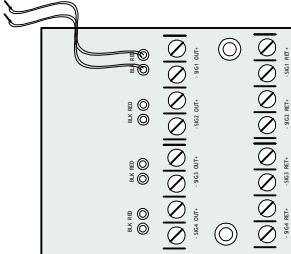	Model	Description
	MR-2300-NC4	Output Class A converter module (four circuits)


4.3 Polarity Reversal/City Tie

Table 3 Polarity Reversal/City Tie

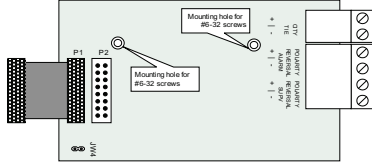	Model	Description
	MR-2300-PR	Polarity Reversal and/or City Tie Module

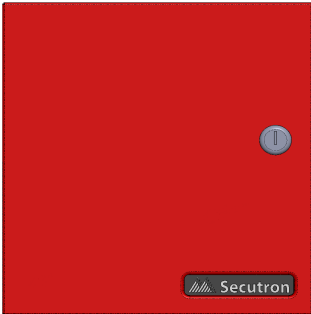
4.4 Remote Annunciator

Table 4 Remote Annunciator

	Model	Description
	MR-2300LCDW	Remote Annunciator module, LCD display, white painted box
	MR-2300LCDR	Remote Annunciator Module, LCD display, red painted box

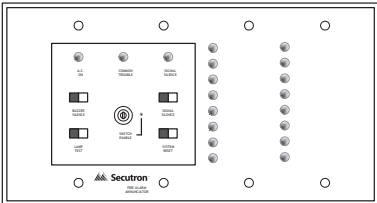
4.5 Smart Relay Module

Table 5 Smart Relay Module

	Model	Description
	MR-2312-SR12	Smart Relay Module (12 relays) with red enclosure

4.6 MR-2312-ATR Ancillary Annunciator

Table 6 MR-2312-ATR Ancillary Annunciator

	Model	Description
	MR-2312-ATR	16 Zone ancillary annunciator

4.7 Panel Components and System Accessories

Table 7 Panel Components and System Accessories

MODEL NO.	DESCRIPTIONS
ALC-252	252 Point Dual Loop Addressable Adder
RAX-332	32 Zone Internal Display Adder (for MR-2351 only)
MR-2306-ATR	8 LED Remote Annunciator
RAM-1016/TZ	Remote Annunciator with 16 bi-colored (red and yellow) LEDs. TZ version has 32 yellow LEDs for trouble indication.
RAM-1032/TZ	Remote Annunciator with 32 bi-colored (red and yellow) LEDs. TZ version has 32 yellow LEDs for trouble indication.
RAX-1048/TZ	Remote Annunciator with 48 bi-colored (red and yellow) LEDs. TZ version has 48 yellow LEDs for trouble indication.
MGD-32	Graphic Annunciator
AGD-048	Graphic Annunciator Adder Driver Board
MR-2300T	Remote Trouble Indicator, Buzzer and LED
MMX-BB-1001(R)	Enclosure for one annunciator, white. R version is red.
MMX-BB-1002(R)	Enclosure for two annunciators, white. R version is red.
MMX-BB-1003(R)	Enclosure for three annunciators, white. R version is red.
MMX-BB-1008(R)	Enclosure for eight annunciators, white. R version is red.
MMX-BB-1012(R)	Enclosure for twelve annunciators, white. R version is red.
MP-300SN	End-of-line resistor plate, 3.9K ohm
MMX-BC-160R	External Battery Cabinet, red.

4.8 Analog/Addressable Devices

Table 8 Analog/Addressable Devices

Description	Secutron Model	Summit Model
Photoelectric Smoke Detector	MRI-3100	SIP-200
* Multi-sensor (photoelectric with supplemental rate-of-rise heat sensor)	MRI-3200	SIM-200
Heat Detector	MRI-3300	SIH-200
Bases	Secutron Model	Summit Model
4 inch Standard Base	MRI-2000	SIB-4
6 inch E-Z Fit Base	MRI-2001	SIB-6
6 inch Base with Relay	MRI-2001R	SIB-6R
6 inch Base with Sounder		SIB-6S
6 inch Base with Temporal Tone Sounder	MRI-2001HT	SIB-6TH
Ancillary Modules	Secutron Model	Summit Model
Priority Monitor Module	MRI-100P	SIM-100P
Mini Priority Monitor Module	MRI-101P	SIM-101P
Single Relay Output Module (1 Form C Contacts, 2 Gang Mount)	MRI-100R	
Supervised Control Module	MRI-100S	SIM-100S
Isolator c/w Mounting Base	MRI-100X (Kit) 100XH (Isolator) 100XB (Base)	SIM-100X(Kit) 100XH (Isolator) 100XB (Base)
Addressable Duct Detectors	Secutron Model	Summit Model
Photoelectric Duct Smoke Detector (UL Listed)	MRI-DH3100	SIDH-200P
Photoelectric Duct Smoke Detector with relay (UL Listed)	MRI-DH-3100R	SIDH-200PR
Addressable Pull Stations	Secutron Model	
Addressable Single Stage Dual Action Pull Station	MRM-710IDU	SPS-202ID

* Unit employs an integral heat sensor; however it must not be used as a regular heat detector. Refer to the product data sheet for detailed functionality, operation and application.

Manual configuration for the MRI-3200 is NOT PERMITTED. This device must be configured via the AUTO CONFIG.

5.0 Mechanical Installation

5.1 Installing the Enclosures

The MR-2350 and MR-2351 Fire Alarm Panels come complete with enclosure (backbox, chassis, deadfront and door). The BBX-1024DSR is suitable for flush or surface mounting with a built-in trim ring. To surface mount the enclosure, use the four mounting holes in the backbox and the screws provided. To flush mount, use the dimension minus the trim ring as a guide to the size required in the wall. Refer to Figure 1.

The BBX-1024DSR is suitable for flush or surface mounting with a built-in trim ring.

Dimensions of Enclosure (minus built-in trim ring)	14 1/2" x 4 1/4" x 26"
Distance between horizontal mounting screws	12"
Distance between vertical mounting screws	23.5"
Complete Dimensions of Enclosures (with trim ring)	16 3/4" x 5 1/2" x 28"

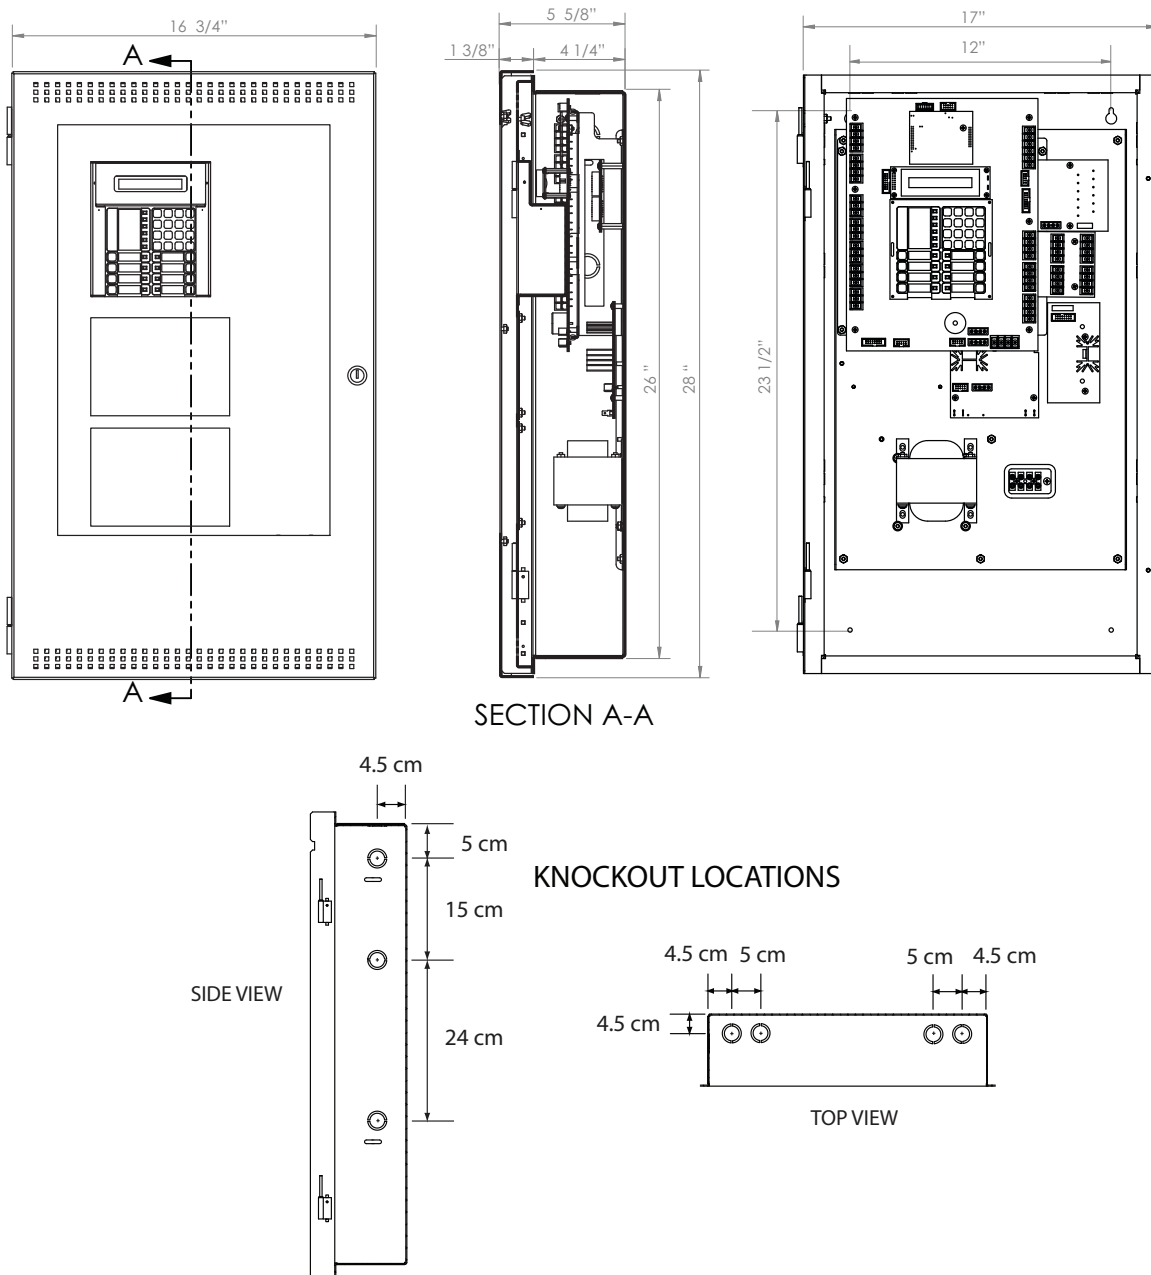



Figure 1 BBX-1024DSR Installation Instructions and Dimensions

For PC programming use UIMA Interface module not UL-864 or ULC-527 listed. Please refer to Document LT-929 for details

RS-232C PORT
For PC programming



P8	Cable from P1 of the MR-2300-PR Polarity Reversal and City Tie Module connects here. Otherwise not used.
P4	Cable from connector P1 of the RAX-332 Display Adder Module connects here. Otherwise not used.
JW1	On the Main Fire Alarm Module, this jumper is not used, open.
JW2	Remove this jumper if a remote annunciator is used.
JW3	Not used, open.
JW4	Not used, open.
JW5	Normally open. Place jumper here and power down (AC and batteries) and power back to restore Master Passcode. After reset, remove jumper and leave normally open.
JW6	Normally open to BLOCK <u>remote</u> configuration via modem. Place jumper here to ALLOW for remote configuration.
JW7	On the Main Fire Alarm Module, this jumper must be removed if a MR-2300-PR Polarity Reversal and City Tie Module is installed.
JW8	Not used, open.
JW9	Not used, open.
JW10	Not used, open.
JW11	Not used, open.
JW12	Not used, open.

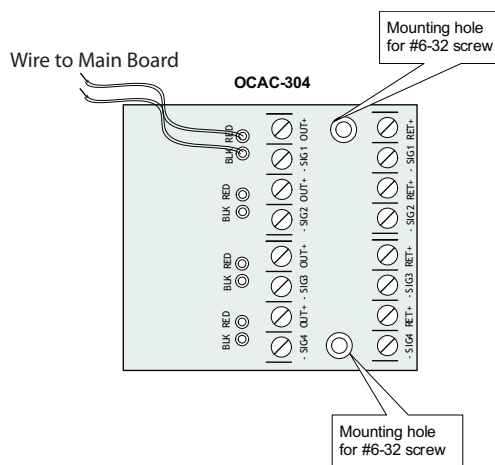

6.4 Polarity Reversal and City Tie Module (Model MR-2300-PR)

Mount the MR-2300-PR on the right side of the backbox with the two screws provided. Refer to Figures 5 and 2.

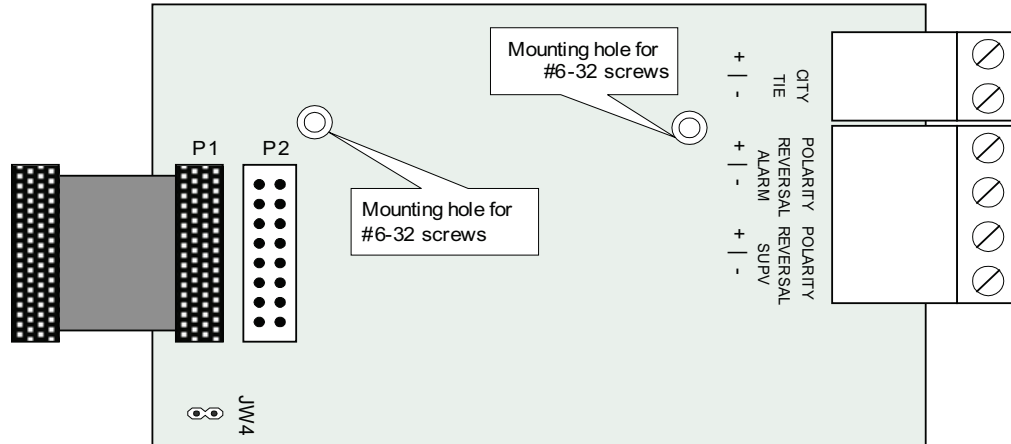


Figure 5 Polarity Reversal and City Tie Module

6.4.1 MR-2300-PR Cable and Jumper Settings

The following hardware configuration must be performed before installing the MR-2300-PR.

P1 Cable connects to **P8** (bottom left-hand corner) on the **Main Fire Alarm Board**.

JW4 Not used. Keep jumper intact.

The Alarm Transmit signal to the MR-2300-PR can be programmed to turn OFF when signal silence is active. This allows the City Tie Box to be manually reset. On subsequent alarms the silenceable signals will resound and the City Tie Box will be retriggered.

The Trouble Transmit signal to the MR-2300-PR can be programmed to delay AC power fail 0, 1, 2, or 3 hours if this is the only system trouble.

6.5 RAX-332 Display Adder Module

The RAX-332 Display Adder Module is used only with the MR-2351 Fire Alarm Panel. No jumpers or other physical configuration steps are required to install this second RAX-332 Display Adder Module. Remove the blank cover plate from the inner door and install the RAX-332 in the opening with the hardware provided. Disconnect main and standby power and connect the cable of the second RAX-332 into the open, remaining header of the existing RAX-332. The additional LEDs will be available for configuration as LEDs 33 to 64, when the system power is restored.

7.0 Circuits and Devices

7.1 Addressable/Analog Devices

The MR-2351 supports up to 3 loops of addressable/analog devices. The device loop can be used to connect up to 60, 126 or 378 analog devices and addressable input or output modules on an unshielded twisted pair (UTP). The devices must be compatible with the Secutron device protocol.

The loop interface software continuously supervises the devices on its loop against those found during configuration for the following conditions:

- device missing
- unconfigured device responding
- two or more devices responding to the same address
- wrong device type

A communication or addressing error on a device is reported as a trouble on the associated zone LED if configured.

The addressable loop can be configured for class A or B operation. "T-tapping" is allowed (Refer to device installation documentation for details). A short or open on the loop will activate the common trouble sequence with a latching trouble.

Devices on the loop have an optional LED which normally flashes when the device is polled and goes ON steady when the device is active (alarm for an input device or active for an output device). The flashing of the LED on polling for sensors can be suppressed during configuration. For input or output modules, the LED always flashes when polling. The software limits the maximum number of the devices which can have their LED turned ON when active to fifteen (15).

Certain devices are designed to support an optional external LED, which operates when the LED on the device is activated. Remote/external LEDs must NOT be used on this system. The panel can provide up to 350mA of current to the devices on the loop. A maximum line loss of 5 volts is permitted, so the loop distance, wire size, and maximum number of devices are limited by this constraint.

The devices should be installed using unshielded twisted pair (UTP). The total line drop on the loop must not exceed 5 volts at the last device. The calculations required to determine the maximum permissible loop wiring distance with various combinations of devices is relatively complicated, and when isolators are used, includes a consideration of device inrush currents which must not exceed 20mA for a single isolator. In no case should more than twenty devices be connected to a single isolator. To simplify the calculation process, please utilize the loop calculator program located on the Secutron website at <http://www.secutron.com> in order to determine maximum loop lengths, number of devices, and wire sizes etc.

It is also important to note that the device LEDs present a significant extra load on the loop which must be considered in calculating permissible loop lengths, battery capacities, etc. Please refer to the device Installation Instructions and other documentation provided with the addressable devices, bases, and isolators for further information. **The system will automatically limit the maximum number of device LEDs which can be illuminated to 15.**

7.2 Analog Devices

The system supports Secutron MRI-3000 Series photo, ion, multi-sensor and thermal (heat) type analog detectors, as well as contact input and output devices. The detectors may be configured as non-verified or verified alarm inputs. To determine an alarm condition, the system polls the analog device and compares the analog value against stored thresholds for pre-alarm and alarm conditions.

A range of thresholds is provided for each type of analog device (except for contact devices), corresponding to the agency approved range of threshold for a particular device type. Each device can be individually configured to a value in the range of threshold for “day time” and one for the “night time” or after hours operation; i.e. a device may be configured to a low sensitivity for “day time” and high sensitivity at “night time”. The day time threshold will be used unless the after hours operation is active.

7.2.1 Drift Compensation

The MR-2350/MR-2351 will automatically adjust for gradually increasing affects of dust and other accumulations of dirt in the detectors. It will adjust the thresholds to compensate for a detector going dirty according to the gradual change in the normal clean air value received. When it can no longer compensate for an increasingly dirty detector, a dirty detector trouble is indicated for that device.

7.2.2 Auto Test

Periodically each detector is commanded to return an alarm value to test its ability to alarm. If it fails the test, a trouble is indicated on that device. This trouble is latched until system reset.

7.3 Contact Inputs

Contact input modules on the addressable/analog device loop may be configured as any of the following input types:

- non-verified alarm inputs
- latching supervisory inputs
- trouble only inputs
- waterflow inputs
- monitor inputs
- remote switch inputs
- non-latching supervisory inputs

7.4 Contact Outputs

Contact output modules on the addressable/analog device loop may be configured as any of the following output types:

- signals
- strobes
- relay outputs

Analog devices may be installed with relay or sounder bases. The outputs of these bases are activated when the device active LED turns ON steady in response to an alarm. The command to activate the output is separate from the command that activates the LED and they are not subject to the same restrictions as the LED. Output modules configured as signals are not stroked by software at the current signal rate. When the system commands them to be either in alert or in evacuation, the panel will simply activate them continuously. It is possible to provide stroked operation by connecting the signal power to a conventional signal output which is stroking at the correct rate when the device is active. Depending on the device, the system can detect open and short troubles and report it as an output circuit trouble.

8.0 Field Wiring

Table 9 Settings permitted in CAN/ULCS527

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES			
This product incorporates field-programmable software. In order for the product to comply with the requirements in CAN/ULCS527, Standard for Control Units for Fire Alarm Systems, certain programming features or options must be limited to specific values or not used at all as indicated below.			
Program feature or option	Permitted in CAN/ULCS527? (Y/N)	Possible settings\methods	Settings permitted in CAN/ULCS527
System Reset and Signal Silence on MR-2306-AT/MR-2312-AT	N	<p>JW4 (Orange Wire) Intact = Buzzer silence & Lamp Test local function only. System Reset & Signal Silence are disabled.</p> <p>Cut Jumper (Orange Wire) to have all remote functions operate.</p>	Leave JW4 intact on MR-2306-AT/MR-2312-AT

8.1 Main Fire Alarm Board Field Wiring

Wire devices to the addressable loop as shown in Figure 6 for Class B (Style 4) or Figure 7 for Class A (Style 6). Refer to Table 10 for loop wire gauges. **Wire devices to addressable loops 2 and 3, if available, in the same manner.**

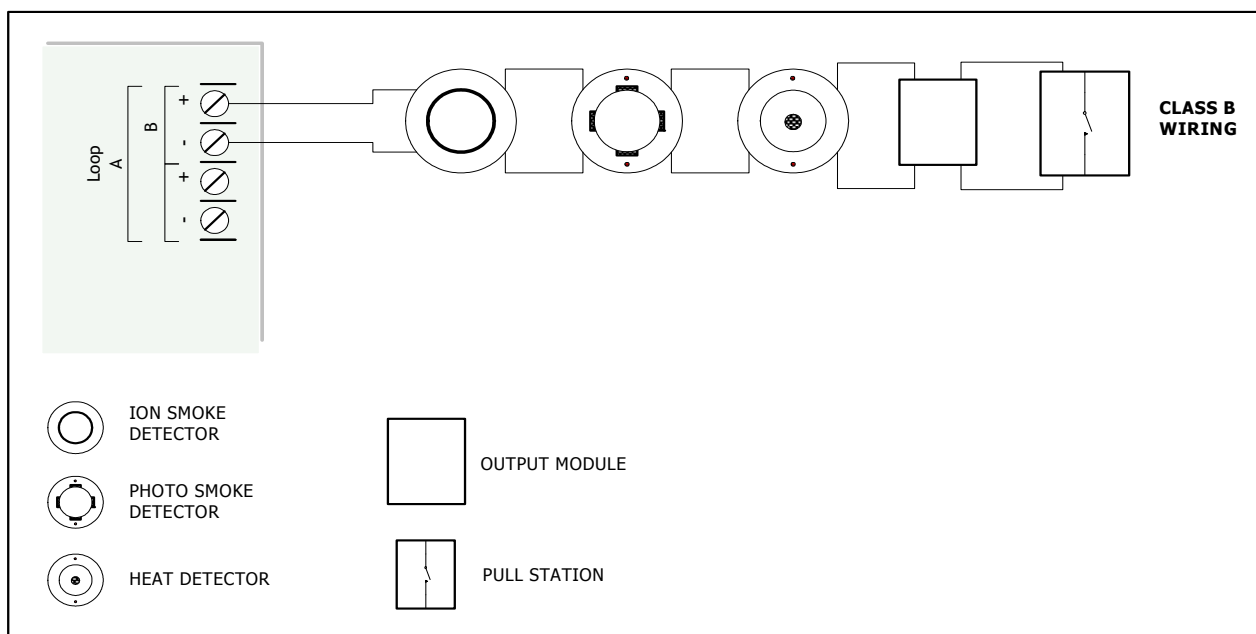


Figure 6 Addressable Loop Wiring - Class B or Style 4


Table 10 is for reference only and should not be used without a detailed loop calculation.

- Maximum Loop Current: 350 mA
- Maximum Loop Resistance: 35 subtract 0.2 Ohms per isolator.

- Maximum Loop Capacitance: 0.5 uF
- Maximum Number of Isolators is 40.

Table 10 Loop Wiring

UNSHIELDED TWISTED PAIR WIRE GAUGE	LOOP TOTAL (OUT AND IN) WIRE RUN	
	FEET	METRES
12	20,000	6098
14	15,942	4859
16	9960	3036
18	6265	1910

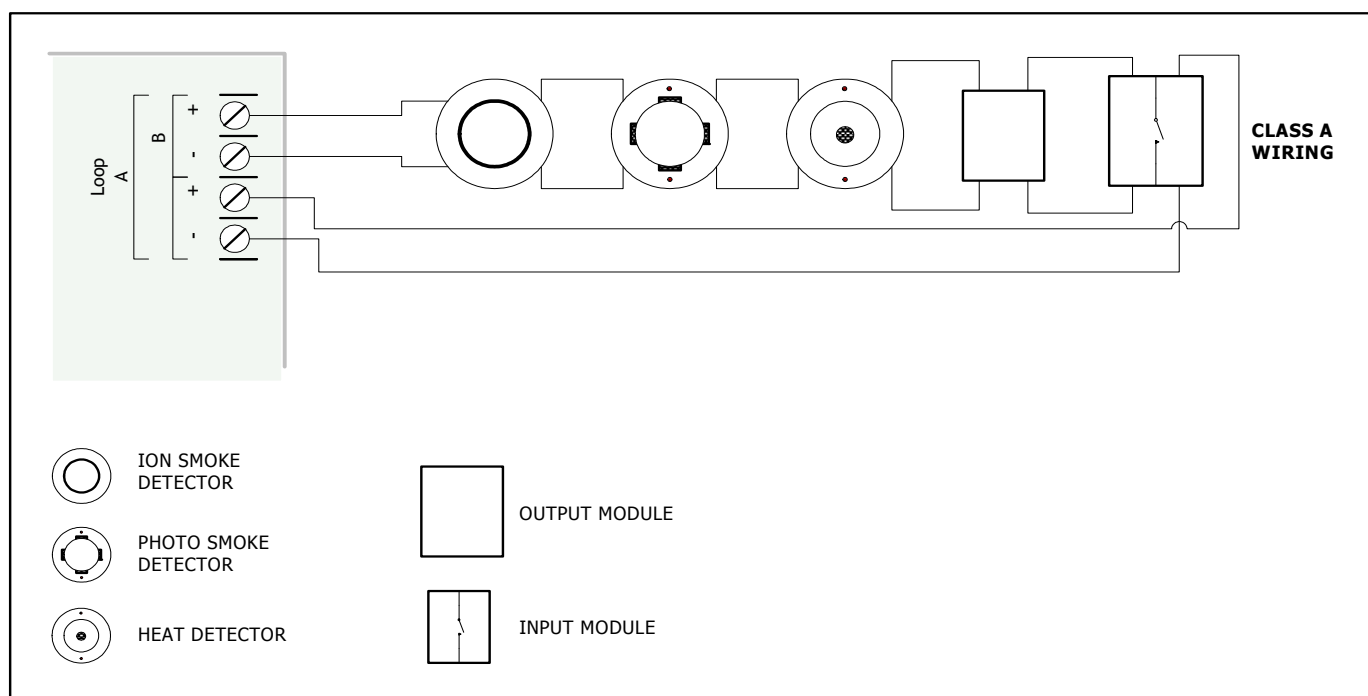
Figure 7 Addressable Loop Wiring -Class A or Style 6

8.2 Loop Isolators

To limit the number of addressable devices compromised by a short on the addressable loop, isolators (MRI-100X, 100XH, or 100XB) may be used to isolate the affect of the short circuit. If the impact of a short circuit must be limited to only one device, an isolating base must be used for each detector. A maximum of twenty devices can be connected between isolators, or between the panel and the first isolator, as long as the maximum in-rush current for the devices on one segment of the loop does not exceed 20mA. Refer to the installation instructions for addressable devices for additional details.

8.3 Loop Operation

When there is a short circuit on the Class A loop with isolators installed, the isolators isolate the shorted fault, the panel detects it as an open loop and generates an open loop trouble.

When a Class A loop is opened there may be a few missing devices reported by the panel which will be restored once the panel has established the Class A connection.



Note: When there is an "Open loop trouble" look for both open and shorts on the loop. As a guide line the isolators which are activated in response to a short will have their LED ON; look for the short between the two isolators with their LEDs ON.

8.4 Indicating (Powered Output) Circuits

Powered output circuits can be configured as signal, strobe or relay outputs. Powered output circuits are supervised while they are not active for both open circuits and shorts. The circuit will not actually be activated if there is a short trouble on the circuit. It will be activated if an open trouble is indicated. A circuit trouble activates the common trouble sequence as a non-latching trouble. Since open circuit supervision does not operate while the circuit is in alarm, if the circuit was in trouble before it was activated, it will still indicate trouble while active. The trouble condition will be re-evaluated when supervision resumes.

Output circuits configured as strobes can have sync protocol for synchronization if configured. Certain strobe and strobe/horns models of the following manufacturers are supported.

- All normal non-synchronized horns
- Faraday
- System Sensor
- Wheelock
- Gentex
- Secutron

When configured as normal, the output circuit is ON continuously when activated and does not use any sync protocol. When configured as non-silenceable strobes, the strobes cannot be silenced, but the horn can be silenced by pressing the 'signal silence' button

If the strobe is configured as silenceable strobe both the horn and the strobe are silenced (stopped) by pressing the 'signal silence' button

8.5 Indicating Circuit Wiring

The MR-2350 Series Addressable Fire Alarm Panel supports Class B (Style Y) and Class A (Style Z) wiring for its indicating circuits. Each circuit is supervised by a 3.9K End-of-Line resistor. Each indicating circuit provides up to 1.7 Amperes, total 5 Amperes of current maximum if no auxiliary power is used. Wire indicating circuits as in Figure 8 for Class B (Style y) or as in Figure 9 for Class A (Style Z).

Table 11 Maximum Wiring Distances

TOTAL SIGNAL LOAD	MAXIMUM WIRING RUN TO LAST DEVICE (ELR)								MAX. LOOP RESISTANCE
	18AWG		16AWG		14AWG		12AWG		
Amperes	ft	m	ft	m	ft	m	ft	m	Ohms


Table 11 Maximum Wiring Distances

TOTAL SIGNAL LOAD	MAXIMUM WIRING RUN TO LAST DEVICE (ELR)								MAX. LOOP RESISTANCE
	18AWG		16AWG		14AWG		12AWG		
0.06	2350	716	3750	1143	6000	1829	9500	2895	30
0.12	1180	360	1850	567	3000	915	4720	1438	15
0.30	470	143	750	229	1200	366	1900	579	6
0.60	235	71	375	114	600	183	950	289	3
0.90	156	47	250	76	400	122	630	192	2
1.20	118	36	185	56	300	91	470	143	1.5
1.50	94	29	150	46	240	73	380	115	1.2
1.70	78	24	125	38	200	61	315	96	1.0

i

Notes: For Class A wiring the resistance in ohms is multiplied by two.

Maximum voltage drop should not exceed 1.8 volts.

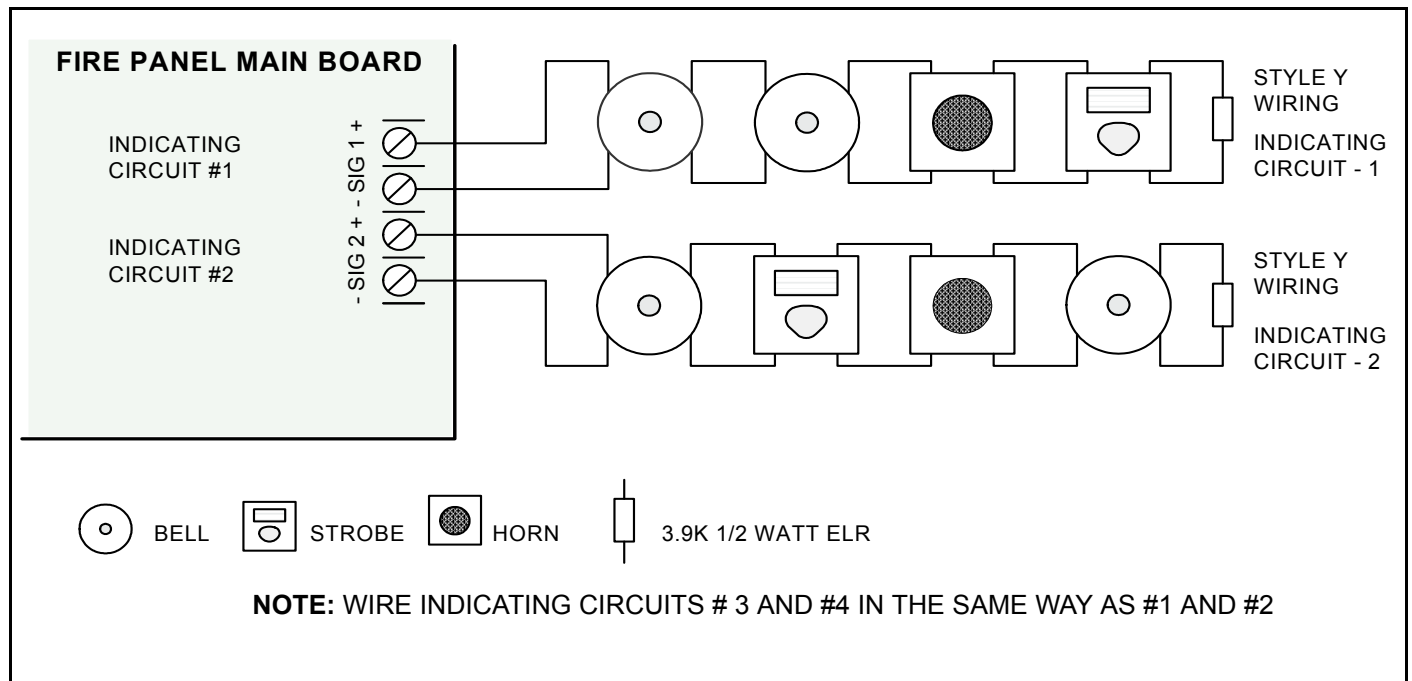
Figure 8 Indicating Circuit – Class B or Style Y Wiring

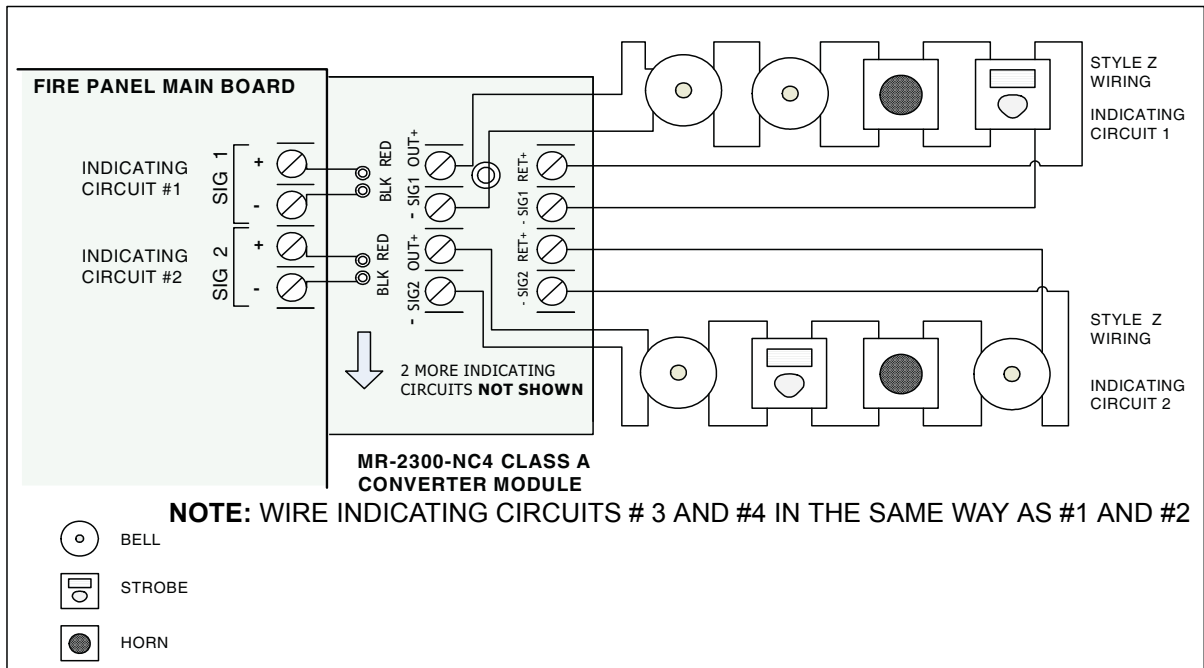


Figure 9 Indicating Circuit –Class A or Style Z Wiring

8.6 Dialer Wiring

Fire Alarm Panel models **MR-2350-60D-RA** and **MR-2351-LD-RA**, have a dialer on board and terminals marked Line 1 and Line 2 must be wired as shown in Figure 10 below. Terminals are located in the top left hand corner of the main fire alarm board, from the top down. Refer to Figure 3 for terminal locations.

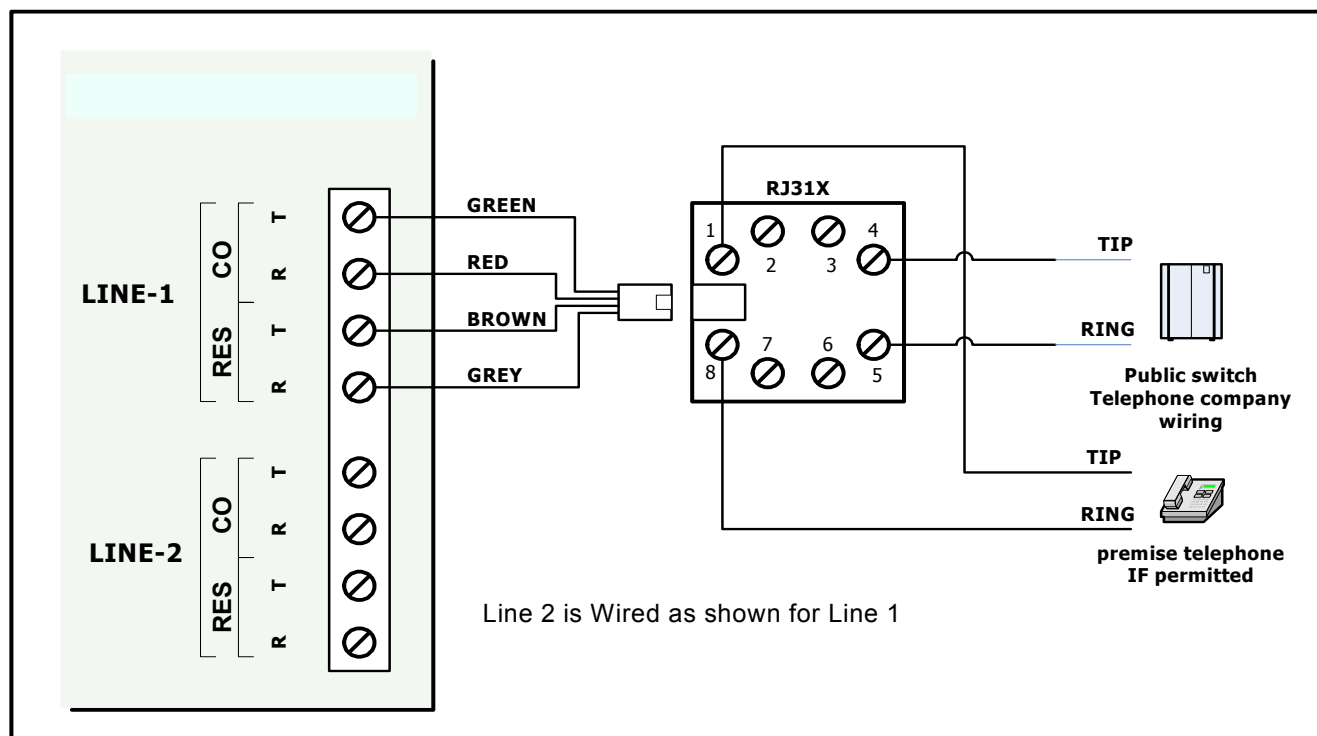


Figure 10 Dialer Wiring

Refer to section 13.0 Dialer Operation on page 55 and Appendix B: Reporting for more information regarding the built-in dialer.

8.7 Polarity Reversal and City Tie Module (MR-2300-PR) Wiring

Wire the MR-2300-PR Polarity Reversal and City Tie Module (if used) as shown in Figure 11 below. Power Limited cable type FPL, FPLR or FPLP must be used. For USA installation, the installer must use **Atlantic Scientific (Tel: 407-725-8000), Model #24544 Protective Device**, or similar **UL-Listed QVRG secondary protector**, as shown. For use in Canada, the Protective Device is not required but still recommended.

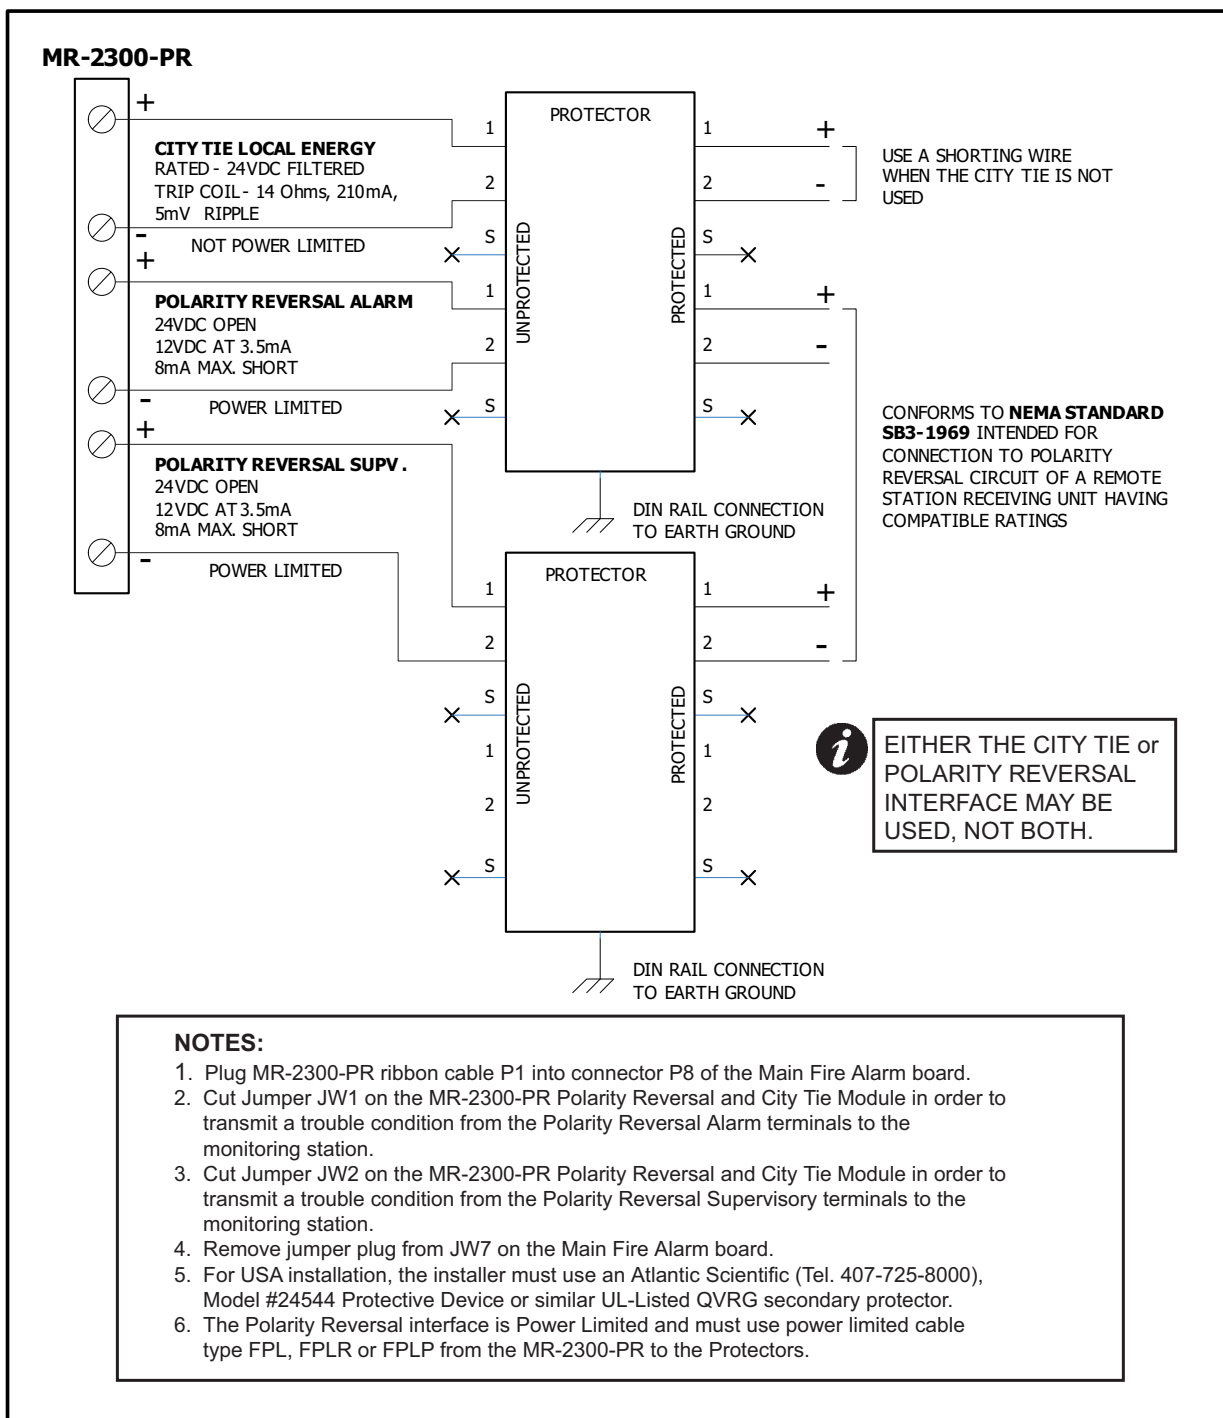


Figure 11 Polarity Reversal and City Tie Module Terminal Connection

8.8 Auxiliary Power Supplies

8.8.1 Aux 2 Resettable Auxiliary Power (supervised, regulated)

The AUX 2 resettable auxiliary power supply is supervised for shorts, therefore a short will disconnect the power until the “RESET” button is pressed. A trouble signal will be generated if there is a short. The circuit must be supervised for opens utilizing the End of Line Relay Model PAM-3 as shown in Figure 12. This supply is rated at 21.1VDC regulated/300mA max/1V voltage drop maximum.

8.8.2 Auxiliary Supply (supervised, regulated)

Supervised auxiliary power is used to power the remote annunciators and smart relay modules. This filtered circuit is supervised for shorts, therefore a short will disconnect the power until the “RESET” button is pressed. A trouble signal will be generated if there is a short. The circuit must be supervised for opens utilizing the End of Line Relay Model PAM-3 as shown in Figure 12. This supply is rated at 21.1VDC regulated/500mA max/1V voltage drop maximum.

8.8.3 Unfiltered Supply (unsupervised, unregulated)

This unregulated supply is not supervised. When required, it is recommended that the circuit be supervised for opens utilizing the (UL listed - S3403) End of Line Relay Model PAM-3 as shown in Figure 12. This supply is rated at 24VDC/1.7A max. If there is a short on this circuit, the auxiliary power does not recover automatically when the short is removed. The main power and the battery must be disconnected, then reconnected and the panel reset to re-establish the auxiliary power supply.

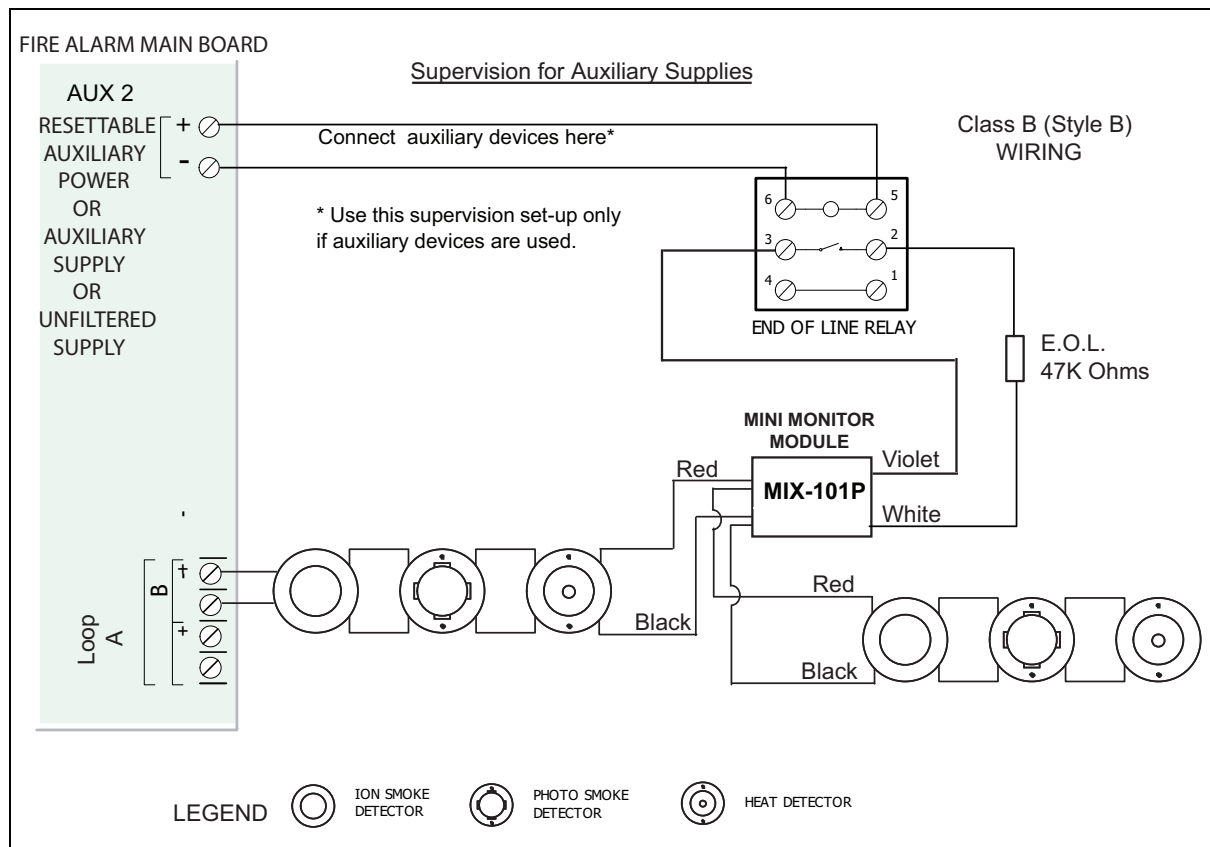


Figure 12 Supervision Of Auxiliary Supplies

8.9 Power Supply Connections

The power supply is located directly behind and below the main board. The ratings are:

Electrical Input rating 120 VAC, 60Hz, 1.73A / 240VAC, 50Hz, 0.864A

Battery fuse on Main module 10A, slow blow micro fuse (not replaceable)



Caution: The main AC branch circuit connection for the Fire Alarm Control Unit must provide a dedicated continuous power without any disconnect devices. Use #12 AWG wire with 600-volt insulation and proper over-current circuit protection that complies with the local codes. Refer to Appendix C: Specifications for specifications.



Note: Ensure that the AC supply is disconnected before wiring the power to the panel. Wire the AC power to the AC wiring terminals as shown in Figure 13 using the proper wire gauge. Fire alarm systems must be installed in compliance with local codes and standards and with the Authority Having Jurisdiction (AHJ).

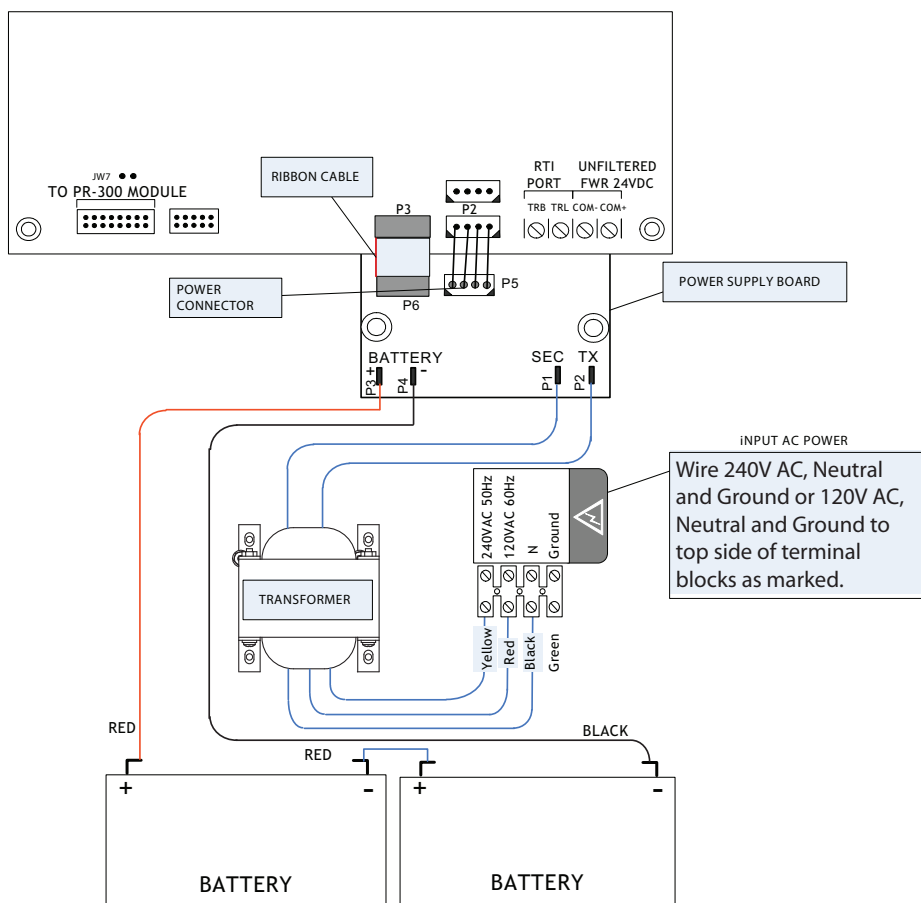


Figure 13 Main Power Supply Connections



Note: The MR-2350/MR-2351 panel is capable of being wired for 120 VAC or 240 VAC 50/60 Hz as shown above. A good ground connection to the “Ground” terminal is essential to electrical safety, ensure proper operation, and specified noise immunity.

8.10 Connecting to a DSC SurGuard Receiver

A typical connection is shown in Figure 14. For information on Compatible DACR Receivers see 14.0 Appendix A: Compatible Receivers on page 56.

MR-2350/2351 – GS3070 Connection - Typical Diagram

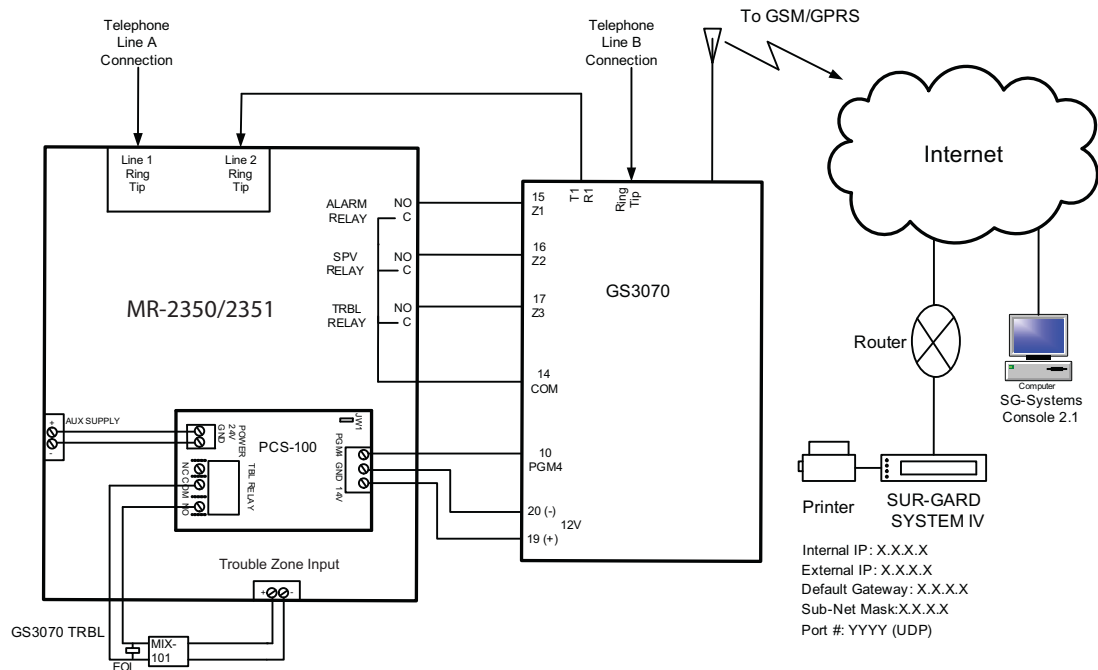


Figure 14 Connecting an MR-2350/2351 FACP to a DSC Surguard System Receiver



Note: The DSC interface is required if the installation requires S559 certification. If S559 certification is not required, i.e. only local operation of the fire alarm panel, this DSC interface is not required.

9.0 System Checkout

9.1 Before turning the power “ON”

To prevent sparking, **do not connect** the batteries. Connect the batteries after powering the system from the main AC supply.

1. Check that all adder modules are installed in the proper location with the proper connections.
2. Check all field (external) wiring for opens, shorts, and ground.
3. Check that all interconnection cables are secure, and that all connectors are plugged in properly.
4. Check all jumpers and switches for proper setting.
5. Check the AC power wiring for proper connection.
6. Check that the chassis is connected to earth ground (cold water pipe).
7. Make sure to close the front cover plate before powering the system from main AC supply.

The best way to set up a panel for the first time is to avoid connecting any field wiring at first. To begin set up, power up the panel with end of line resistors connected where appropriate, then connect the battery. The panel will show “System Restart Active”. Press System Reset button to reset the panel. If the panel is free of trouble, connect one circuit at a time, checking for troubles each time. If a trouble occurs at any point during the set-up, correct the fault, then continue connecting the field wiring.

9.2 Power-up procedure

After completing the system checkout procedures outlined above,

1. Power up the panel. The “AC-ON” green LED and the “Common Trouble” LED should illuminate, and the buzzer should sound. Press the “System Reset” button. Since the batteries are not connected, the trouble buzzer should sound intermittently and the common trouble LED should flash.
2. Connect the batteries while observing correct polarity: the red wire is positive (+) and black wire is negative(-). All indicators should be OFF except for normal power “AC ON” green LED.
3. Configure the Fire Alarm Control Panel as described in the System Configuration section.

10.0 Troubleshooting

Table 12 Troubleshooting

Symptoms	Possible Cause
Circuit Trouble	Normally when a circuit trouble occurs, its designated trouble indicator will be illuminated, as well as the common trouble indicator and trouble buzzer. To correct the fault, check for open wiring on that particular circuit loop or that the Circuit Disconnect Switch is in the ON or CLOSED position. Note: Disconnecting a Circuit will cause a system trouble (off-normal position).
Remote Trouble	Remote Trouble will be indicated on the main panel display for any failure reported by, or failure to communicate with a remote annunciator or other remote device.
Ground Fault	This panel has a common ground fault detector. To correct the fault, check for any external wiring touching the chassis or other Earth Ground connection.
Battery Trouble	Check for the presence of batteries and their conditions. Low voltage (below 20.4V) will cause a battery trouble. If battery trouble condition persists, replace batteries as soon as possible.
Walk Test Mode	If the Walk Test LED is illuminated steadily, the system is in Walk Test Mode.
Common Trouble	<p>If only a common trouble is indicated on the main panel and none of the above confirming trouble indicators are ON, check the following for possible fault:</p> <ul style="list-style-type: none"> • Check for any missing interconnection wiring. • Check for any Module missing that was part of the Configuration. • Check for improperly secured cabling.

11.0 Indicators, Controls and Operations

Figure 15 below shows the common display panel for both the MR-2350 and MR-2351 Fire Alarm Control Panels.

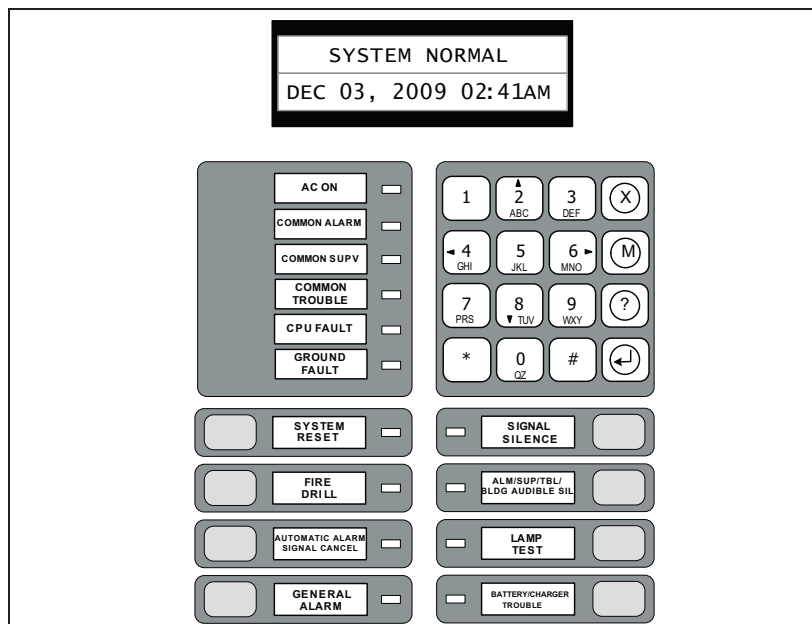


Figure 15 LCD Display, LED indicators and control buttons

The display panel on the main fire alarm control board consists of:

- a two line by twenty character LCD display
- a sixteen button keypad
- common LED Indicators
- common control buttons

MR-2351-LD-RA model is equipped with one RAX-332 LED display adder (32 zone annunciation), with provision for a second optional adder (see section 4.0 System Components on page 14 for further explanation) for another 32 zone annunciation for a total of 64 zone annunciation. Each LED zone has a red/amber alarm/supervisory LED and an amber trouble LED.

LED Indicators may be amber, red, or green, and may illuminate continuously, or at one of following Flash Rates:

- **Steady (Alarm)** - ON continuously.
- **Fast Flash (Supervisory)** - 120 flashes per minute, 50% duty cycle.
- **Trouble Flash (Trouble)** - 20 flashes per minute, 50% duty cycle.

Red indicators are used for Alarm, amber indicators for Trouble or Supervisory and green for power ON.



Note: Each RAX-332 display is supplied with blank paper labels (#NP-681) for sliding into the plastic label template on the display.

11.1 Common Indicators

11.1.1 Buzzer

The Buzzer is activated by any of the following:

- **Fire Alarm:** Steady
- **Supervisory Alarm:** Fast flash rate
- **Trouble:** trouble flash rate
- **Property and Building Safety (Monitor):** Configurable to sound at trouble flash rate


If the buzzer turns ON in response to a non-latching trouble or supervisory, it will turn OFF if the condition causing it goes away and there is no other reason for it to be ON.

11.1.2 AC On LED

The AC On LED illuminates steady green while the main AC power is within acceptable levels. It turns off when the power level falls below the power-fail threshold and the panel switches to standby (battery) power.

11.1.3 Common Alarm LED

The Common Alarm LED illuminates steady red whenever the panel is in alarm. An alarm results from any alarm on any point or input programmed as alarm or activation of the manual General Alarm button. Since all alarms are latched until the alarm conditions are cleared and the panel is reset, the LED will remain ON until then.

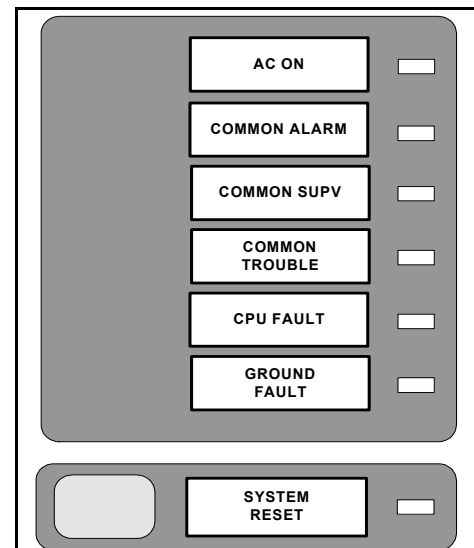

11.1.4 Common Supervisory LED

The Common Supervisory LED flashes amber at the Supervisory or Fast Flash rate when there is a supervisory alarm in the panel resulting from any un-bypassed latching or non-latching supervisory circuit. The LED turns OFF if all non-latching Supervisory Circuits are restored and there are no active latching supervisory circuits. Latching supervisory alarms remain active until the panel is reset.

11.1.5 Common Trouble LED

The Common Trouble LED flashes amber at the Trouble Flash rate when the panel detects any trouble condition in the system. The LED turns OFF once all non-latching troubles are cleared.

11.1.6 CPU Fault LED

The CPU Fault LED flashes amber at the Trouble Flash rate when the panel detects a fault on the CPU. It is turned OFF when the CPU fault is corrected.

11.1.7 Ground Fault LED


The Ground Fault LED flashes amber at the trouble flash rate when the Ground Fault Detector detects a ground fault on any field wiring. It turns off immediately after the ground fault is cleared.

11.1.8 System Reset LED

The amber System Reset LED will illuminate steadily after the system reset button has been pressed and the system is resetting.

11.1.9 Signal Silence LED

The Signal Silence LED flashes amber at the Trouble Flash rate after indicating circuits are silenced either by the Signal Silence button, or by the Auto Signal Silence Timer. It turns OFF after the signals are re-sounded by a subsequent alarm. For Canadian installations, disable Auto Signal Silence.

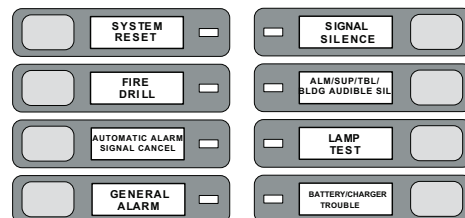

11.1.10 Fire Drill LED

The Fire Drill LED turns ON steady amber while Fire Drill is active.

11.1.11 ALM/SUP/TBL/BLDG AUDIBLE SIL (Buzzer Silence) LED

The ALM/SUP/TBL/BLDG AUDIBLE SIL LED flashes amber at the Trouble Flash rate when the ALM/SUP/TBL/BLDG AUDIBLE SIL button is pressed. Any new alarm, supervisory or trouble events will resound the buzzer and will cause the ALM/SUP/TBL/BLDG AUDIBLE SIL LED to turn off.

11.1.12 AUTOMATIC ALARM SIGNAL CANCEL LED (Acknowledge) LED

If the panel is configured as a two stage system, the AUTOMATIC ALARM SIGNAL CANCEL LED turns ON steady amber after the Auto General Alarm Timer is cancelled by the activation of the AUTOMATIC ALARM SIGNAL CANCEL or Signal Silence buttons. If the Auto General Alarm Timer times out and puts the panel into General Alarm, the AUTOMATIC ALARM SIGNAL CANCEL LED turns OFF. If the panel is configured as Positive Alarm Sequence (PAS), the AUTOMATIC ALARM SIGNAL CANCEL LED flashes amber at the Fast Flash rate while a timer counts down 15 seconds to common alarm.

11.1.13 General Alarm LED

The red General Alarm LED illuminates steadily after the General Alarm button is pressed, a general alarm initiating circuit is activated, or the Auto General Alarm timer times out. Once the General Alarm LED turns on, it will stay active until the panel is reset.

11.1.14 Lamp Test LED

The amber Lamp Test LED will illuminate steadily after the Lamp Test button is pressed and while system is in Lamp Test mode.

11.1.15 Battery/Charger Trouble LED

In a ULI application the amber Battery/Charger Trouble LED flashes at the Trouble Flash rate when any Battery/Charger Trouble occurs.

In a ULC application the amber Battery/Charger Trouble LED illuminates steady when any Battery/Charger Trouble occurs.

11.1.16 LEDs 1 to 32 for MR-2351 Model Only

Points labelled 1 to 32 are available for alarm, supervisory, and monitor annunciation (bi-coloured red/amber LEDs) and trouble annunciation (amber LEDs).

11.1.17 RAX-332 LEDs 33 to 64 for MR-2351 Model Only

Points labelled 33 to 64 are available for alarm, supervisory, and monitor annunciation (bi-coloured red/amber LEDs) and trouble annunciation (amber LEDs).

11.2 Common Controls

11.2.1 LCD Display

The display is a two line, 20 character back-lit alphanumeric LCD. It displays information regarding the panel, its circuits, and devices. An on-screen cursor is controlled by the cursor buttons (located to the right of the display) for menu selection and control. Report information provided by the LCD display includes Alarm, Event Log, Current Levels, Verification, and Maintenance reports.

11.2.2 Cursor Buttons

Located at key number 2, 8, 6 and 4. The cursor buttons Up (next), Down (previous), Right, and Left allow you to select items on the LCD display. The Up and Down buttons scroll through lists in a continuous loop.

11.2.3 Enter Button

Use this button to select a displayed item on the LCD display.

11.2.4 Cancel Button

Use this button to cancel an operation or exit a menu.



11.2.5 Menu Button

Use this button to view the Command Menu.

11.2.6 Info Button

Push and hold this button to get detailed information about any displayed item.

11.2.7 Signal Silence Button

Pressing the Signal Silence button after the panel is in alarm turns ON the Signal Silence LED and de-activates any silenceable indicating circuits. Non-silenceable circuits are unaffected. Signals will re-sound upon any subsequent alarm. This button does not function during any configured Signal Silence Inhibit Timer period. It also does not function if indicating circuits are active as the result of a Fire Drill. In a two-stage system, the SIGNAL SILENCE button silences the stage 1 and stage 2 alarms.

11.2.8 Fire Drill Button

The Fire Drill button activates all programmed and non-disconnected indicating circuits, but does not transmit any Alarms via the city tie or common alarm relay. The Fire Drill is cancelled by pressing the button again (toggle switch), or if the panel goes into a true alarm.

11.2.9 General Alarm Button

Pressing the General Alarm button immediately sends the panel into General Alarm. It will also re-activate the signals if they have been silenced during General Alarm initiated through an addressable device configured as General Alarm. The General Alarm condition remains active until the panel is reset.

11.2.10 System Reset Button

The System Reset button resets the panel and all circuits:

- Resets all Latching Trouble Conditions
- Resets Aux Resettable Power Supply
- Turns OFF Signal Silence, Ack & GA LEDs
- Stops and resets all Timers
- Aux Disconnect is not affected
- Turns off all Indicating Circuits
- Turns off Fire Drill
- Processes inputs as new events
- Reset cannot be activated until the Signal Silence Inhibit timer has expired
- Pressing Reset button after a PAS Acknowledge will reset the system and clear the alarm event.



Attention: After power-up, press the System Reset button to bring the system to normal and restore the “system power up” trouble.

11.2.11 AUTOMATIC ALARM SIGNAL CANCEL Button (Two Stage or PAS only)

If the panel is configured for two stage operation, activation of the AUTOMATIC ALARM SIGNAL CANCEL button while the Auto General Alarm Timer is timing (e.g. there is an alarm in the panel but it is still in the first stage) cancels the timer and turns the AUTOMATIC ALARM SIGNAL CANCEL LED ON steady amber. If the panel is configured for Positive Alarm Sequence (PAS), activation of the AUTOMATIC ALARM SIGNAL CANCEL button within 15 seconds of a PAS alarm will delay a common alarm activation for 60 seconds.

11.2.12 Lamp Test Button

Pressing and holding the Lamp Test button causes all front panel indicators to illuminate and sounds the buzzer steadily. Bi-coloured LEDs will illuminate twice to show both colors. If lamp test is active for more than ten seconds, the Common Trouble LED activates.

11.3 Single Stage Operation

In a single stage system, all alarm inputs are treated in a similar manner. Alarm inputs include any of the following: non-verified alarm, verified alarm, waterflow alarm, and general alarm circuits. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily
- If fire drill is active, it is cancelled
- The Common Alarm LED turns ON
- The Common Alarm relay activates if Aux disconnect is not active
- The Auto Signal Silence timer, if configured, starts. For Canadian installations, disable Auto Signal Silence
- The Signal Silence Inhibit timer, if configured, starts
- All non-disconnected indicating programmed to the input are activated provided that Aux disconnect is not active
- Non-disconnected strobes associated with the input are activated
- Non-disconnected signals associated with the input are activated at the evacuation rate

Pressing the General Alarm button on the panel also initiates a general alarm.

Subsequent alarms when the panel is already in alarm, cause the following:

- The alert buzzer sounds steadily
- If Signals have been silenced, they are resounded, the Signal Silence LED turns OFF, and the Auto Signal Silence timer, if configured, is restarted. For Canadian installations, disable Auto Signal Silence.
- Any additional non-disconnected strobes associated with the input are activated continuously
- Any additional non-disconnected signals associated with the new input are activated at the evacuation rate

11.4 Two-Stage Operation

In a Two-Stage system, alarm inputs are either First Stage (alert) inputs or Second Stage (general alarm) inputs. First stage inputs include inputs from the following types of circuits: non-verified alarm, verified alarm, and waterflow alarm. Second stage inputs include alarms on the general alarm circuits, activation of the General Alarm button, or expiration of the Auto General Alarm timer. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily.
- If fire drill is active, it is cancelled.
- The Common Alarm LED turns ON
- The Common Alarm relay activates if Aux disconnect is not active.
- The Auto Signal Silence timer, if configured, starts. For Canadian installations, disable Auto Signal Silence.
- The Signal Silence Inhibit timer, if configured, starts.
- All non-disconnected outputs programmed to the input are activated provided that Aux disconnect is not active.

If the alarm is a Second Stage alarm,

- All non-disconnected strobe circuits are activated continuously, if correlated to an alarm input.
- All non-disconnected signal circuits are activated at the evacuation rate, if correlated to an alarm input.
- The General Alarm LED turns ON.

If the alarm is a First Stage alarm,

- Non-disconnected strobe circuits programmed to that circuit are activated continuously.
- Non-disconnected signal circuits programmed to that circuit are activated with the alert code (see *Output Types on page 50*).
- The Auto General Alarm timer, if configured, starts.

Subsequent First Stage alarms when the panel is already in alarm, cause the following:

- The buzzer sounds steadily.
- If signals have been silenced as a result of the silence button or the Auto signal silence timer, signals are resounded as they were before signal silence, the Signal Silence LED turns OFF, and the Auto Signal Silence timer, if configured, is restarted. For Canadian installations, disable Auto Signal Silence.
- If the panel is not already in General Alarm, additional non-disconnected signals programmed to the new input are activated with the Alert Code (see *Output Types on page 50*).
- If the panel is not already in General Alarm and if the AUTOMATIC ALARM SIGNAL CANCEL LED is ON steady indicating that the Auto General Alarm timer has been Acknowledged the timer is restarted and the AUTOMATIC ALARM SIGNAL CANCEL LED is extinguished.

A second stage alarm (general alarm) when the panel is already in alarm causes the following:

- The buzzer sounds steadily.
- All non-disconnected signals are activated at the evacuation rate.
- If the Signal Silence LED is ON, it turns OFF and the Auto Signal Silence timer, if configured, is restarted. For Canadian installations, disable Auto Signal Silence.
- The AUTOMATIC ALARM SIGNAL CANCEL LED if ON, turns OFF.

Alarm inputs are latching, they remain active until system reset.



Note: All circuits with process type designated as “signal” are automatically correlated to the “fire drill” and “general alarm” status.

11.5 Positive Alarm Sequence

In a Positive Alarm Sequence (PAS) system, only smoke detectors can be dedicated as PAS inputs. PAS Inputs can only be from the following types of circuits: non-verified alarm and verified alarm. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily.
- If fire drill is active, it is cancelled.
- The Common Alarm LED turns ON
- The individual zone LED (if programmed) turns ON.
- The Common Alarm relay does not activate.
- The PAS timer starts for 15 seconds.
- All outputs programmed to the input are not activated.

When the PAS alarm has been acknowledged within 15 seconds, the following sequence occurs:

- The buzzer is silenced.
- The Common Alarm LED stays ON.
- The individual zone LED (if programmed) stays ON.
- The PAS timer starts for 180 seconds (3 minutes). This is the time allotted to reset the system and avoid any true alarm sequence.


When the PAS alarm has been acknowledged and the system reset (and there are no new alarms), within the given time limits, the following occurs:

- The buzzer stays silenced.
- The Common Alarm LED turns OFF.
- The individual zone LED (if programmed) turns OFF.
- The alarm event is cancelled. No log reference.
- The fire alarm system returns to normal.

If at any time during the Positive Alarm Sequence a second alarm (PAS or otherwise) is actuated, the fire alarm will go into evacuation mode. In a preconfigured FACP the Positive Alarm Sequence may be enabled or disabled as the user requires.

11.6 Enabling or Disabling the Positive Alarm Sequence

- To enable or disable the Positive Alarm Sequence, from the Keypad of the FACP press “M” to enter the **Menu**
- Using the Up and Down Arrow buttons, scroll to “Operation” and press the enter key
- In the **Operation Menu** scroll to “Positive Alarm” and press enter
- You will now see displayed the current status of the Positive Alarm Sequence and will be prompted to change status.

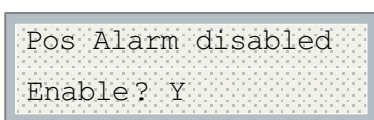

- If you wish to change the status press the “enter” key.



Note: There will be no notification message advising a change of status.

- If you do not wish to change the status, press the “cancel” key

11.7 Input Types

The following is a table of input types available for programming.

Table 13 Input Types

Input Types	Description
Non-Verified Alarm	<p>When an un-bypassed non-verified alarm input goes into alarm the common alarm sequence is activated. Un-bypassed relay, signal, and strobe outputs are updated according to their programming and alarm zone status indicators associated with the input are activated. Alarm input activations are displayed on the shared display in the common queue with alarm as the highest priority and is displayed first.</p> <p>A pre-alarm condition on a device configured as an alarm input is displayed on the shared display and on the alarm zone status indicator. If the pre-alarm condition is restored the status will be cleared. If the input goes from pre-alarm to alarm, the pre-alarm status will be replaced with the alarm status for the input.</p> <p>Once an alarm input is in alarm the alarm condition is latched until system reset (changes in status from alarm to pre-alarm or to normal are ignored).</p>

Table 13 Input Types (Continued)

Input Types	Description
Verified Alarm	<p>When an un-bypassed verified alarm input goes into alarm, if the system is not already in alarm, the alarm is verified over a period of time to determine if the alarm condition is valid. For addressable analog devices, when a device goes into alarm, a 35 second timer is started. When the 35 second delay times out, the device is monitored for the next 60 seconds, if it goes into alarm again during this time the alarm is confirmed. Once the alarm condition is confirmed, the alarm is processed as for non-verified inputs.</p> <p>If the system goes into alarm at any point during verification process (due to an alarm on another device or circuit), the verification process is aborted and the alarm is immediately confirmed. If another Verified Alarm Input goes into alarm during the verification process, the verification is aborted and the alarm is confirmed on both inputs. A trouble detected on the circuit being verified during the verification period will also cause the verification to be aborted and the alarm confirmed.</p> <p>An alarm zone status indicator flashes during the alarm verification process. If the alarm is confirmed the indicator will go steady, otherwise it will be turned off.</p> <p>Once the system is in alarm verified alarm circuits operate the same as non-verified circuits. The pre-alarm condition on verified alarm inputs is processed the same as non-verified inputs; i.e. it is not verified.</p> <p>A count is maintained of the number of times each verified input has gone through its verification process without confirming an alarm. These counts can be retrieved for reporting purposes and cleared.</p>
Waterflow Alarm	<p>Waterflow inputs are sampled every second. If 10 samples are in alarm in any given 15 second period, an alarm condition is confirmed and the alarm is processed as for non-verified inputs.</p> <p>The alarm zone status indicator flashes whenever even one sample indicates an alarm condition. If the alarm is confirmed the indicator will go steady, it will be turned OFF when 15 seconds elapses without any samples in the alarm condition. The waterflow retard operation operates regardless of whether or not the system is in alarm.</p> <p>Note: Do not use the retard operation with any external retarding device.</p>
Non-Latching Supervisory	<p>When an un-bypassed supervisory input goes into alarm the common supervisory sequence is activated. Un-bypassed relay, signal, and strobe outputs are updated according to their programming and supervisory zone status indicators associated with the input are activated.</p> <p>Supervisory activations are displayed on the shared display in the common queue with supervisory as the second highest priority.</p> <p>When a non-latched supervisory input is restored, outputs programmed to it also return to normal unless they are also programmed to other active inputs. Zone display indicators will also be updated to indicate that the input is no longer active and the message will be removed from the shared display common queue. If there are no other active supervisory inputs the common supervisory condition will be restored.</p>
Latching Supervisory	<p>Latched supervisory inputs operate the same as non-latched supervisory inputs except that the alarm condition is latched: restoration of the circuit (from alarm to normal) is ignored until system reset.</p>

Table 13 Input Types (Continued)

Input Types	Description
Property and Building Safety (Monitor)	<p>Property and Building Safety input status may be reflected on monitor zone indicators and in the common queue, with Property and Building Safety having the lowest priority on the shared display. They may also be programmed to relay, signal, and strobe outputs. When an un-bypassed Property and Building Safety circuit goes into alarm, the status display and programmed outputs are activated. When it restores the status display, the outputs restore unless they are also programmed to other active inputs.</p>
Trouble-Only	<p>An alarm condition on an un-bypassed trouble only input initiates the common trouble sequence as a non-latching trouble. The status is reflected on trouble zone indicators and in the common queue on the shared display with trouble-only as the third priority. They may also be programmed to relay, signal, and strobe outputs.</p> <p>Note that the trouble condition initiated as a result of an alarm on a trouble-only input is separate from the circuit or device supervision trouble.</p>
Remote Switch Inputs	<p>Remote switch inputs may be used to provide remote control of system common controls. Remote switches are processed as a toggle operation. When the circuit is activated it sends an event through the system similar to pressing the switch on the front panel. When the circuit is restored it is ignored. For example if a remote switch is associated with the fire drill common control activating it once when drill is not activated will turn on drill and activating it again will turn off drill.</p> <p>Remote switches are supervised to ensure that they do not get "stuck" in the "ON" position. If they remain active for more than 30 seconds a circuit trouble is generated. The trouble is non-latching and goes away when the input is restored.</p> <p>Remote switches themselves are not correlated to relay, signal, and strobe outputs although the feature they are associated with may be.</p>

11.8 Output Types

Table 14 Output Types

Output Type	Description
Signal	This output type is for audible devices such as bells and piezo mini-horns. Signals operate in alert (two stage) and/or evacuation rate.
Strobe	<p>Normal (non-sync):</p> <p>Strobe circuits operate similar to signals except that they are always turned ON continuously (they are not affected by the alert or evacuation rates) if configured as normal. When configured as normal the output circuit does not use any sync protocol. Normal strobes can be silenceable or non-silenceable.</p> <p>Synchronized:</p> <p>Output circuits configured as strobes can have sync protocol for synchronization. When the output circuit is configured as strobe and also configured as non-silenceable and the device used on the output is a combination of horn and strobe, then if the signal silence is activated while the circuit is active the horn(s) are silenced while the strobe keeps on flashing. Synchronized strobes and strobe/horn models of the following manufacturers are supported: Faraday, System Sensor, Wheelock, Gentex, and Secutron.</p>
Relay	Un-bypassed relay outputs are activated if any un-bypassed input circuit or common system status which has been programmed to it is active. If the relay is configured as "silenceable" it is inhibited when common auxiliary disconnect is active. Relays also turned off if they are bypassed or if all inputs and system status correlated to it are restored or bypassed.



Note: Silencing of the horn depends on the feature provided by the manufacturer of the horn/strobe combination. Some models of the horn/strobe combination may not have this feature and will not work as described above.

11.9 Evacuation Codes

Single stage codes

Continuous	On 100% of the time
Temporal Code	3 of 0.5 second ON, 0.5 second OFF then, 1.5 second pause
March Code	0.5 second ON, 0.5 second OFF
California Code	5 seconds ON, 10 seconds OFF

Two-stage codes:

Alert Code	0.5 second ON, 2.5 seconds OFF
General Alarm	Evacuation code as selected from Figure15 below.

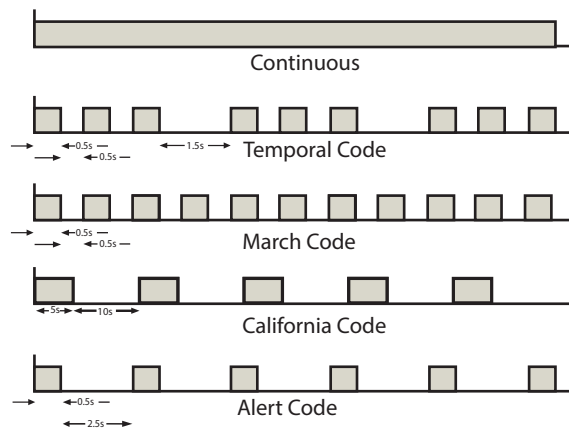


Figure 16 Evacuation and Alert Codes

11.10 Initial Power-up Sequence

When the system powers up, it performs an initial self diagnostic and executes a system reset to reset all external devices. The common trouble sequence is then initiated. The system must be reset manually to clear the trouble. At power-up, a check is performed on the configuration data, program, and RAM memory. If an error is found, the system is placed in trouble but the system attempts to continue to operate.

The power-up sequence will occur when power is first applied to the panel, when power is restored after a total power failure (including battery power), or when the watchdog timer expires. It is also implicitly executed when the system comes out of configuration mode after auto-configure or a new configuration has been downloaded from the configurator.

The power-up complete status is set to indicate that the system power-up is complete and the system is in normal operating mode.

Shared Display

The shared display consist of a 2 line by 20 characters LCD and alpha numeric keys. It operates in three basic modes: status display mode, queue display mode and command mode. Status display mode displays system activity when the queues are empty. When there are items in the queues, queue display mode is used to browse the status of all active points in the queues. Command mode which allows the user to execute certain commands, performs certain system test and front panel configuration of the system.

The following push buttons are used by the shared display:



- UP/DOWN**
- scroll through common alarm, supv, trouble and monitor queue
 - scroll through menu selections when in command mode



- RIGHT/ LEFT**
- moves to next or previous field or digit in command mode
 - Make selection for example checking/un-checking the selection box
 - Right key to add items for example Remote LED groups, correlation etc.
 - Left key to delete items for example led groups etc.





- INFO**
- displays additional information for the currently selected item in queue display mode or when a pre-alarm, alarm verification or retard operation is active in status display mode



- MENU**
- enter command mode or returns to base menu if already in command mode



- ENTER**
- accepts currently selected item or menu selection in command mode



- CANCEL**
- cancels current operation in command mode and returns to previous menu, or exits command mode if at base menu

ALPHA NUMERIC KEYS



- Some commands require the entry of numeric values, for example loop and device address for device configuration or changing the time etc.
- Some configuration requires entering the alpha keys for example the labels for circuits. Multiple key presses are required for entering an appropriate alpha character. First key press enters the numeric character, the second key press enters the first alpha character and another key press will enter the second alpha character and so on. The sequence is repeated with subsequent key presses.

11.10.1 Status Display Mode

The display is in status display mode when there are no items in the queue and command mode is not active. When there are no active alarms on the system, the display will show a system normal message. By default the message is displayed in the following format

System Normal
12:47 MON 2005-10-03

When there is a pre-alarm, alarm verification active or retard verification in process on a device the system normal message is replaced by a message in the following format:

Pre-alarm detected
12:47 MON 2005-10-03

OR

Alarm verification
12:47 MON 2005-10-03

OR

Retard verification
12:47 MON 2005-10-03

If the device or circuit returns to normal, the system normal message will be re-displayed. If multiple pre-alarms or alarm verification sequences are active at the same time only the first is displayed. Pressing the INFO button while the pre-alarm or verification message is active will display additional information on the circuit or device as described under queue display mode.

11.10.2 Queue Display Mode

Active inputs are all combined together and displayed in one queue with alarm, supervisory, trouble, or monitor and having priority in the same sequence as they are listed with alarm as the highest priority. In addition any internal non-fatal troubles which will cause the common trouble sequence to be activated will also result in a specific message to be placed in the queue with trouble level priority. The message is displayed in the following format:

Signal opt
Short ckt trb 01/04

Pressing 'INFO' Key

Conventional signal
Lp:0 Addr:002

Where:

- the first line shows the process type and the input or output designation
- the second line shows the active status or the trouble status depending on the circuit type and the location of the message in the queue along with the total number of messages in the queue
- pressing the INFO key provides some additional information
- the first line shows the process type
- the second line shows the loop# where the device is connected and the device address

For internal troubles the 2 line message is an internally formatted message which identifies the trouble along with any additional information which can help in diagnostics. Whenever there are active inputs in any of the queues the display will automatically display the oldest un-viewed event in the highest priority queue. The queue priority is as follows: alarm (highest), supervisory, trouble, monitor (lowest). During queue display mode, the messages in the queue can be scrolled using the UP and DOWN key. For non-latching inputs (monitors, non-latching supervisory, non-latching troubles) the message is removed from the queue when the circuit is restored. Latching input types will only be removed at system reset.

12.0 Remote Annunciator Operation

The MR-2350/MR-2351 supports two types of annunciators: conventional LED/switch annunciators and a shared display (LCD) annunciator. Both types are connected to the panel via the RS-485 serial link.

12.1 Conventional Annunciators (MR-2300 Series)

The MR-2350/MR-2351 is designed to interface with the MR-2300 series of conventional LED annunciators. The LEDs may be configured to zone status indicators. Each conventional annunciator contains a local alert buzzer. Under normal operation the alert buzzer is controlled by the system and operates in an identical manner as the one in the main panel. If communication fails it is processed locally.

12.2 Supervision

The communications with each annunciator is constantly supervised both by the panel and by the annunciator. If communications fails, the panel will activate the common trouble sequence. The number of annunciators is set during panel configuration. If there is a mismatch in the total number of annunciators the panel will generate communications trouble. The panel trouble is non-latching: when the correct number of annunciators is detected the troubles will clear.

12.3 Shared Display Annunciator (MR-2300-LCDW/R)

The shared display annunciator has identical operation to the main shared display and operates in conjunction with the main display (viewing items in the queues on one shared display flag the items as viewed on all shared displays). The shared display annunciator contains a local alert buzzer. Under normal operation the alert buzzer is controlled by the system and operates in an identical manner as the one in the main panel. If communication fails it is processed locally. The configuration cannot be performed by the shared display annunciator.

12.4 Supervision

The supervision of the shared display annunciator is same as for the remote LED annunciators

The MR-2312-SR12 Smart Relay Module is connected on the RS-485 loop along with other remote annunciators, but provides 12 relay contact outputs which actuate according to the first 12 remote LED groups. The relays are bypassed by Auxiliary Bypass, and the unit is supervised as one of the (maximum) eight permitted annunciators.

13.0 Dialer Operation

The MR-2350/MR-2351 Fire Control panels are equipped with a built-in dialer. The dialer provides a means to communicate panel status to the remote central monitoring station using two dedicated phone lines.

There are many standard protocols for communicating with the central monitoring station, but the two most commonly used are supported by this panel

- SIA DCS
- Contact ID

13.1 Event Reporting

Events are reported in a special format depending upon the protocol selected.

13.2 Telephone line supervision

The phone lines are supervised for the presence of

- DC voltage
- dial tone, stuttered dial tone and message waiting tone

The supervision is carried out every two minutes; first the DC voltage is supervised and if it is detected the dial tone is monitored. If the phone lines are equipped with a house phone and with proper connection if the house phone is in use the supervision is suspended until the house phone is ON-HOOK again.

If there is an event to be reported in the dialer queue and the house phone is in use the dialer tries the second line to report the event if that line's house phone is also in use the dialer seizes the line thus disconnecting the house phone and reports the event.

14.0 Appendix A: Compatible Receivers

The dialers that are built into models MR-2350 and MR-2351 Fire Alarm Control Panels are compatible with the following Digital Alarm Communicator Receivers (DACR):

DACR Receiver Model

SurGard MLR2 Multi-Line Receiver (ULC, ULI approved)
 SurGard SLR Single-Line Receiver (ULC, ULI approved)
 Osborne-Hoffman Quickalert! II Receiver (ULI approved)
 Osborne-Hoffman OH-2000 Receiver (ULI Approved)
 Silent Knight Model 9500 Receiver (ULI Approved)
 Radionics Model D6500 Receiver (ULI Approved)
 Radionics Model D6600 Receiver (ULI Approved)
 DSC SurGard System III Receiver (ULC, ULI Approved)*
 DSC SurGard System IV Receiver (ULC, ULI Approved)*

Protocols

SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA-DCS and Ademco Contact ID
 SIA Contact ID
 SIA Contact ID



Note: * When used with DSC GS3070 Universal Wireless Alarm Communicator through wireless IP connection.

15.0 Appendix B: Reporting

Table 15 Ademco Contact-ID - MR-2350/MR-2351 Series Event Codes

Description	Event Family	Qualifier	Code	Group #	Contact #
Phone Line #1 trouble detected	Trouble	New event	1 351	00	000
Phone Line #2 trouble detected	Trouble	New event	1 352	00	000
Phone Line #1 trouble restored	Trouble	Restore	3 351	00	000
Phone Line #2 trouble restored	Trouble	Restore	3 352	00	000
Failure to report to an Account	Trouble	New event	1 354	Acct #	Acct #
Report to an Account successful	Trouble	Restore	3 354	Acct #	Acct #
RS-485 Communication Trouble	Trouble	New event	1 350	00	485
Periodic (24 hr) Test Event (NORMAL)	Test	New event	1 602	00	000
Periodic (24 hr) Test Event (OFF NORMAL)	Test	New event	1 608	00	000
Manually initiated dialer test	Test	New event	1 601	00	000
Zone Fire Alarm	Alarm	New event	1 110	00	NNN
Zone Fire Alarm restored	Alarm	Restore	3 110	00	NNN
Zone Trouble detected	Trouble	New event	1 300	00	NNN
Zone Trouble restored	Trouble	Restore	3 300	00	NNN
Zone Supervisory condition	Supervisory	New event	1 200	00	NNN
Zone Supervisory restored	Supervisory	Restore	3 200	00	NNN
Water flow	Alarm	New event	1 113	00	NNN
Water flow restored	Alarm	Restore	3 113	00	NNN
Indicating Zone Trouble	Trouble	New event	1 320	00	NNN
Indicating Zone Trouble restored	Trouble	Restore	3 320	00	NNN
General Alarm	Alarm	New event	1 140	00	NNN
General Alarm restored	Alarm	Restore	3 140	00	NNN
AC power lost	Trouble	New event	1 301	00	000
AC power restored	Trouble	Restore	3 301	00	000
Battery Low	Trouble	New event	1 302	00	000
Battery Low restored	Trouble	Restore	3 302	00	000
Ground Fault	Trouble	New event	1 310	00	000
Ground Fault restored	Trouble	Restore	3 310	00	000

SIA protocol does not define indicating zone troubles, but lists it as Untyped Zone Trouble/Restore.

Table 16 Security Industries Association SIA-DCS - MR-2350/MR-2351 Series Event Codes

Event Description	Event Family	Qualifier	SIA Event Code	Parameter
Phone Line #1 trouble detected	Trouble	New event	LT	001
Phone Line #2 trouble detected	Trouble	New event	LT	002
Phone Line #1 trouble restored	Trouble	Restore	LR	001
Phone Line #2 trouble restored	Trouble	Restore	LR	002
Failure to report to an Account	Trouble	New event	RT	Acct #
Report to an Account successful	Trouble	Restore	YK	Acct #
RS485 Communication Trouble	Trouble	New event	YS	485
Periodic (24 hr) Test Event (Normal)	Test	New event	RP	000
Periodic (24 hr) Test Event (Off-normal)	Test	New event	RY	000
Manually initiated dialer test	Test	New event	RX	000
Zone Fire Alarm	Alarm	New event	FA	NNN
Zone Fire Alarm restored	Alarm	Restore	FH	NNN
Zone Trouble detected	Trouble	New event	FT	NNN
Zone Trouble restored	Trouble	Restore	FJ	NNN
Zone Supervisory condition	Supervisory	New event	FS	NNN
Zone Supervisory restored	Supervisory	Restore	FR	NNN
Water flow alarm	Alarm	New event	WA	NNN
Water flow alarm restored	Alarm	Restore	WH	NNN
General Alarm	Alarm	New event	QA	NNN
General Alarm restored	Alarm	Restore	QH	NNN
Indicating Zone Trouble (*)	Trouble	New event	UT	NNN
Indicating Zone Trouble restored (*)	Trouble	Restore	UR	NNN
AC power lost	Trouble	New event	AT	000
AC power restored	Trouble	Restore	AR	000
Battery Low	Trouble	New event	YT	000
Battery Low restored	Trouble	Restore	YR	000
Ground Fault	Trouble	New event	YP	000
Ground Fault restored	Trouble	Restore	YQ	000

16.0 Appendix C: Specifications

16.1 MR-2350/MR-2351 Series Specifications

Table 17 MR-2350/MR-2351 Series Specifications

MR-2350/MR-2351 Series Fire Control Panel Chassis									
General	Digital signal processor based design, fully configurable from front panel with password protection.								
Addressable loops	One analog loop capable of addressing 126 Secutron addressable devices. Power Limited / 37VDC / 400mA / maximum loop resistance depends on number of devices and device type.								
Indicating (NAC) Circuits	4 supervised style Y (Class B) indicating circuits, configured as strobes or audibles. Terminals are labelled as SIG 1 , SIG 2 , SIG 3 and SIG 4 . Power limited / Regulated 24VDC FWR / 1.7A @ 49C per circuit								
Aux. Supply resettable	Power limited / 21.1 VDC Filtered regulated / 500mA max								
Resettable Auxiliary Power (Aux 2)	Terminals are labelled 4-WIRE . Power Limited/21.1 VDC regulated / 300 mA max.								
RS-485 Connection	For Remote Annunciators. Terminals are labelled RS485.								
Electrical ratings	Power limited / Regulated 24VDC FWR / 1.7A @ 49C per circuit. Max power allowed <ul style="list-style-type: none"> • 5A • 1.7A (aux power unfiltered if used) • 0.5A (aux power filtered if used) • 0.3A (resettable auxiliary power if used) If no auxiliaries are used the max power is 5A for the indicating circuits.								
Auxiliary relays (resistive loads)	Must be connected to a listed power limited source of supply. Terminals are labelled ALARM , TROUBLE , SUPV . <table> <tr> <td>Common alarm</td><td>Form C, 1 Amp, 28 VDC</td></tr> <tr> <td>Common Supv</td><td>Form C, 1 Amp, 28 VDC</td></tr> <tr> <td>Common Trouble</td><td>Form C, 1 Amp, 28 VDC</td></tr> </table>	Common alarm	Form C, 1 Amp, 28 VDC	Common Supv	Form C, 1 Amp, 28 VDC	Common Trouble	Form C, 1 Amp, 28 VDC		
Common alarm	Form C, 1 Amp, 28 VDC								
Common Supv	Form C, 1 Amp, 28 VDC								
Common Trouble	Form C, 1 Amp, 28 VDC								
Unfiltered supply	Power limited / Regulated 24VDC FWR / 1.7A max at 49C								
Battery	<table> <tr> <td>Type</td><td>24VDC Gel Cell/Sealed lead acid – 10AH to 24AH</td></tr> <tr> <td>Charging capability</td><td>10AH to 24AH</td></tr> <tr> <td>Current Consumption</td><td>standby: 200 mA alarm: 350 mA</td></tr> <tr> <td>Protection</td><td>10A on board (F1) slow blow micro fuse</td></tr> </table>	Type	24VDC Gel Cell/Sealed lead acid – 10AH to 24AH	Charging capability	10AH to 24AH	Current Consumption	standby: 200 mA alarm: 350 mA	Protection	10A on board (F1) slow blow micro fuse
Type	24VDC Gel Cell/Sealed lead acid – 10AH to 24AH								
Charging capability	10AH to 24AH								
Current Consumption	standby: 200 mA alarm: 350 mA								
Protection	10A on board (F1) slow blow micro fuse								

Table 17 MR-2350/MR-2351 Series Specifications (Continued)

MR-2350/MR-2351 Series Fire Control Panel Chassis		
Compliance	System Model	MR-2350 SERIES, Fire Alarm Control Panel
	System Type	Local, Auxiliary (using MR-2300-PR), Remote Protected Premise Station (using MR-2300-PR or MR-2350-60D-RA or MR-2351-LD-RA), Central Station Protected Premises. Proprietary Protected Premise Unit, where PPU is neither co-located with, nor integral with the supervising station (NFPA 72).
	Type of Service	A, M, WF, SS
	Type of Signalling	Non-Coded
	Applicable Standards	NFPA 70 and 72, UL 864 R9, ULC S-524, ULC S-527-11, CAN/ULC-S559-04 1st edition

16.2 MR-2350/MR-2351 System Modules and Annunciators

Table 18 MR-2350/MR-2351 System Modules and Annunciators

MR-2350/MR-2351 System Modules and Annunciators		
MR-2300-NC4	Output Class A Converter Module	standby: 0 mA / alarm: 0 mA
MR-2306-ATR	Zone Remote Annunciator, red	Standby 35mA / alarm 90mA
MR-2312-ATR	Zone Remote Annunciator, red	Standby 35mA / alarm 140mA
MR-2300-LCDW	LCD Remote Annunciator, white	Standby 16mA / alarm 40mA
MR-2300-LCDR	LCD Remote Annunciator, red	
MR-2300-PR	Polarity Reversal and City Tie Module	power limited / 24VDC unfiltered / 250mA max / 14 Ohms trip coil
	Polarity Reversal	power limited / 24VDC open / 12VDC at 3.5mA / 8.5mA max (shorted)
	Polarity Reversal Supv. Terminal	24VDC (normal) / -24VDC (supervisory) / 0V (trouble)
	Polarity Reversal Alarm Terminal	24VDC (normal) / -24VDC (alarm) / 0V (trouble)
	Current Consumption	standby 50mA / alarm 300mA (city tie in use) / alarm 70mA (city tie not in use)
MR-2300T	Remote Trouble Indicator	Standby 35mA / alarm 35mA

17.0 Appendix D: Power Supply and Battery Calculations

POWER REQUIREMENTS (ALL CURRENTS ARE IN AMPERES)							
Model Number	Description	Qty		STANDBY	TOTAL STANDBY	ALARM	TOTAL ALARM
MR-2350-60D-RA	Main Panel c/w Dialer		X	0.220	=	0.380	=
MR-2351-LD-RA	Main Panel c/w 1 RAX-332 LED Displays		X	0.210	=	0.390 (Note 1)	=
ALC-252	252 Point Dual Loop Addressable Adder		x	0.120	=	0.230	=
RAX-332	32 LED Display		X	0.005	=	0.010	=
MR-2300-PR	Polarity Reversal and City Tie Module		X	0.050	=	0.300	=
MR-2300-LCDW/R	Remote LCD Annunciator		X	0.016	=	0.040	=
MR-2306-ATR	Remote Annunciator, 8 Zone LED		X	0.0350	=	0.090	=
MR-2312-ATR	Remote Annunciator, 16 Zone LED		X	0.0350	=	0.140	=
MR-2300T	Remote Trouble Indicator		X	0.035	=	0.035	=
MRI-3000	Ionization Detector		X	0.00028	=	0.00028	=
MRI-3100	Photoelectric Detector		X	0.0004	=	0.0034	=
MRI-3200	Multi-sensor Detector		X	0.0005	=	0.0035	=
MRI-3300	Heat Detector		X	0.0005	=	0.0034	=
MRI-100P	Priority Monitor Module		X	0.0006	=	0.0046	=
MRI-101P	Mini Priority Monitor Module		X	0.0006	=	0.0046	=
MRI-100R	Relay Output Module		X	0.00085	=	0.0035	=
MRI-100S	Supervised Control Module		X	0.00100	=	0.00100	=
MRI-100X (Kit)							
100XH (Isolator)	Isolator c/w Mounting Base		X	0.000035	=	0.000035	=
100XB (Base)							
MRI-2001R	Relay Base		X	0.0	=	0.046	=
Device & Remote LEDs (Maximum 30)			X			0.0040	=
Signal Load (bells, horns, strobes, and etc.)			X				=
Auxiliary Power Supply for Annunciators, etc. (See Note 2)					=		=
Total currents (Add above currents)				STANDBY(A)		ALARM (B)	=

i

Notes: Assumes 25% of Zone LEDs (i.e. 15) are ON during alarm.

See specific installation documentation for standby and alarm currents for other annunciators listed in Panel Components and Accessories. Observe maximum auxiliary power supply ratings for lamp test conditions for remote annunciators.

Battery Capacity Requirement

Battery (AH) = (Standby Current Total x Discharge Time) + (Alarm Current Total x Alarm Time)

([STANDBY (A) _____] X [(24 or 60 Hours) ____]) + ([ALARM (B) _____] X [Alarm in Hr. _____]) = (C) _____AH

Total Alarm Current must be **5.5** amperes or less. Indicating Circuits must not to exceed **5** amperes.

Battery Selection:

Battery Size = Multiply (C) by 1.20 to derate battery.

Secutron recommends the following batteries for use with this panel:

Table 19 MR-2350 Batteries

Secutron	BATTERY SIZE	UL/ULC RATING
BAT-12V12A	12AH	10AH
BAT-12V18A	18AH	17AH
BAT-12V26A	26AH	24AH

Batteries:

- BAT-12V12A (12 AH) and BAT-12V18A (18 AH) will fit into the MR-2351 and BBX-1024DS(R) backboxes.
- BAT-12V26A (26 AH) batteries will fit into the MMX-BC-160R Battery Cabinet.

Use of alternative batteries may result in failure of the panel to meet agency and regulatory requirements, and may result in shortened battery life. Batteries should be tested regularly, and replaced at least every three years.

18.0 Warranty and Warning Information

Terms & Interpretation

In this document the term **MGC System** refers to all fire alarm, nurse call, and building automation products manufactured by Mircom Group of Companies, Mircom Technologies Ltd., MGC Systems Corp or subsidiaries and affiliates and includes specific systems such as MiCare™, OpenBAS™, and FlexNet™. Moreover, the term **MGC System** extends to cover all component parts and software used within such products.

Warning Please Read Carefully

All **MGC Systems** are subject to terms and conditions of sale as follows:

Note to Installers

This warning contains vital information. As the only individual in contact with system users, it is your responsibility to bring each item in this warning to the attention of the users of this MGC System. Failure to properly inform system end-users of the circumstances in which the system might fail may result in over-reliance upon the system. As a result, it is imperative that you properly inform each customer for whom you install the system of the possible forms of failure.

System Failures

All **MGC Systems** have been carefully designed to be as effective as possible. However, there are circumstances where they may not provide protection. Some reasons for system failure include:

Inadequate Installation

All **MGC Systems** must be installed in accordance with all the applicable codes and standards in order to provide adequate protection. National standards require an inspection and approval to be conducted by the Local Authority Having Jurisdiction following the initial installation of the system and following any changes to the system. Such inspections ensure installation has been carried out properly.

Inadequate Testing

Most problems that would prevent an alarm a **MGC System** from operating as intended can be discovered by regular testing and maintenance. The complete system should be tested by the Local Authority Having Jurisdiction immediately after a fire, storm, earthquake, accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

IMPORTANT NOTE: End-users of the system must take care to ensure that the system, batteries, telephone lines, etc. are tested and examined on a regular basis to minimize system failure.

System Users

It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

A **MGC System** may not function as intended during an emergency situation where the user is unable to operate a panic or emergency switch by reason of permanent or temporary physical disability, inability to reach the device in time, unfamiliarity with the correct operation, or related circumstances.

Insufficient Time

There may be circumstances when a **MGC System** will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time enough to protect the occupants or their belongings.

Moreover, smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Power Failure

Some **MGC System** components require adequate electrical power supply to operate. Examples include: smoke detectors, beacons, HVAC, and lighting controllers. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage **MGC Systems** or other electronic equipment. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

Battery Failure

If the **MGC System** or any device connected to the system operates from batteries it is possible for the batteries to fail. Even if the batteries have not failed, they must be fully charged, in good condition, and installed correctly.

MGC Systems with wireless transmitters use replaceable batteries. The system is designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

Physical Obstructions

Motion sensors that are part of a **MGC System** must be kept clear of any obstacles which impede the sensors' ability to detect movement. Signals being communicated by a **MGC System** may not reach the receiver if an item (such as metal, water, or concrete) is placed on or near the radio path. Deliberate jamming or other inadvertent radio signal interference can also negatively affect system operation.

Moreover, **MGC Systems** may fail to operate as intended if motion, heat, or smoke sensors are not triggered. Sensors in a fire system may fail to be triggered when the fire is in a chimney, walls, roof, or on the other side of closed doors; and, smoke and heat detectors may

not detect smoke or heat from fires on another level of the residence or building. In this situation the control panel may not alert occupants of a fire.

Sensors in a nurse call system may fail to be triggered when movement is occurring outside of the motion sensors' range. For example, if movement is occurring on the other side of closed doors or on another level of the residence or building the motion detector may not be triggered. In this situation the central controller may not register an alarm signal.

Other Impairments

Similarly, Alarm Notification Appliances such as sirens, bells, horns, or strobes may not warn or waken a sleeping occupant if there is an intervening wall or door. It is less likely that the occupants will be alerted or awakened when notification appliances are located on a different level of the residence or premise.

Audible notification appliances may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners, appliances, or passing traffic. Audible notification appliances, however loud, may not be heard by a hearing- impaired person.

Software

Most **MGC Systems** contain software. With respect to those products, MGC does not warrant that the operation of the software will be uninterrupted or error-free or that the software will meet any other standard of performance, or that the functions or performance of the software will meet the user's requirements. MGC shall not be liable for any delays, breakdowns, interruptions, loss, destruction, alteration or other problems in the use of a product arising out of, or caused by, the software.

Telephone Lines

Telephone service can cause system failure where telephone lines are relied upon by a **MGC System**. Alarms and information coming from an **MGC System** may not be transmitted if a phone line is out of service or busy for a certain period of time. Alarms and information may not be transmitted where telephone lines have been compromised by criminal tampering, local construction, storms or earthquakes.

Component Failure

Although every effort has been made to make this **MGC System** as reliable as possible, the system may fail to function as intended due to the failure of a component.

Security and Insurance

Regardless of its capabilities, no **MGC System** is a substitute for property or life insurance. Nor is the system a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

Moreover, building automation systems produced by MGC are not to be used as a fire, alarm, or life safety systems.

Warranty

Limited Warranty

Mircom Technologies Ltd., MGC Systems Corp. and MGC System International Ltd. together with their subsidiaries and affiliates (collectively, MGC) warrants the original purchaser that for a period of three years from the date of manufacture, proprietary manufactured product shall be free of defects in materials and workmanship, under normal use. During the warranty period, MGC shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labor and materials. **Non-proprietary, third party or OEM product shall be warranted in accordance with the warranty period of the manufacturer. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer.** The original owner must promptly notify MGC in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, MGC shall not be responsible for any customs fees, taxes, or VAT that may be due.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of MGC such as excessive voltage, mechanical shock or water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by MGC);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained. NOTE: Unless specific pre-authorization in writing is obtained from MGC management, no credits will be issued for custom fabricated products or parts or for complete fire alarm system. MGC will at its sole

option, repair or replace parts under warranty. Advance replacements for such items must be purchased.

Note: MGC's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities. MGC neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, or to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Out of Warranty Repairs

MGC will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which MGC determines to be repairable will be repaired and returned. A set fee which MGC has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which MGC determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

The foregoing information is accurate as of the date of publishing and is subject to change or revision without prior notice at the sole discretion of the Company.

WARNING: MGC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

NOTE: UNDER NO CIRCUMSTANCES SHALL MGC BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, LOSS OF PROFITS, LOSS OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF SUBSTITUTE OR REPLACEMENT EQUIPMENT, FACILITIES OR SERVICES, DOWN TIME, PURCHASER'S TIME, THE CLAIMS OF THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY.

MGC MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS GOODS DELIVERED, NOR IS THERE ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, EXCEPT FOR THE WARRANTY CONTAINED HEREIN.

