


- Installation Instruction for GK-019:
1. Remove outside frame A and stick it around the front edge of the MRM-700WP.
  2. Remove center pieces B of gasket and place on the back of the pull station covering all the holes.

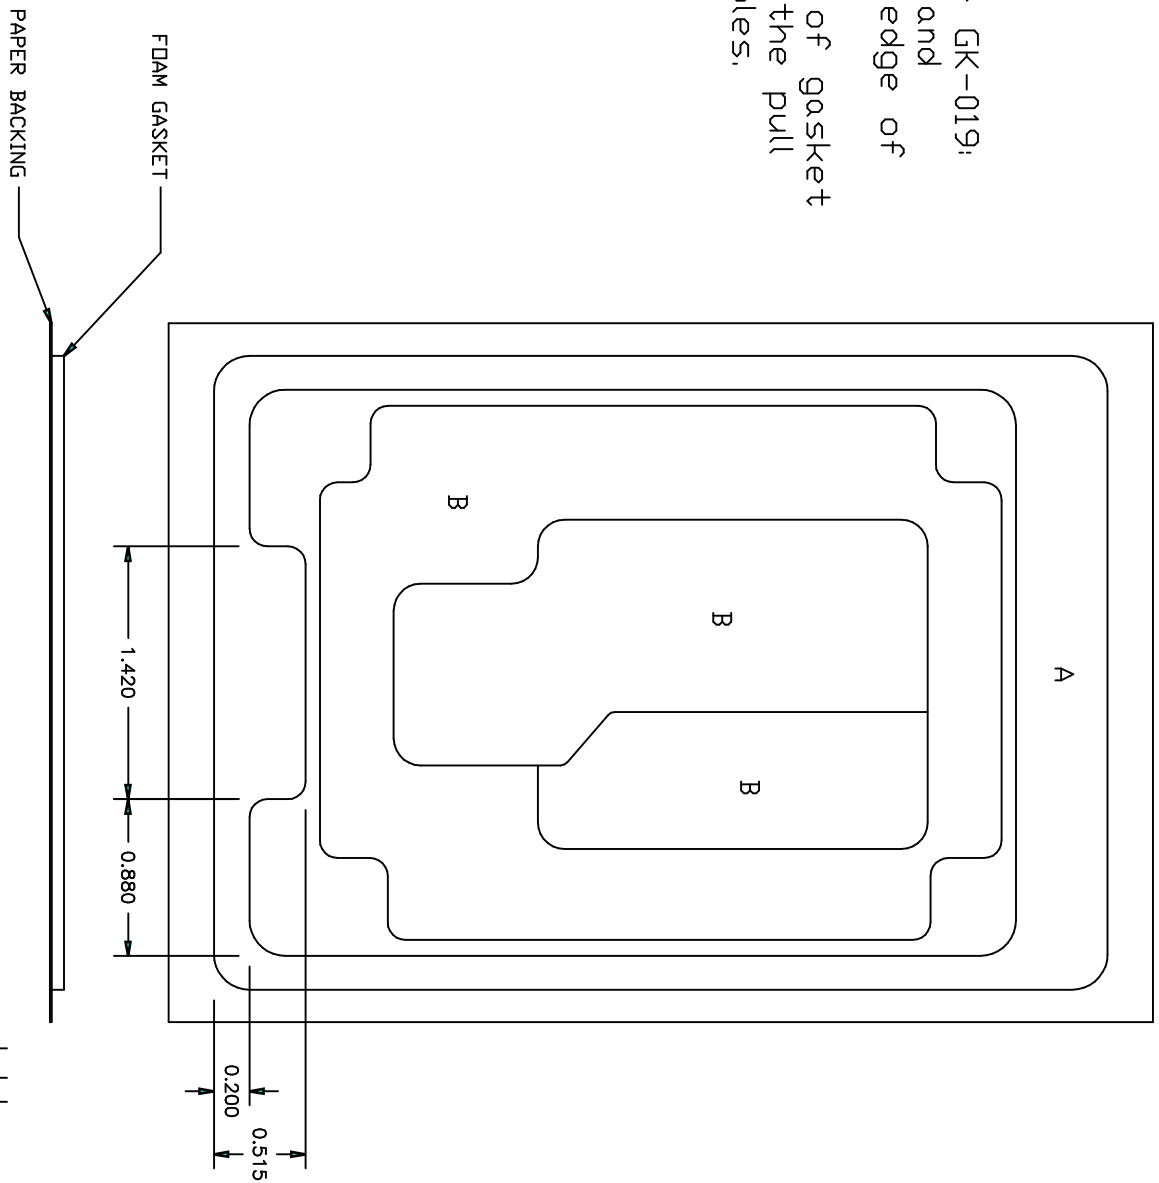

**NOTE:**  
 1. MATERIAL: 0.070" THICK FOAM GASKET (BLACK)

DO NOT SCALE DRAWING

<b>SECUTRON</b>		TITLE: INSTALLATION INSTRUCTION FOR GK-019 USED ON: MRM-700WP DWG#: LT-1016SSEC
TOLERANCE: X ± .050 IN. XX ± .020 IN. XXX ± .010 IN.	SCALE: 1:1	APPROVED:
REV:   01   DATE: 23MAR2006	DRAWN: NMT	REMARKS: