

Ferrite Bead Installation Instructions

The following instructions illustrates how to install a Ferrite Bead onto field wiring for building system equipment. Loop field wiring through the Ferrite Bead 3 times as shown in figure 4 below.


1.

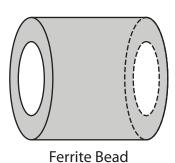

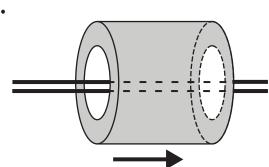


Thread wire through Ferrite Bead

3.

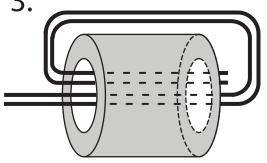

Wrap wire around and through Ferrite Bead until there are three loops as shown in step 4.

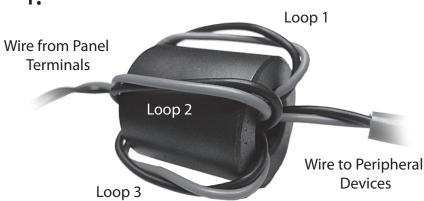

Continue wiring to peripheral devices.

NOTE:

- 1. If shielded cable is used, then the shield and shield drain wire must not pass through the bead.
- 2. See installation instructions or wiring diagrams for your equipment for specific wiring instructions.
- 3. Neatly dress and secure all wiring. Adhere to all applicable electrical regulations.