



**PLACE MR-2312-FT TRIM RING OVER BACKBOX**

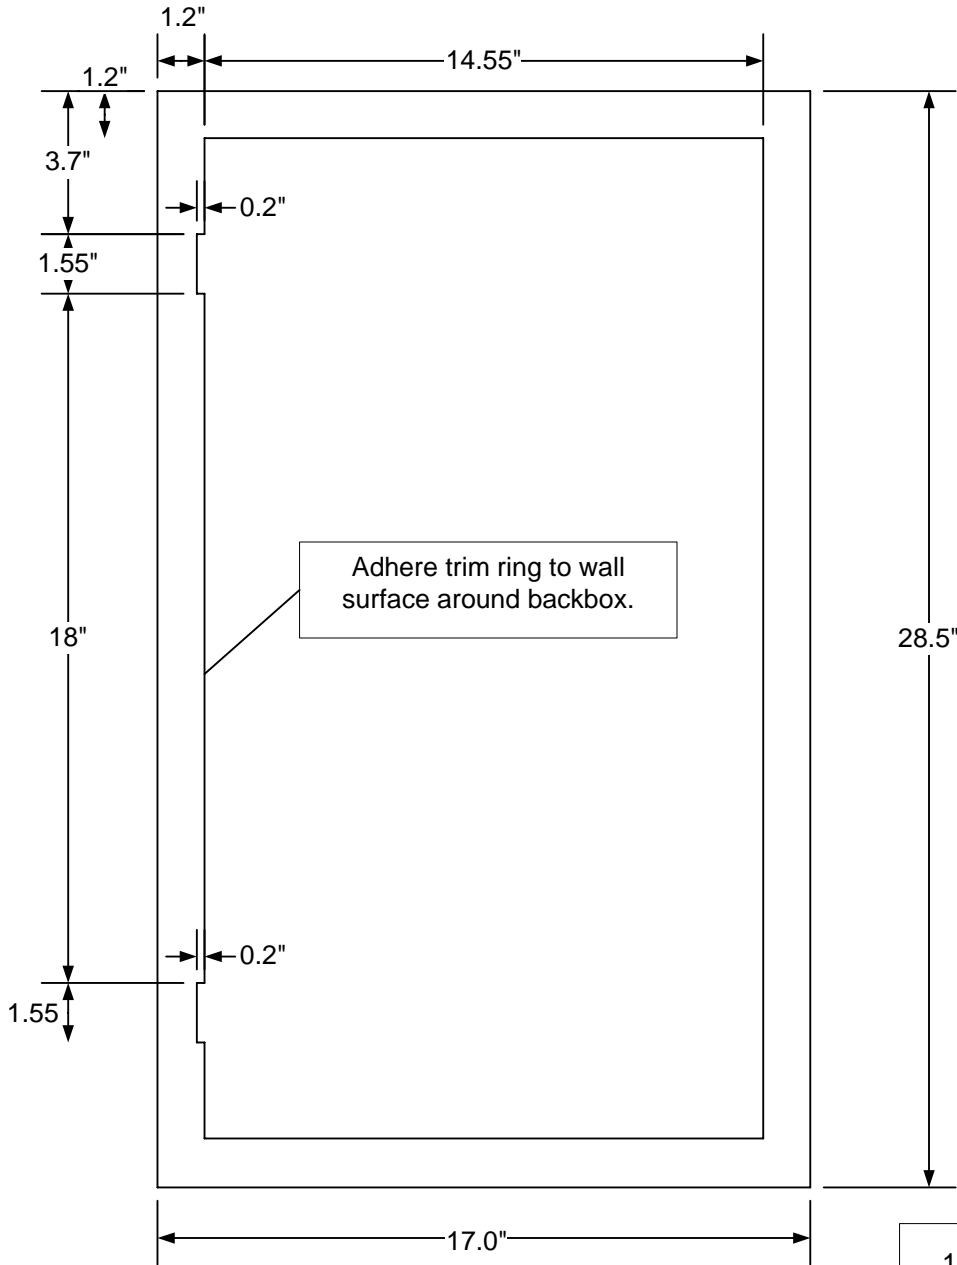

Adhere trim ring to wall surface around backbox.

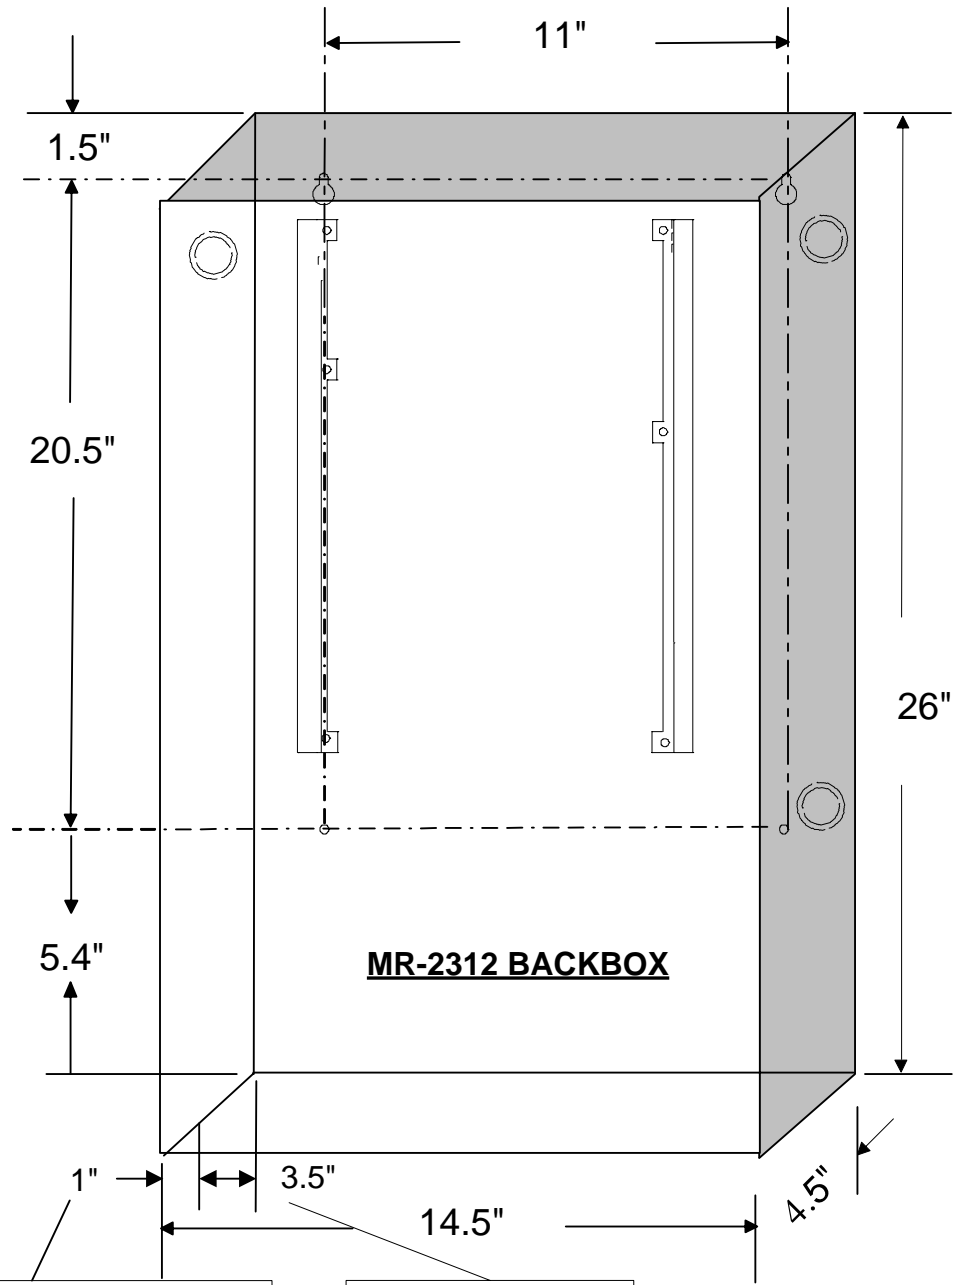

1" is the minimum depth above the wall required for semi-flush mounting using the flush trim ring

3.5" is the maximum depth for semi-flush mounting using the flush trim ring

