



MR-2100 & MR-2200

Fire Alarm Control Panel



Installation Manual

Contents

1.0 Technical Information.....	1
1.1 Introduction	1
1.2 Features.....	1
1.3 Codes & Standards.....	2
1.4 Applications & Services	2
1.5 General Installation Requirements.....	2
1.6 System Verification	3
1.7 System Components.....	4
2.0 Technical Specifications	9
2.1 Electrical Specifications	9
3.0 Installation	11
3.1 Unpacking the MR-2100 or MR-2200	11
3.2 Mounting and Assembling the MR-2100/MR-2200	11
3.3 Internal Assembly	14
3.4 Wiring.....	17
3.5 Maximum Wiring Length for Addressable Circuits	21
3.6 Maximum Wiring Length for Bell Circuits	22
4.0 Appendix A: Compatible Addressable Devices	23
5.0 Appendix B: Battery Calculations & Compatible Batteries.....	24
5.1 Battery Calculation Worksheet.....	24
5.2 Battery Selection Calculations	26
6.0 Appendix C: Compatible Synchronized Notification Appliances.....	27
7.0 Warranty & Warning Information.....	28

List of Tables

Table 1 AC Input	9
Table 2 Battery Power (Use sealed lead acid batteries only!)	9
Table 3 Addressable Input (Signaling Line Circuit)	9
Table 4 Notification Appliance Circuit Output Circuits	10
Table 5 Function Relay Output Circuits	10
Table 6 Power Outputs	10
Table 7 Communications Ports	10
Table 8 Environmental Specifications	10
Table 9 Maximum Wiring Length for Addressable Circuits	21
Table 10 Maximum Wiring Length for Bell Circuits	22
Table 11 Secutron Compatible Addressable Devices	23

List of Figures

Figure 1 Knockouts and Mounting Holes	13
Figure 2 Power Limited Wiring Diagram	15
Figure 3 Power Limited Wiring, City Module	16
Figure 4 AC Power Wiring Diagram	17
Figure 5 External Battery Cabinet Wiring	18
Figure 6 Class B Wiring	19
Figure 7 Class A Circuit	19
Figure 8 Class B NAC Wiring	20
Figure 9 Class A NAC Wiring	20
Figure 10 Function Relay Wiring	20
Figure 11 EVAX System Wiring	21

1.0 Technical Information

1.1 Introduction

The MR-2100/MR-2200 Fire Alarm Control Panel (FACP) is the heart of a sophisticated microprocessor based fire detection system. Meeting the demands of economy and capability, these modular panel offer support for one or two loops of up to 198 devices on each loop.

Optional modules mount directly to the chassis. Modules are available that provide additional NAC output circuits, function relay output circuits, annunciation, etc. This modular approach to system design virtually guarantees that as your needs -- and applicable local codes -- evolve, your FACP can change along with them.

Networking can be utilized to provide additional input circuits, visual zones, bell circuits and relays. Up to 254 units (FACPs and/or annunciators) can be connected to form the Class A Style 7 (DCLR) network loop.

Networking is limited to two nodes for ULC applications.

Programming the MR-2100/MR-2200 has two components: Input circuit programming and special features, such as day/night mode, et cetera, are done from an externally generated database produced on a Windows based PC, while system parameters are programmed from the LCD and keypad.

This manual covers the installation of the MR-2100 and MR-2200 Fire Alarm Control Panels. For Programming and Operating Instructions, please refer to the appropriate manuals.

1.2 Features

The MR-2100/MR-2200 includes the following features:

- MR-2100: One (1) Addressable Input (SLC) circuit, Class A (Style 6) or Class B (Style 4).
- MR-2200: Two (2) Addressable Input (SLC) circuits, Class A (Style 6) or Class B (Style 4).
- Two (2) Notification Appliance Circuits (NAC), Class A (Style Z) or Class B (Style Y). Expandable to eight (8) NAC with optional module MRNC2 (groups of 2).
- Four (4) Programmable function relays, Form C. Expandable to sixteen (16) relays with optional module MRRL4 (groups of 4).
- Two (2) Auxiliary power outputs.
- Optional peer-to-peer networking with existing Secutron MR network.
- Total 24V Power Supply: 2.6A, expandable to 8.2A.
- Integral battery charger.
- LCD/LED system status display, with optional LED zone display.
- Surface/flush mount cabinet with dead-front construction, capable of holding two 12Ah batteries with removable door for easy installation.
- Removable terminal blocks for easy wiring.
- Operating program and database can both be uploaded/downloaded by PC.

1.3 Codes & Standards

This fire alarm control panel meets the requirements of the following codes and standards:

- NFPA 72 - National Fire Alarm Code, 1999 Edition
- UL 864 Standard for Control Units for Fire Protective Signaling Systems
- ULC-S527 Standard for Control Units for Fire Alarm Systems
- Applicable Local and State Building Codes
- NFPA 70 - National Electric Code
- ULC-S524 Installation of Fire Alarm Systems

1.4 Applications & Services

This fire alarm control panel is listed for use in the following applications:

- Local with networking for UL (only) installations
- Auxiliary (Requires MRCTYB Reverse Polarity Municipal Box Module configured for Municipal Master Box Operation)
- Central Station reporting (using the optional MRDL Dual Line Dialer-Communicator)
- Remote Station reporting (Requires MRCTYB Reverse Polarity Municipal Box Module configured for Reverse Polarity Operation or MRDL Dialer)

And for the following types of service:

- M - Manual
- A - Automatic
- SS - Sprinkler Supervisory
- WF - Waterflow

1.5 General Installation Requirements

The information provided with this unit is intended as a guide. Installation of this equipment, optional system components, alarm initiating devices and notification appliances must follow the manufacturer's guidelines as contained in their respective installation documents, all applicable codes and the instructions of the Local Authority Having Jurisdiction.

Manufacturer's Documents

When installing the fire alarm control panel, refer to this manual. When installing optional system components refer to the installation documents included with those components. When installing compatible alarm initiating devices or notification appliances, refer to the installation documents included with those products.

Field Wiring

Field wiring recommendations in this document are intended as guidelines. All field wiring must be installed in accordance with the applicable national electrical codes, with all relevant local codes and standards, and the Local Authority Having Jurisdiction.

Compatible Devices

Use UL or ULC listed smoke detectors and notification devices that are compatible with the fire alarm control panel from the lists included in this manual.

1.6 System Verification

The complete fire alarm system must be verified for proper installation and operation when:

- The initial installation is ready for inspection by the Local Authority Having Jurisdiction;
- Any system component is added, changed or deleted;
- Any programming changes are made;
- System wiring has been altered or repaired;
- System failure due to the external influences such as lightning, water damage or extended power outages has occurred.

Standby Power

The fire alarm control panel uses sealed lead-acid rechargeable batteries as a secondary power source in the event of a main power failure. The required capacity of the standby batteries must be calculated using the charts and tables within this manual for the period as required by national or local codes and standards. Even though the calculation table within this manual includes a safety margin, lead-acid batteries commonly used for standby can have variable capacity as a result of age and ambient conditions. Periodic inspection for damage and the batteries' ability to support the attached equipment is highly recommended.

1.7 System Components

Basic System

A basic system consists of the Back Box, Main Board, Display Board and one transformer. Canadian versions also include an Eight Zone LED Module.

Back Box

The enclosure includes the back box, outer door, dead front door and hardware plate. It can be flush or surface mounted without requiring additional hardware.

Both the outer door and dead front doors are quickly removable using pin-hinges. The hardware plate holds the main printed circuit board and transformer(s). The enclosure holds two transformers, one communicator module (Dialer or City Connect) and up to three NAC or Relay expander modules.



Transformer

The FACP is shipped with a 120V/240V transformer.

The total NAC power can be increased by adding a second transformer of the same voltage. The expansion transformer is available as a separate order item under model number MR-XPS.



MR-XPS

Main Board

The MR-2100/MR-2200 Main Board contains the system power supply, master CPU and memory, two Notification Appliance Circuits (NACs), four Auxiliary Function Relays, two Auxiliary power points, one or two Signal Line Circuits (SLCs), and communications ports for the Display Board and optional equipment.

The MR-2100 Main Board has one SLC for connecting System Sensor Addressable devices. The MR-2200 Main Board has 2 SLCs. Each SLC can support 198 total devices, 99 detectors/sensors and 99 control/monitor type devices.

Replacement Main Boards are available under the following:


MR-2100 Main Board- RB-MR-2100

MR-2-200 Main Board- RB-MR-2200



Display Board

The Display Board provides LED and LCD status annunciation, hotkeys, and keypads for message retrieval and programming. A replacement Display can be ordered under RB-MR-2201.

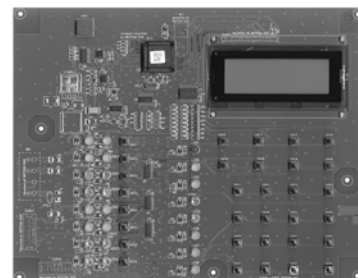

Optional (Internal) Components

NAC Expander Board - MRNC2

The NAC Expander Board provides two additional NAC output circuits. A ribbon cable connects this module. Any combination of NAC and Relay expanders can be added (to a maximum of three modules total) within the basic enclosure.


Refer to the *MRNC2 NAC Expander Installation Instructions* for more information.



Relay Expander - MRRL4

The Relay Expander provides four additional function relay output circuits. A ribbon cable connects this module. Any combination of NAC and Relay expanders can be added (to a maximum of three modules total) within the basic enclosure.


Refer to *MRRL4 Relay Expander Installation Instructions* for more information.

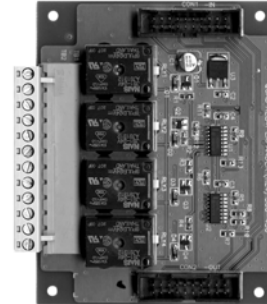

Eight Zone LED Module - MRLD8

The MRLD8 module provides eight zones of LED annunciation. The LED strips mount to the dead-front door and connect to the RB-MR-2201 display board. Up to three of these modules can be added to the display board RB-MR-2201.

Refer to the *MRLD8 Eight Zone Expansion Module Installation Instructions* for more information.

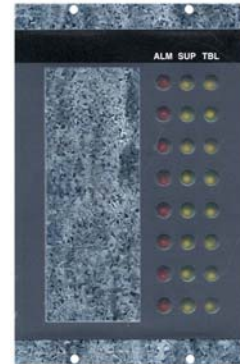

DACT Module - MRDL

The optional Digital Alarm Communicator Transmitter (DACT) module is added to the system to provide Remote Station monitoring of system alarm, trouble, and supervisory conditions.

Use of the DACT module requires that two telephone lines be provided for connection to the DACT. Service must be arranged with a Central Station monitoring facility for Remote Station Service.

Refer to the *MRDL Installation Instructions* for more information.

MRDL not to be used for ULC applications.



MR22NTWR

The MR22NTW provides the network interface between the MR-2200 and the rest of the control units on a peer-to-peer network. This module plugs directly into the MR-2200 main board.

There are four distinct versions of this network interface module. For information on wiring each assembly refer to the MR22NTW Network Card Installation Instructions. Secutron Network cards meet requirements for UL864 only.

The MR22NTWR version features two standard ports that provide direct wire connectivity between multiple FACPs. The MR22NTWR can also be used for creating a Fiber-Optic connection between panels using two MR-D1010 Fiber Optic Modules.



MR22NTWR1

The MR22NTWR1 provides the network interface between the MR-2200 and the rest of the control units on a peer-to-peer network. This module plugs directly into the MR-2200 main board.

The MR22NTWR1 version features Port 1 as RS232 and Port 2 as standard, RS-232 serial ports are used for connecting the MR-D1010 Fiber Optic Module.



MR22NTWR2

The MR22NTWR2 provides the network interface between the MR-2200 and the rest of the control units on a peer-to-peer network. This module plugs directly into the MR-2200 main board.

The MR22NTWR2 version features Port 1 as standard and Port 2 as RS232.



MR22NTWR12

The MR22NTWR12 provides the network interface between the MR-2200 and the rest of the control units on a peer-to-peer network. This module plugs directly into the MR-2200 main board.


The MR22NTWR12 version features Port 1 and Port 2 as both RS232.



Reverse Polarity Municipal Box - MRCTYB

The optional MRCTYB can be configured for remote Station (reverse polarity) or Municipal Master (local energy) service. The MRCTYB can transmit alarm, trouble, and supervisory conditions when configured for reverse polarity operation. Alarm condition only is reported when configured for Municipal Master operation.

Refer to the *MRCTYB Reverse Polarity Municipal Box (RPMB) Module Installation Instructions* for more information.

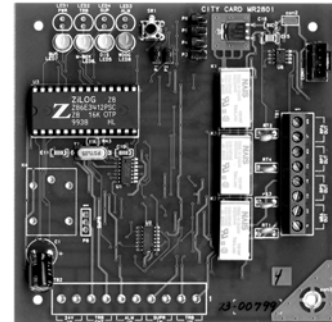

Compatible Products

MR-2644

The MR-2644 is a status annunciator with Liquid Crystal Display, general system status lights, and general function keys.



MR-2614

The MR-2614 is a status annunciator with LED zone display, general system status lights, and general function keys.



MR-D1010R

The MR-D1010R is a Fiber Optic Module that can be used with the MR22NTW to create a network connected by fiber.

Refer to the MR-D101R Fiber Optic Module Installation Instructions.

MR-2900

The MR-2900 is a networkable fire alarm panel with both addressable and conventional input capability.

Refer to the MR-2900/MR-2920 Fire Alarm Control Unit Installation Manual.

MR-2944

The MR-2944 is a network annunciator with Liquid Crystal Display and/or LED Zone display, general system status lights, and general function keys.

Refer to the MR-2944 Annunciator Unit Installation Manual.

Note: Not to be used for ULC applications.

Testing Circuit Supervision

Use the following procedures in the table below to confirm that SLCs and NACs are supervising for opens, shorts, and grounds. The right column in this table shows the LEDs that illuminate when an open, short, or ground occurs on a specific circuit. AUX is supervised for shorts and earths only.

Open (NACs) -- Remove the end-of-line and make circuit impedance infinite.	NAC illuminates the Trouble LED and the NAC Trouble LED flashes
Open (SLCs) -- Break the line anywhere in the loop.	SLC illuminates the Trouble LED
Short -- Apply a zero ohm jumper across the circuit.	SLC illuminates the Trouble LED NAC illuminates the Trouble LED and the NAC Trouble LED flashes
Earth Ground (NACs) -- Place a 10K Ω or smaller value resistor from the supervised wiring to Earth Ground.	AUX illuminates the Trouble LED
Earth Ground (SLCs) -- Place a 100 Ω or smaller value resistor from the supervised wiring to Earth Ground.	If an Earth Ground occurs on any circuit the Fault and Trouble LEDs both illuminate

2.0 Technical Specifications

2.1 Electrical Specifications

Table 1 AC Input

Circuit / Model / Item	Rating
Standard Primary AC Input 1	
MR2100R, MR2200R	120V, 60Hz, 1.03 A maximum 240V, 50Hz, 0.51A maximum
Optional Primary AC Input 2	
MR2100R, MR2200R	120V, 60Hz, 2.5 A maximum 240V, 50Hz, 1.26A maximum

Table 2 Battery Power (Use sealed lead acid batteries only!)

Circuit / Model / Item	Rating
Battery Charger	Current limited float charger
Float charge:	27.5 VDC
Charging current:	2.7A maximum (no auxiliary load), 1.7A nominal (0.5A on each AUX)
Maximum Battery Capacity	
Batteries larger than 12Ah require the use of a listed battery cabinet.	12Ah (max. internal to cabinet) 35Ah (Largest size battery that can be used, MR-297 or MR-2978R, External Battery Cabinet required)

a. Maximum current available to the battery charging circuit is limited by the power draw from additional devices. As the AUX power circuits are loaded, or additional modules are added, the amount of current available for charging batteries decreases.

b. Reference Appendix B for Battery Calculations and compatible batteries.

Table 3 Addressable Input (Signaling Line Circuit)

Circuit / Model / Item	Rating
Voltage	24Vdc nominal, 27.5Vdc maximum
Maximum loop length	Refer to 3.5 <i>Maximum Wiring Length for Addressable Circuits</i> on page 21
Maximum loop current	450mA (momentary)
Maximum # of devices per loop	198 total (99 detector heads, 99 control/monitor modules)

Table 4 Notification Appliance Circuit Output Circuits

Circuit / Model / Item	Rating
MR-2100/MR-2200 Main board and MRNC2 NAC Expander	Supervised and power limited
NAC1, NAC2*	24V full wave rectified DC, 2.0A maximum, power limited.
End-of-line resistor (EOLR) (for Class B wiring)	10kΩ, 1/4W, 5%
Maximum loop length	Refer to <i>3.6 Maximum Wiring Length for Bell Circuits</i> on page 22
NAC Current	1 MR-XPS NACs + AUX ≤ 2.5A, 2 MR-XPS: 7A

Table 5 Function Relay Output Circuits

Circuit / Model / Item	Rating
MR-2100/MR-2200 Main board and MRRL4 Relay Expander	
RELAY1, RELAY2, RELAY3, RELAY4	Form C contact, 2A, 30Vdc resistive, power limited source only.

Table 6 Power Outputs

Circuit / Model / Item	Rating
MR-2100/MR-2200 Main board	
AUX (x2)	24Vdc, filtered, regulated and power limited, 500mA maximum rated current (each), 600mVpp ripple.

Table 7 Communications Ports

Port	Rating
COM1, COM2 (Secutron MR peer-to-peer network, redundant DCLR)	10km (33,000 feet) maximum distance between nodes, minimum 28 AWG wires. Programmable baud rate with up to 200 panels at 1200 bps, 254 panels at 2400, 4800, and 9600 bps.
ANN (annunciator port)	Fixed baud rate 4800bps;(see MR-2644 instructions for wiring distances)
CON4 (Dialer/City Module Port)	Fixed baud rate 4800bps
J1 (Service and serial printer port)	Fixed baud rate 9600bps; 6m (20ft) maximum distance

Table 8 Environmental Specifications

Condition	Rating
Operating Temperature	0°C – 49°C / 32°F – 120°F
Humidity	93% RH non-condensing

3.0 Installation

3.1 Unpacking the MR-2100 or MR-2200

The basic MR-2100/MR-2200 package includes the following components:

Backbox

Outer door including:

- Lock
- Display window

Inner dead-front door including:

- Display PCB
- Operating instruction insert
- Hotkey label insert
- Wiring label

Hardware backplate including:

- Main PCB
- Transformer
- Ribbon Cable for expansion modules
- Plastic Shield

Hardware pack including:

- 2 x NAC EOL resistors
- Door keys (taped to outside of cabinet)

Installation manual and operating manual

3.2 Mounting and Assembling the MR-2100/MR-2200

Note: All applicable codes and standards should be considered. Specific reference should be made to NFPA 72, or ULC-S524 and CEC Part 1 Section 32.

3.2.1 Surface and Flush Mounting

The MR-2100/MR-2200 can be mounted in either flush or surface mount installations. Before installing the MR-2100/MR-2200 Panel the following should be considered.

1. Determine a suitable location for mounting the FACP. Keep in mind that surrounding walls, fixtures, must not hinder access to internal components. etc.
2. Determine the size and location of conduit entrances. The Backbox provides various knockout locations, however should it be necessary to cut additional conduit entrances

the electronics **must** be removed to avoid metal chip contamination. Reference the 'Remove Electronics' paragraph on the following page.

Note: Removing the inner door, outer door, and plate-mounted electronics is recommended in all MR-2100/MR-2200 installations.

3. The enclosure must be mounted to provide a 135° (minimum) angle of rotation of the outer door to insure easy removal or assembly.
4. Mark placement of mounting hardware, drill holes and install plugs (if necessary).
5. Secure the FACP to the wall using hardware suitable to the wall construction. Support backbox in place while inserting hardware and ensure that the backbox is level and plumb before tightening.

Note: Please see the detailed diagram (Figure 1) for location of knockout and mounting holes.

3.2.2 Replacing the Outer Door

1. Unlock the Door with the key provided.
2. Detach the grounding strap (Qty: 2) from the backbox by removing the #6 flange nuts (Qty: 2) that are attached to the studs on the backbox. Reattach the #6 flange nuts (Qty: 2) to the studs to prevent them from getting lost or discarded.
3. Open the Door to approximately 135° and lift up to remove the outer door from the backbox, store door in a safe place.

3.2.3 Removing the MR-2100/MR-2200 Electronics

A. Removing the Inner Door (Dead Front)

1. Remove the #6 flange nuts (Qty: 2) that lock down the inner door. Reattach the #6 flange nuts (Qty: 2) to the studs to prevent them from getting lost or discarded.
2. Open the inner door and disconnect the display harness from either the Display Board or the Main Board.
3. Detach the grounding strap (Qty: 1) from the backbox by removing the #6 flange nut (Qty: 1) that is attached to the stud on the backbox. Reattach the #6 flange nut (Qty: 1) to the stud to prevent them from getting lost or discarded.
4. Open the inner door approximately 90° and lift up to remove the inner door, store door in a safe place.

B. Removing the Back Plate Electronics

1. Detach the harness from the Display Board.
2. Remove the #8 flange nuts (Qty: 4) from the studs on the backbox holding onto the back plate. Remove back Plate Electronic panel and store in a safe place. Reattach the #8 flange nuts to the studs to prevent them from getting lost or discarded.

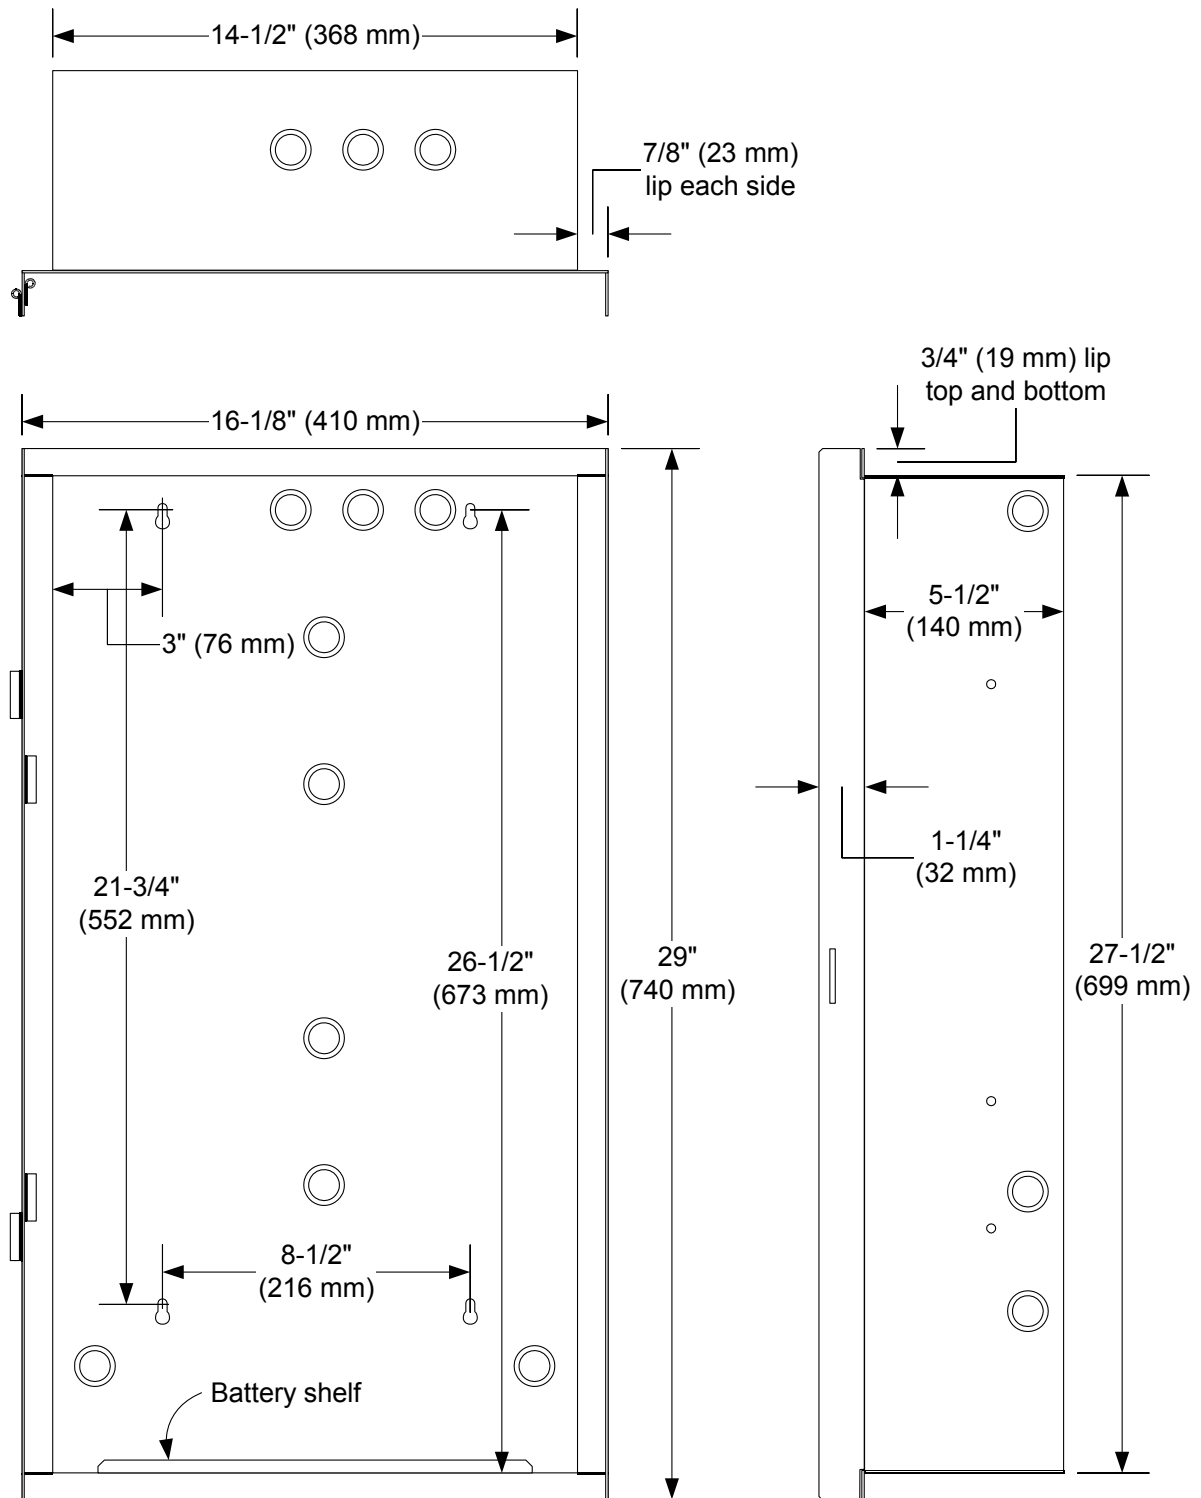


Figure 1 Knockouts and Mounting Holes

3.3 Internal Assembly

- Attach AC wiring to the AC Terminal Block (see Figure 4 on page 17). Attach green ground wire to ground screw on backplate.

Notes:



- Do not apply power to the unit until all doors, cables and wiring are installed and inspected.
 - This AC circuit must be a separately fused 20A dedicated circuit. It is recommended that the breaker be locked in the OFF position during installation.
- Place the batteries in the bottom right of the back box or into the battery box. DO NOT ATTACH BATTERIES UNTIL AFTER THE AC POWER HAS BEEN TURNED ON.
 - Attach conduit to the back box as required using knockouts provided. Attach field wiring to the system. The section below describes how each type of circuit is to be wired. Attach conduit to the back box as required using knockouts provided. It is recommended that input circuit wiring be physically separated from output circuit wiring.
 - Have the Unit inspected before applying power. Correct and re-inspect any problems found.
 - Turn on the AC power to Unit. If no problems occur other than Low Battery, attach the batteries to the wires provided, the black wire to the black (negative) terminal and the red wire to the red (positive) terminal. If the batteries need charging, the Low Battery condition will remain until they are charged.
 - Figure 2 shows the areas of the cabinet in which power limited/non-power limited wiring may be routed.
Note: The location labeled Option Card 1 is not for the City (MRCTYB). There is a location above Option Card 1 that is used for this card. Figure 3 shows the routing of power limited wiring to a city module.

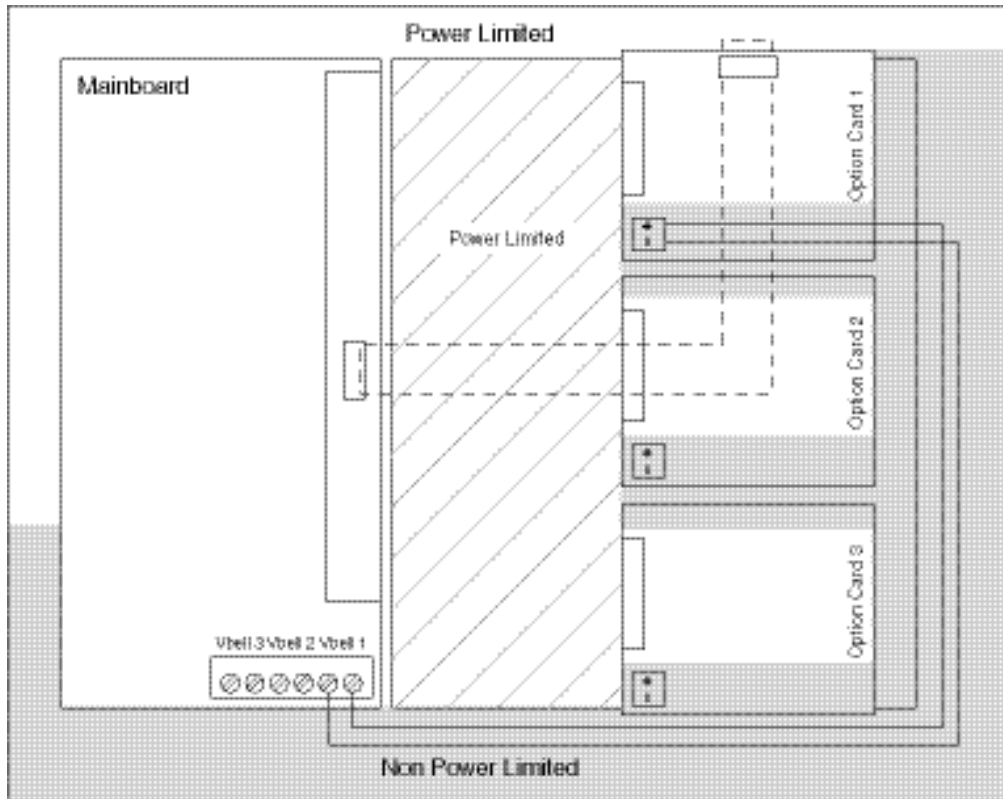


Figure 2 Power Limited Wiring Diagram

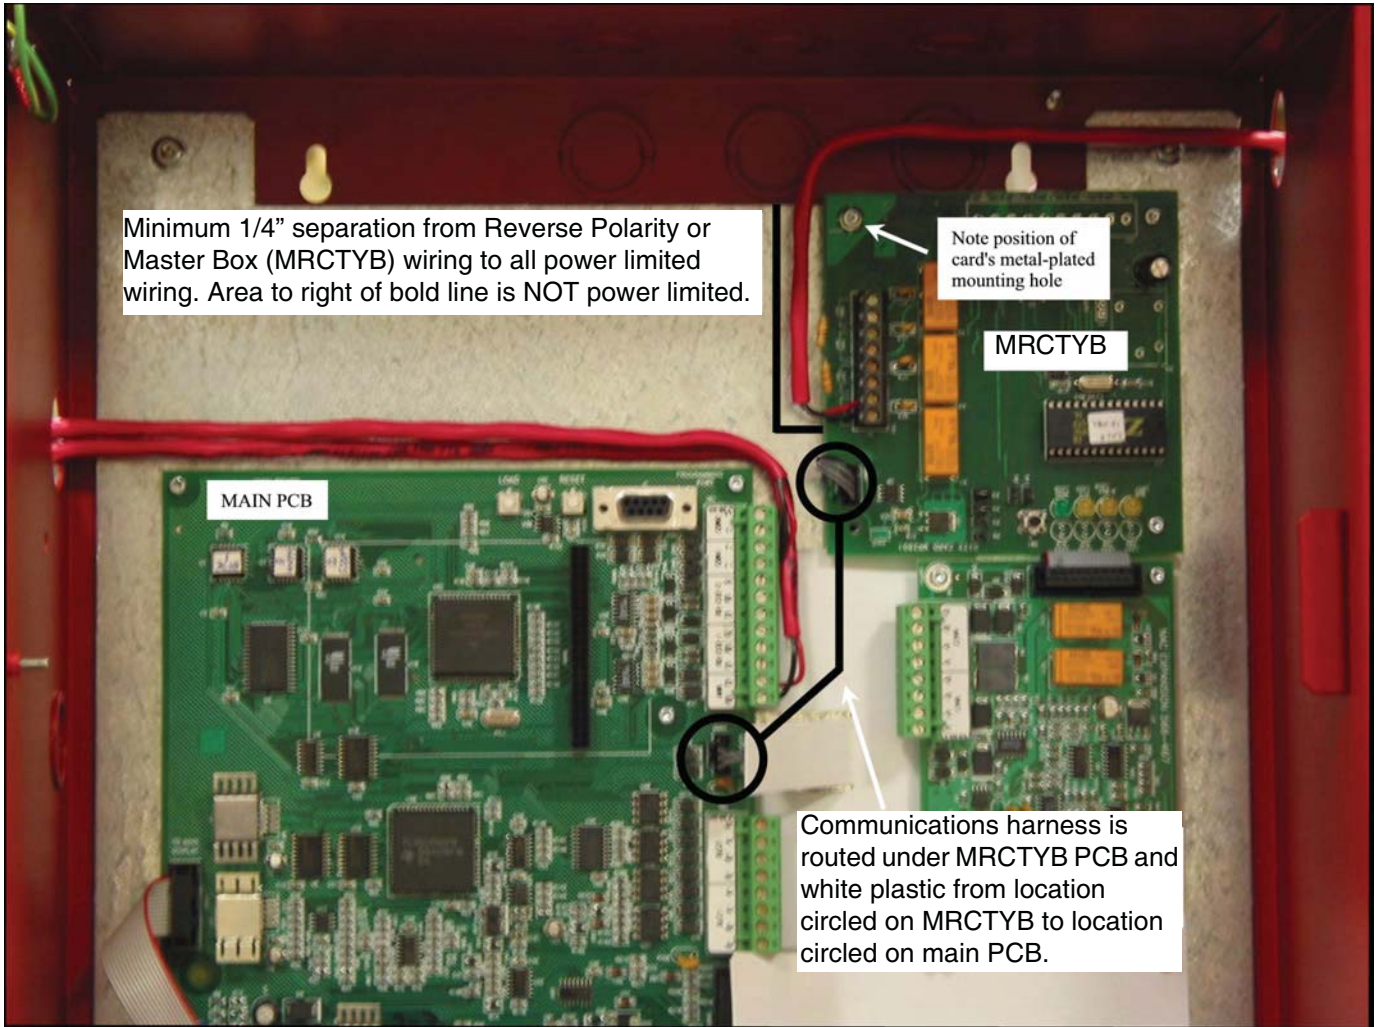


Figure 3 Power Limited Wiring, City Module

3.4 Wiring

3.4.1 Power Connections

The Main Control Unit requires an AC power supply. This supply is connected as shown below:

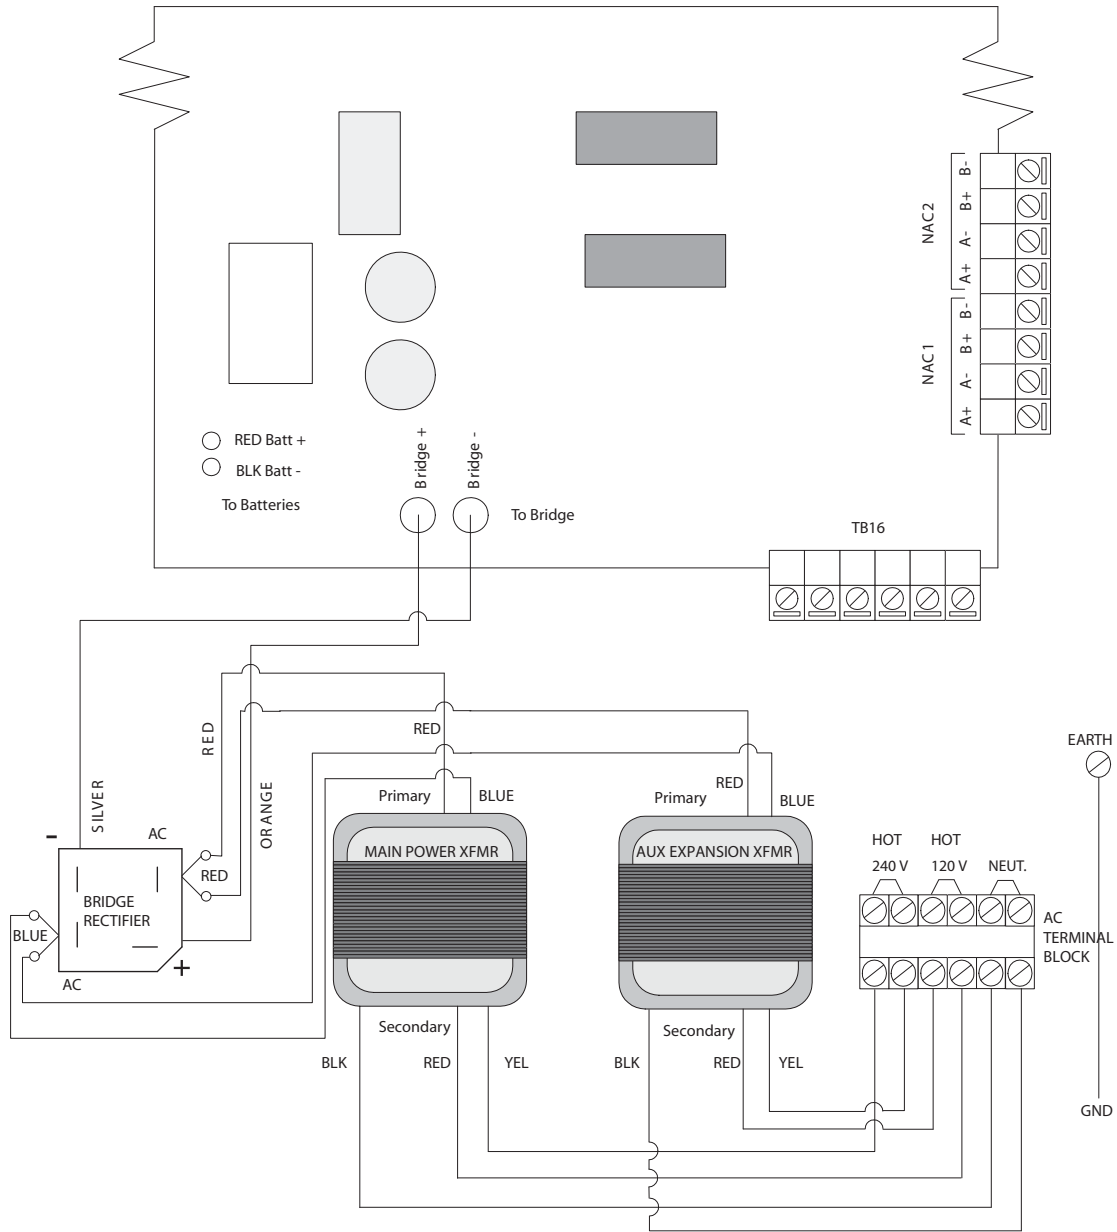


Figure 4 AC Power Wiring Diagram

The batteries forming the Battery Pack are wired in series. The Battery Pack attaches to the two wires coming from the Power Supply Board, the black wire to the black (negative) terminal and the red wire to the red (positive) terminal.

Note: Main and Auxiliary transformer are model number: MR-XPS

The internal batteries are not used when an external battery box is used. The wires for connecting the power supply board to the batteries are supplied with the panel if a battery box is ordered at the same time.



Warning: Never connect or disconnect the batteries while the AC power is off.

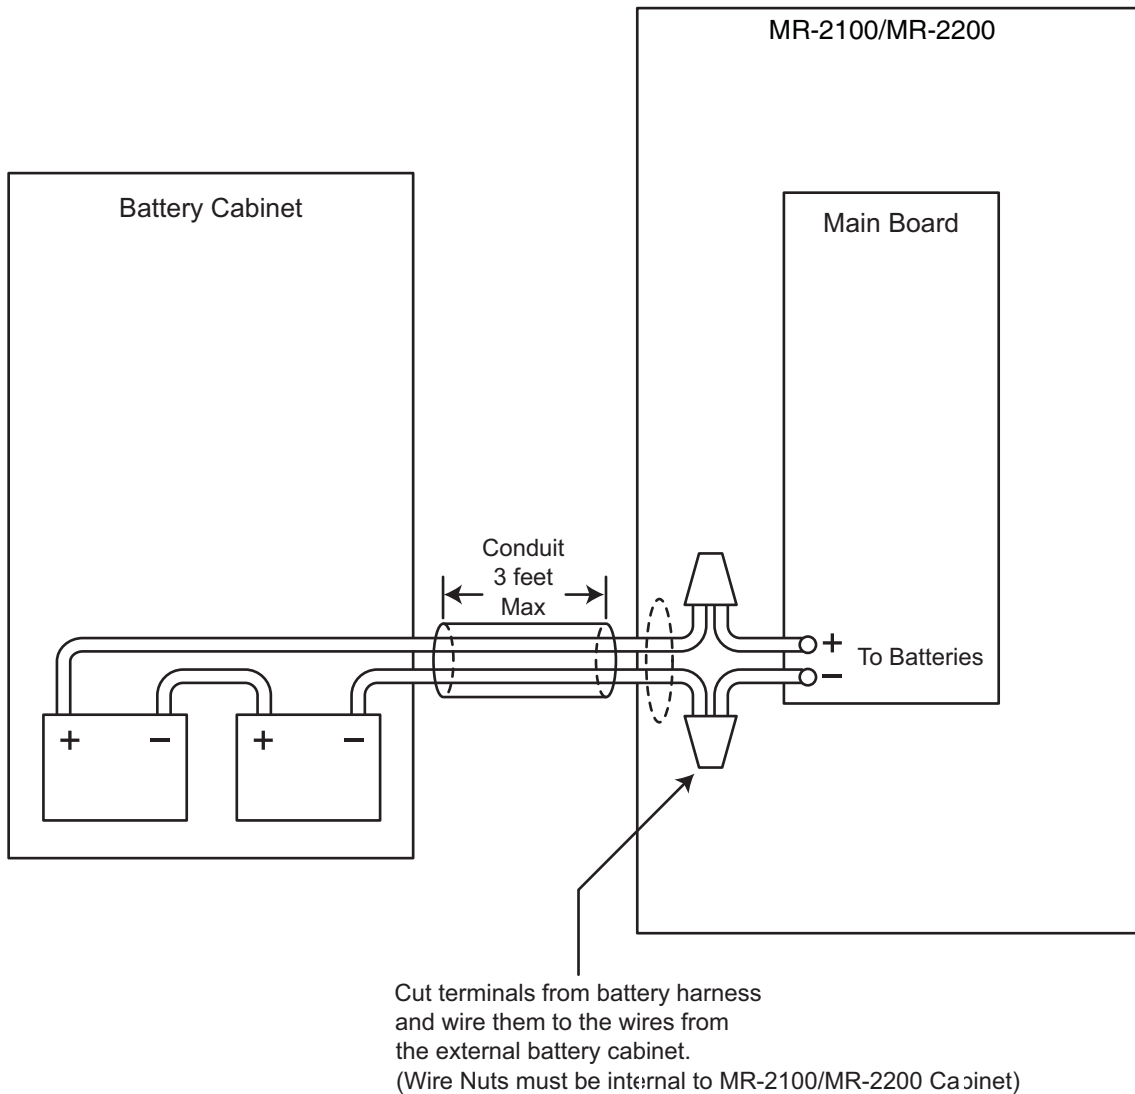


Figure 5 External Battery Cabinet Wiring

3.4.2 Addressable Circuit Connections

Addressable Class B (Style 4) Circuit

This is a 2-wire supervised Class B (Style 4) communications circuit using addressable devices. Wire capacitance and resistance will affect the allowable wire length. The recommended wiring is twisted unshielded pair. Consult Secutron's Applications Department

for specific requirements. Maximum wire lengths are up to 10,000 ft (see Table 9). Devices will be connected as indicated in the diagram below. Use only approved devices.

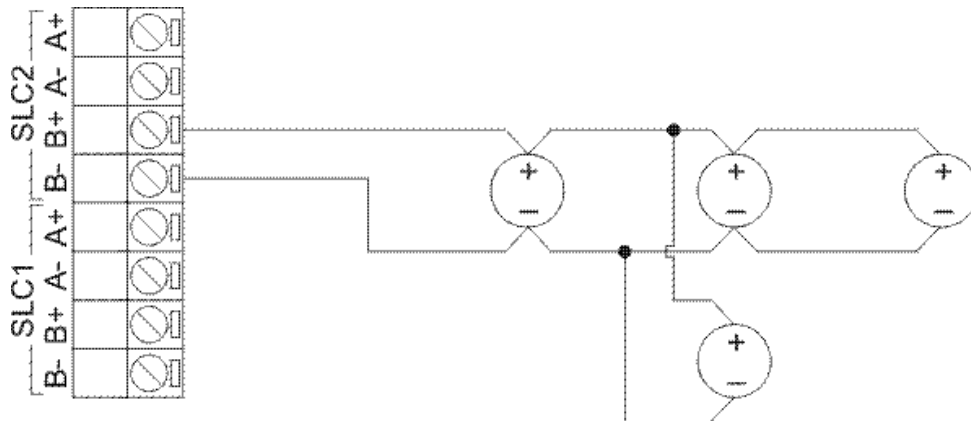


Figure 6 Class B Wiring

Note: T-taps may NOT be allowed by the authority having jurisdiction. Refer to NFPA 72 and ULC-S524.

Addressable Class A (Style 6) Circuit

This is a 4-wire supervised Class A (Style 6) communications circuit using addressable devices. The recommended wiring is twisted unshielded pair. Wire capacitance and resistance will affect the allowable wire length. Consult Secutron's Applications Department for specific requirements. Maximum wire lengths are up to 10,000 ft (see Table 9). Devices will be connected as indicated in the diagram below. Use only approved devices. Return wiring must be in a separate conduit.

Note: Install wiring in compliance with NFPA 72.

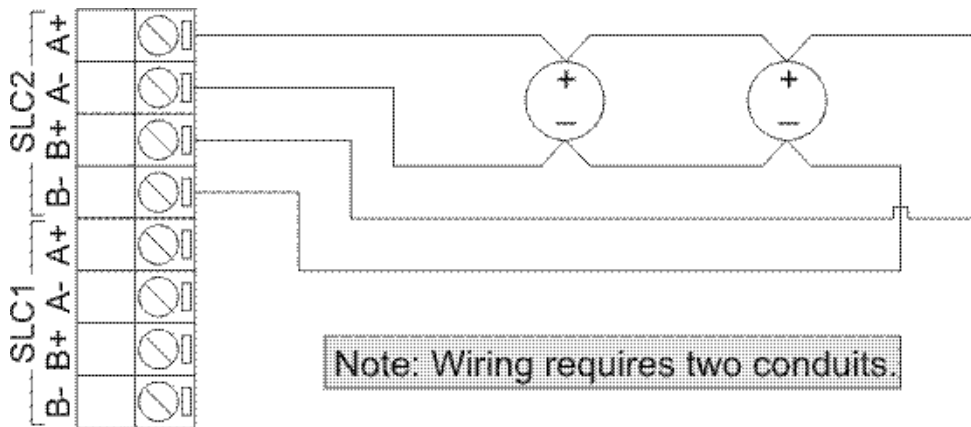


Figure 7 Class A Circuit

3.4.3 Notification Appliance Circuit Connections

Class B (Style Y) NAC

This is a 2-wire Class B (Style Y) supervised signaling (notification appliance) circuit. Devices and the 10k ohm end-of-line resistor will be connected as indicated in the figure below. Maximum wire lengths are shown in the Appendix. Use only approved devices.

Note: The appliances must incorporate a steering diode or other means of providing activation with the alarm state and no current with the supervision state.

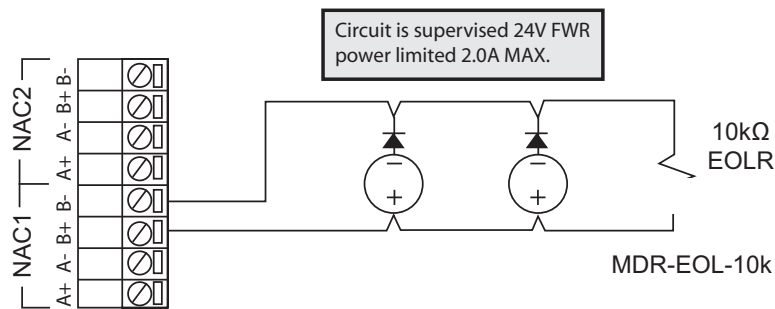


Figure 8 Class B NAC Wiring

Class A (Style Z) Bell Circuit

This is a 4-wire Style Z (Class A) supervised signaling (notification appliance) circuit. Devices will be connected as indicated in the diagram below. Maximum wire lengths are shown in the Appendix. Distances noted therein account for the total length of wire, from the panel to furthest device and back to the panel. Use only approved devices. Return wiring must be in a separate conduit. The EOL is on the board for Class A applications.

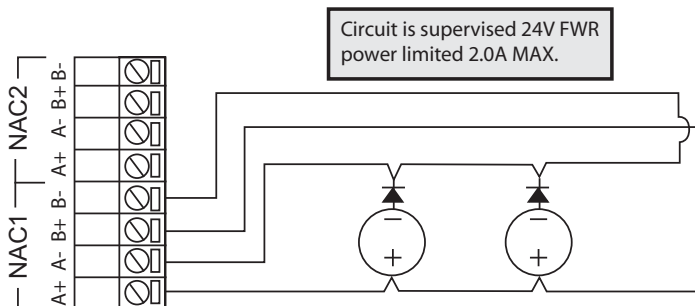


Figure 9 Class A NAC Wiring

3.4.4 Function Relay Circuit Connections

Form C programmable relays can only be connected to a Power Limited source limited to 2A @ 30VDC. They have a power factor of 0.35.



Figure 10 Function Relay Wiring

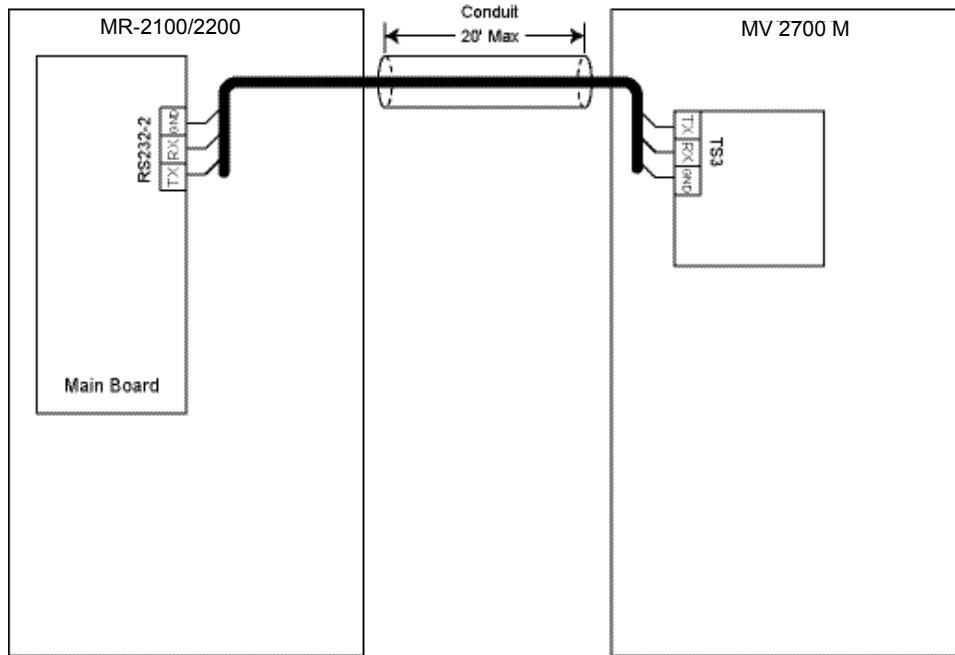


Figure 11 EVAX System Wiring

3.5 Maximum Wiring Length for Addressable Circuits

Table 9 Maximum Wiring Length for Addressable Circuits

Gauge	Belden No.	Maximum Distance
18	9571	975m (3200 ft)
16	9572	1400m (4600 ft)
14	9580	2435m (8000 ft)
12	9582	3045m (10000 ft)

Note: Distances noted in this table account for the total length of wire, from the panel to furthest device and back to the panel.

3.6 Maximum Wiring Length for Bell Circuits

Table 10 Maximum Wiring Length for Bell Circuits

Max R	Max I	12AWG		14AWG		16AWG		18AWG	
		m	ft	m	ft	m	ft	m	ft
8.00	0.25	768	2519	483	1584	304	996	191	627
4.00	0.5	384	1259	241	792	152	498	95	313
2.67	0.75	256	840	161	528	101	332	64	209
2.00	1	192	630	121	396	76	249	48	157
1.60	1.25	154	504	97	317	61	199	38	125
1.33	1.5	128	420	80	264	51	166	32	104
1.14	1.75	110	360	69	226	43	142	27	90
1.00	2	96	315	60	198	38	125	24	78

Note: Distances noted in this table account for the total length of wire, from the panel to furthest device and back to the panel.

4.0 Appendix A: Compatible Addressable Devices

Table 11 Secutron Compatible Addressable Devices

Model	Description	Typical Current Draw μ A
MRI-1251	Ionization type smoke detector	300
MRI-1251B	Ionization type smoke detector	300
MRI-2251	Photoelectric type smoke detector	300
MRI-2251B	Photoelectric type smoke detector	360
MRI-2251T	Photoelectric type smoke detector w/ thermal element	300
MRI-2251TB	Photoelectric type smoke detector w/ thermal element	360
MRI-2251TM	Acclimate Photo-Thermal Detector	300
MRI-2251TMB	Acclimate Photo-Thermal Detector	360
MRI-5251P	Thermal detector	200
MRI-5251B	Thermal detector	300
MRI-5251RP	Thermal detector w/ rate of rise	200
MRI-5251RB	Thermal detector w/ rate of rise	300
MRI-5251H	High Temperature Thermal detector	300
IM-10	10 Input Monitor Module	3.50 mA
CR-6	6 Relay Control Module	1.45 mA
SC-6	6 Supervised Control Module	2.25 mA
CZ-6	6 Zone Conventional Interface Module	2.00 mA
MRI-M500DM	Dual Input Monitor Module	300
MRI-M500M	Monitor module, Classes A/B initiating	300
MRI-M501M	Mini Monitor module, Class B initiating	300
MRI-M502M	Monitor Module for 2- wire smoke detectors Classes A/B initiating	200
MRI-M500S	Control module	300
MRI-M500R	Relay Module	300
MRI-M500X	Fault isolator module	450
MRI-992A*	Photo Detector	370
MRI-995A*	Thermal Detector	360
MRI-M900CA*	Control Module	450
MRI-M900MA*	Monitor Module	450
MRI-M902MA*	Interface Module	320
MRI-M900XA*	Isolator Module	150
MRI-M900KA*	Manual Station	380

* Note: ULC Listed Only

5.0 Appendix B: Battery Calculations & Compatible Batteries

5.1 Battery Calculation Worksheet

1. Enter the number of each installed module type in the 'Quantity' column next to the appropriate module description.
2. For each quantity entry, multiply the value in the 'Quantity' column by the value in the 'Standby' column and enter the value in the 'Total Standby' column.
3. For each quantity entry, multiply the value in the 'Quantity' column by the value in the 'Alarm' column and enter the value in the 'Total Alarm' column.
4. Add all the values in the 'Total Standby' column and put the answer in the 'Total Standby' box marked A.
5. Add all the values in the 'Total Alarm' column and put the answer in the 'Total Alarm' box marked B.
6. Enter the required standby time (hours) in box C, and the total alarm time (minutes) in the alarm time box D.
7. Substitute the values from boxes A through D in the battery calculation formula and the result is the recommended minimum battery capacity in amp-hours.

Worksheet found on following page.

Device Type		Devi e	Standby	Total	Alarm	Total
Device Type		Qty.	Current	Standby	Current	Alarm
MR-2200 main board w/ LCD display & primary power supply		1	x 110mA	110mA	175mA	175mA
Optional Internal Components	M22NTWN Network Card		x 50mA	_____ mA	50mA	50mA
	MRNC2 NAC output extender		x 10mA	_____ mA	65mA	_____ mA
	MRRL4 function relay o/p extender		x 5mA	_____ mA	17mA*	_____ mA
	MRLD8 8-zone LED annunciator		x 5mA	_____ mA	15mA**	_____ mA
	MRDL dual line DACT		x 40mA	40mA	65mA	65mA
	MRCTYB polarity reversal / municipal tie		x 20mA	20mA	_____ mA***	_____ mA***
Addressable Inputs	Smoke detectors		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
	Smoke detectors		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
	Thermal detectors		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
	Monitor modules		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
	Control modules		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
	Fault isolator modules		x _____ μ A	_____ μ A	_____ μ A	_____ μ A
See Appendix C for details on compatible addressable devices and their respective current						

Audible Notification Appliances (mA)	<input type="text"/>	x	<input type="text"/>	<input type="text"/>
Visual Notification Appliances (mA)	<input type="text"/>	x	<input type="text"/>	<input type="text"/>
AUX Power Load****			<input type="text"/>	<input type="text"/>
		TOTAL (A):	<input type="text"/>	TOTAL (B): <input type="text"/>

See next page for battery selection calculations.

Notes:

- * Each relay, when active, will draw 17mA. The alarm current will depend on how many relays are programmed to activate on alarm.
- ** Represents three (3) devices in alarm. For each additional device, add 5mA.
- *** Alarm current depends on module configuration. Please refer to MRCTYB installation Instructions for further detail.
- **** If MR-2644 and MR-D1010R are powered from AUX:
 MR-D1010R - 20mA Stby, 115mA Alarm (max)
 MR-2644 - 30mA Stby, 70mA Alarm (max)

Add above currents for each annunciator or fiber optic modem, (i.e.) if 2 are present then multiply above by 2.

5.2 Battery Selection Calculations

- From previous calculations, locate total Standby Current (**A**) and convert to **amperes**.
A = _____
 (Note: amperes = mA ÷ 1000; μ A ÷ 1,000,000; examples: 250 mA = 0.25 A; 1500 μ A = 0.0015 A)
- Identify Standby Time (**C**), in **hours**. **C** = _____ (typically 4, 24, 48, or 60 hr)
- From previous calculations, locate total Alarm Current (**B**) in **amperes**. **B** = _____
- Identify Alarm Time (**D**) in **minutes**. **D** = _____ (typically 5, 10, or 15 min)
- Using the values in Steps 1-4, perform an Initial Battery Calculation per the following:
 $(A \times C) + (0.0167 \times B \times D) =$ _____ Ah (Ah = ampere hours)
- Select a battery size LARGER than the number from the Initial Battery Calculation from the following list of SOTA batteries using the 20 Hour Rating value:

Part Number	20 Hour Rating	C/20 (Amps)	Part Number	20 Hour Rating	C/20 (Amps)
MR-12V4.5AH	4.5 Ah	0.225	MR-12V18AH	18 Ah	0.9
MR-12V7.2AH	7.2 Ah	0.36	MR-12V26AH	26 Ah	1.3
MR-12V12AH	12 Ah	0.6	MR-12V35AH	35 Ah	1.75

If either the Standby Current or the Alarm Current is greater than the C/20 current for the initial battery size selected, a discharge factor must be applied per the following table (use the 20 hr value for 24 hr standby):

Discharge Time	Discharge Factor	Discharge Time	Discharge Factor	Discharge Time	Discharge Factor	Discharge Time	Discharge Factor	
0.083 hr	5 min	3.85	2 hr	1.43	8 hr	1.10	14 hr	1.03
0.166 hr	10 min	2.78	3 hr	1.30	9 hr	1.09	16 hr	1.02
0.249 hr	15 min	2.27	4 hr	1.22	10 hr	1.08	18 hr	1.01
0.332 hr	20 min	2.08	5 hr	1.18	11 hr	1.06	20 hr	1.00
0.5 hr	30 min	1.96	6 hr	1.14	12 hr	1.05	48 hr	1.00
1 hr	60 min	1.67	7 hr	1.11	13 hr	1.04	60 hr	1.00

Standby Discharge Factor (**SDF**) = _____ Alarm Discharge Factor (**ADF**) = _____

- Minimum Required Battery Capacity Calculation. (to account for battery aging, a 1.17 multiplier is included)

Minimum battery capacity in Ah =

$$1.17 \times [(A \times C \times \text{SDF}) + (0.0167 \times B \times D \times \text{ADF})] = \underline{\hspace{2cm}}$$

- If the battery size initially selected is smaller than the result of step 9 above, repeat the calculations using a larger battery size.

6.0 Appendix C: Compatible Synchronized Notification Appliances

Manufacturer	Appliance Module	Candela	# of Appliances
Mircom	FHS-210-110	75	18
Secutron	MRA-24 WW	15	24
System Sensor	P12224MC	15	30
Wheelock	NS-24 MCW-FW	15	38
Amseco	SH24W-75110	75	18
Gentex	GEC3-24WW	15	24

7.0 Warranty & Warning Information

Warning Please Read Carefully

Note to End Users: This equipment is subject to terms and conditions of sale as follows:

Note to Installers

This warning contains vital information. As the only individual in contact with system users, it is your responsibility to bring each item in this warning to the attention of the users of this system. Failure to properly inform system end-users of the circumstances in which the system might fail may result in over-reliance upon the system. As a result, it is imperative that you properly inform each customer for whom you install the system of the possible forms of failure.

System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, such as fire or other types of emergencies where it may not provide protection. Alarm systems of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some reasons for system failure include:

•Inadequate Installation

A Fire Alarm system must be installed in accordance with all the applicable codes and standards in order to provide adequate protection. An inspection and approval of the initial installation, or, after any changes to the system, must be conducted by the Local Authority Having Jurisdiction. Such inspections ensure installation has been carried out properly.

•Power Failure

Control units, smoke detectors and many other connected devices require an adequate power supply for proper operation. If the system or any device connected to the system operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be fully charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a fire alarm system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

•Failure of Replaceable Batteries

Systems with wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

•Compromise of Radio Frequency (Wireless) Devices

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

•System Users

A user may not be able to operate a panic or emergency switch possibly due to permanent or temporary physical disability, inability to reach the device in time, or unfamiliarity with the correct operation. It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

•Automatic Alarm Initiating Devices

Smoke detectors, heat detectors and other alarm initiating devices that are a part of this system may not properly detect a fire condition or signal the control panel to alert occupants of a fire condition for a number of reasons, such as: the smoke detectors or heat detector may have been improperly installed or positioned; smoke or heat may not be able to reach the

alarm initiating device, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors; and, smoke and heat detectors may not detect smoke or heat from fires on another level of the residence or building.

• *Software*

Most MGC products contain software. With respect to those products, MGC does not warranty that the operation of the software will be uninterrupted or error-free or that the software will meet any other standard of performance, or that the functions or performance of the software will meet the user's requirements. MGC shall not be liable for any delays, breakdowns, interruptions, loss, destruction, alteration or other problems in the use of a product arising out of, or caused by, the software.

Every fire is different in the amount and rate at which smoke and heat are generated. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector or heat detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

• *Alarm Notification Appliances*

Alarm Notification Appliances such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If notification appliances are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible notification appliances may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible notification appliances, however loud, may not be heard by a hearing-impaired person.

• *Telephone Lines*

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also the telephone lines may be compromised by such things as criminal tampering, local construction, storms or earthquakes.

• *Insufficient Time*

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time enough to protect the occupants or their belongings.

• *Component Failure*

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

• *Inadequate Testing*

Most problems that would prevent an alarm system from operating as intended can be discovered by regular testing and maintenance. The complete system should be tested as required by national standards and the Local Authority Having Jurisdiction and immediately after a fire, storm, earthquake, accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

• *Security and Insurance*

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

IMPORTANT NOTE: End-users of the system must take care to ensure that the system, batteries, telephone lines, etc. are tested and examined on a regular basis to ensure the minimization of system failure.

Limited Warranty

Mircom Technologies Ltd., MGC Systems Corp. and MGC System International Ltd. together with their subsidiaries and affiliates (collectively, MGC) warrants the original purchaser that for a period of three years from the date of shipment, proprietary manufactured product shall be free of defects in materials and workmanship, under normal use. During the warranty period, MGC shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labor and materials. Non-proprietary, third party or OEM product shall be warranted in accordance with the warranty period of the manufacturer. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original owner must promptly notify MGC in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, MGC shall not be responsible for any customs fees, taxes, or VAT that may be due.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of MGC such as excessive voltage, mechanical shock or
- water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by MGC);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained. NOTE: Unless specific pre-authorization in writing is obtained from MGC management, no credits will be issued for custom fabricated products or parts or for complete fire alarm system. MGC will at its sole option, repair or replace parts under warranty. Advance replacements for such items must be purchased.

Note: MGC's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities. MGC neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, or to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Out of Warranty Repairs

MGC will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which MGC determines to be repairable will be repaired and returned. A set fee which MGC has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which MGC determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

The foregoing information is accurate as of the date of publishing and is subject to change or revision without prior notice at the sole discretion of the Company

WARNING: MGC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

NOTE: Under no circumstances shall MGC be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property.

MGC MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS GOODS DELIVERED, NOR IS THERE ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, EXCEPT FOR THE WARRANTY CONTAINED HEREIN.



© 2016 Secutron Inc.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form by any means electronic, magnetic, optical, chemical, manual, or otherwise without the prior consent of Secutron.

Canada
25 Interchange Way
Vaughan, ON L4K 5W3
Tel: (888) SECUTRON
(888) 732-8876
Fax: (905) 660-4113

U.S.A
4575 Witmer Industrial Estates
Niagara Falls, New York 14305
Tel: (888) SECUTRON
(888) 732-8876
Fax: (905) 660-4113