


INSTALLATION INSTRUCTIONS

DIFF-PRESSURE-KIT FOR MIX-4010-DUCT

1 PARTS LIST

DIFF-PRESSURE-KIT consists of two parts: a small rubber gasket and a larger rubber gasket.

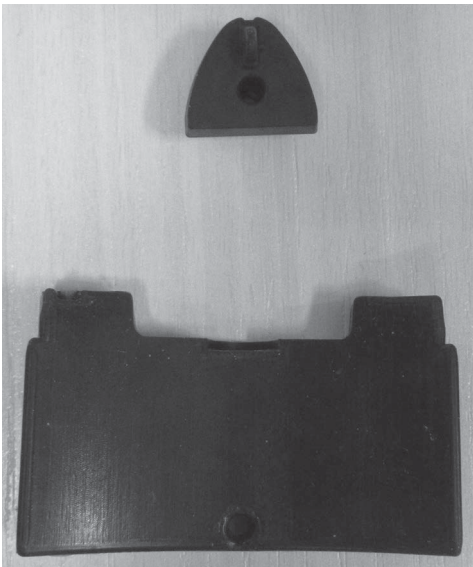


2 REMOVE THE PLASTIC COVER ON MIX-4010-DUCT

Remove the 4 screws and the cover



3 REMOVE THE DIVERTER

Remove the diverter

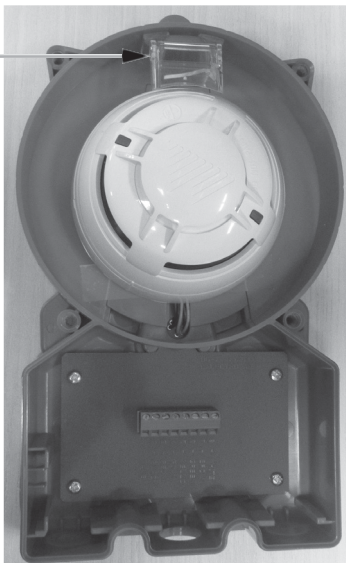


4 PLACE THE ADAPTER PARTS

Place the adapter parts with the large holes facing up



5 HOLD THE MANOMETER TUBES OVER THE ADAPTER HOLES WHILE YOU TAKE THE MEASUREMENT

Hold the manometer tubes over the adapter holes

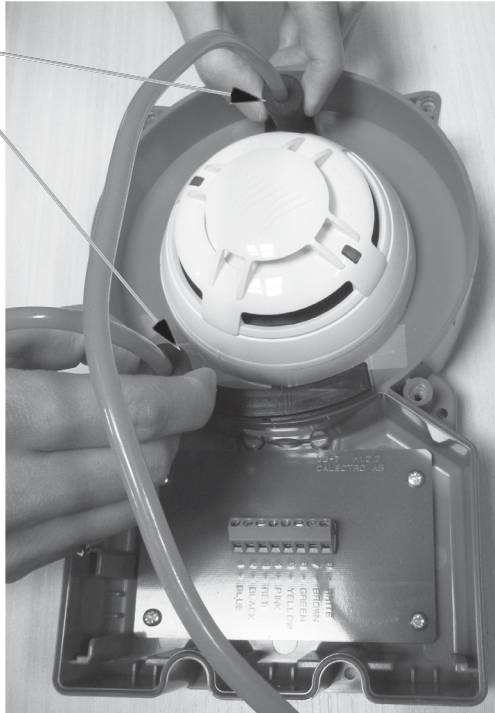

6 ONCE THE MEASUREMENTS ARE TAKEN, SET ASIDE THE MANOMETER, REMOVE BOTH RUBBER GASKETS, REINSTALL THE DIVERTER, AND CLOSE THE LID WITH THE SCREWS.