



25 Interchange way, Vaughan Ontario. L4K 5W3
 Phone: 905.660.4655; Fax: 905.660.4113
 Web: www.mircom.com

INSTALLATION AND MAINTENANCE INSTRUCTIONS MIX-4041 DUAL INPUT MINI MODULE

ABOUT THIS MANUAL


This manual is included as a quick reference for installation. For further information on the use of this device with a FACP, please refer to the panel's manual.

Note: This manual should be left with the owner/operator of this equipment.

MODULE DESCRIPTION

The MIX-4041 Dual Input module is designed to operate with a listed compatible intelligent fire system control panel. The module can support one Class A or 2 Class B inputs. When configured for Class A operation, the module provides an internal EOL resistor. When configured for Class B operation, the module can monitor two independent input circuits while using only one module address. The address of each module is set using the MIX-4090 programmer tool and up to 240 units may be installed on a single loop. The module has a panel controlled red LED indicator. The LED will flash during normal operation and will become steadily on when the device is in alarm condition.

FIGURE 1 MODULE FRONT:

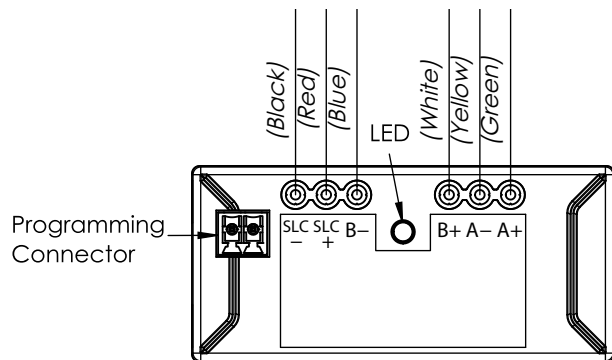

SPECIFICATIONS

Normal Operating Voltage:	15 to 30VDC
Alarm Current:	3.3mA
Standby Current:	2mA with two 22k EOL
EOL Resistance:	22k Ohms
Maximum Input Wiring Resistance:	150 Ohms total
Temperature Range:	32F to 120F (0c to 49C)
Humidity:	10% to 93% Non-condensing
Dimensions:	1 1/4" H x 2 3/4" W x 1/2" D
Connections:	6" pigtail wires
Accessories:	MIX-4090 Programmer MP-302 EOL on mounting plate

MOUNTING

Notice: You must disconnect power from the system before installing the module. If this unit is being installed in a system that is currently operational, it is necessary to inform the operator and the local authority that the system will be temporarily out of service.

The MIX-4041 input mini module must be installed inside an electrical box or approved enclosure. It cannot be installed free-standing.

WIRING:

Note: This device should be installed as per applicable requirements of the authorities having jurisdiction. This device shall be connected to power limited circuits only.

1. Install the module wiring as indicated by the job drawings and appropriate wiring diagrams (see Figure 2 for an example of wiring for a Class A connected device and Figure 3 for an example of Class B)
2. Use the programmer tool to set the address on the module as indicated on the job drawings.

FIGURE 2 SAMPLE CLASS A WIRING:

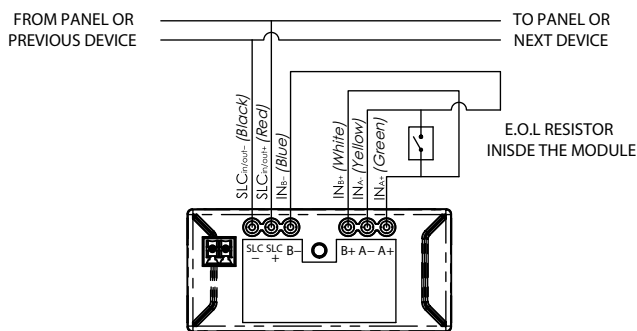


FIGURE 3 SAMPLE CLASS B WIRING:

